


# STANDALONE

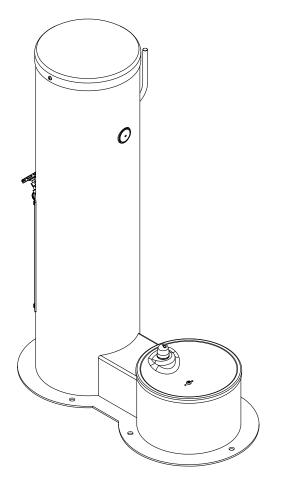

# WITH HOSE BIBB AND HOSE/LEASH HANGER

# Installation & Operation Manual

# **Outdoor Pet Drinking Fountain**

# **Table of Contents**

Pre-Installation Information	3
Physical Dimensions	4
Rough-In Dimensions	
Required Installation Supplies	8
Parts List and Exploded-view Drawings	9
Hardware Identification Chart	11
Installation Instructions	
Step 1: Fixture Installation	
Step 2: Adjusting Drinking Spout Flow	
Care and Maintenance	14
Troubleshooting	15
Detail Drawings	
Physical Dimensions	
Rough-in Dimensions	
Push Button Detail	
Foot Operated Push Button Detail	21



# (Page intentionally left blank)

# **Pre-Installation Information**

# **Installation notice!**

Check Rough-In location **PRIOR** to installation

Flush lines thoroughly **PRIOR** to hook-up

# When installing the **OUTDOOR PET DRINKING FOUNTAIN** system:

Before Step 1 of the installation instructions, ensure that rough-ins are in the correct location.

The valve assembly, including the spray head, **MUST NOT BE** connected until *after* all lines have been flushed to remove the small particles of debris that are inherent with new construction projects and all chemicals that are used in flushing are purged from the system.

Chemicals used in flushing plumbing systems can attack the internal components of the valve and spray head and severely damage them, so any flushing of the system must be followed by a full flushing with pure water to clear any harsh chemicals remaining in the system. Debris in the system if allowed to enter the valve assembly and spray head can cause poor performance or outright failure.

Again **DO NOT** attempt to connect the valve assembly and spray head until *after* all flushing is complete and pure water is the only media that will be passing through the system. Damage to the valve assembly or spray head caused by harsh chemicals or debris will not be covered by the manufacturer's warranty.

Any fittings provided by the installer should be made of plastic to electrically isolate the unit from the building or connected plumbing system.

The grounding of electric equipment such as telephones, computers, etc, to water lines is a common procedure. This grounding can cause electrical feedback into a water fountain or similar fixture, causing electrolysis, which results in a metallic taste or an increase in the metal content of the water. This can easily be avoided by using the proper materials as indicated.




Check Rough-In location **PRIOR** to installation

Flush lines thoroughly **PRIOR** to hook-up

# **Installation notice!**


# **Physical Dimensions- Standalone**

# Physical Dimensions- Pet Fountain w/ Hose Bibb and Hanger

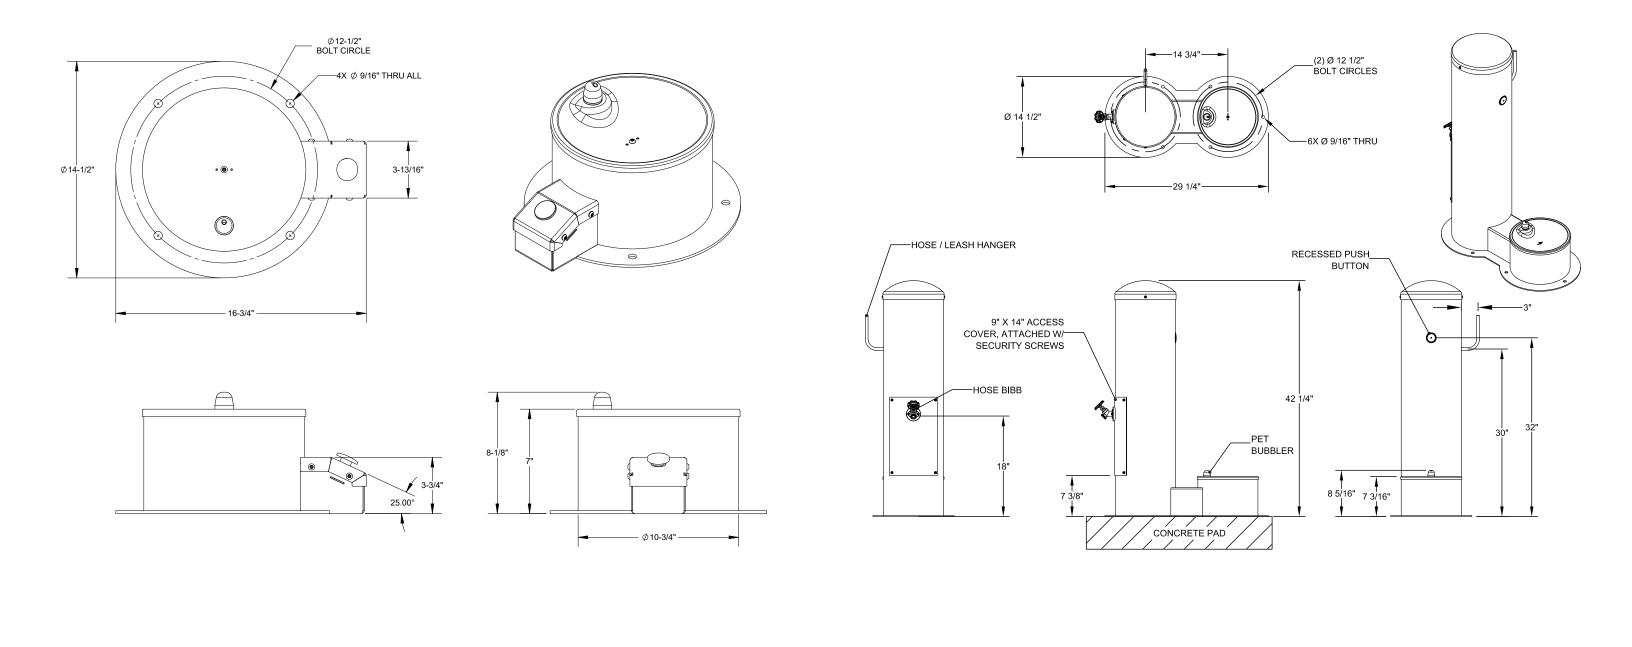

# **Rough-In Dimensions- Standalone**


# **Rough-In Dimensions- Pet Fountain** w/ Hose Bibb and Hanger

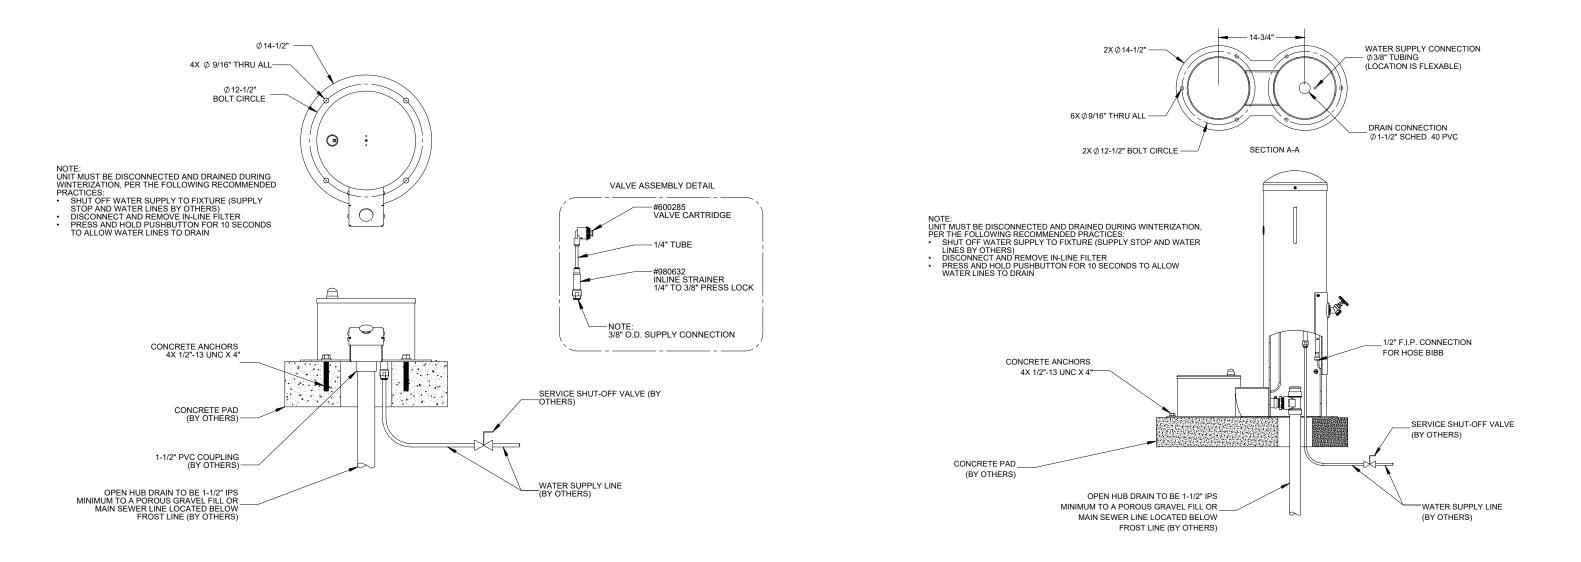

# **Required Installation Supplies**

- Proper mounting hardware
- Proper plastic fittings as indicated
- Hardware for waste oulet connections
- Gasket for waste outlet connection
- Shims (for installation if necessary)
- Supply piping
- Silicone caulk
- Plumbers putty




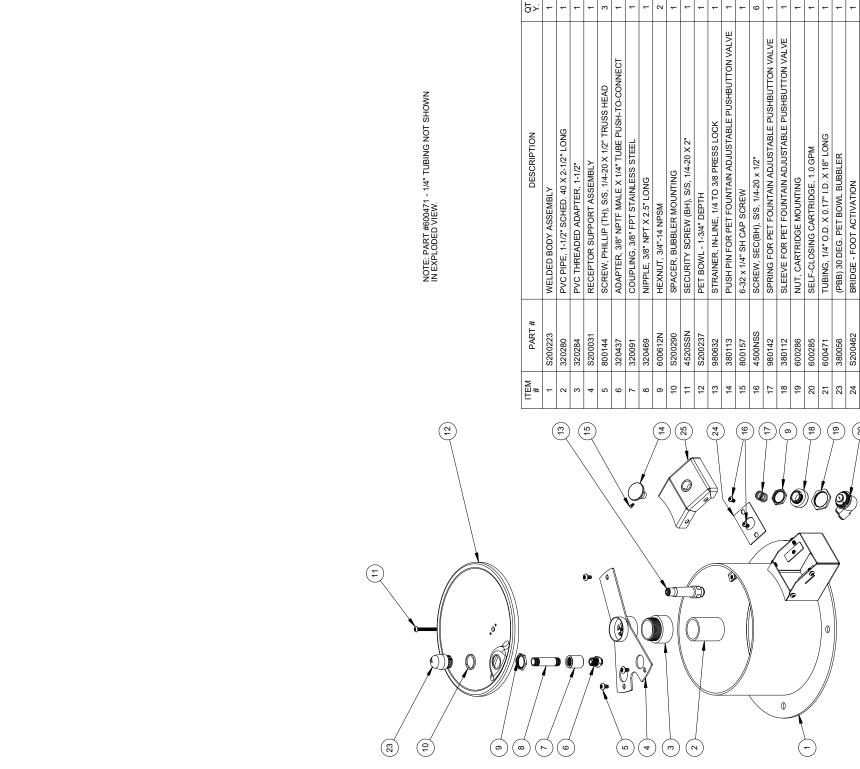

2	4	S200031	KECEPTOK SUPPORT ASSEMBLY	-
	5	800144	SCREW, PHILLIP (TH), S/S, 1/4-20 X 1/2" TRUSS HEAD	e
	9	320437	ADAPTER, 3/8" NPTF MALE X 1/4" TUBE PUSH-TO-CONNECT	-
	7	320091	COUPLING, 3/8" FPT STAINLESS STEEL	-
_	8	320469	NIPPLE, 3/8" NPT X 2.5" LONG	-
(14)	6	600612N	HEXNUT, 3/4"-14 NPSM	2
)(	10	S200290	SPACER, BUBBLER MOUNTING	-
25	11	4520SSN	SECURITY SCREW (BH), S/S, 1/4-20 X 2"	-
IJ,	12	S200237	PET BOWL - 1-3/4" DEPTH	٢
(24)	13	980632	STRAINER, IN-LINE, 1/4 TO 3/8 PRESS LOCK	-
)	14	380113	PUSH PIN FOR PET FOUNTAIN ADJUSTABLE PUSHBUTTON VALVE	۱
16	15	800157	6-32 x 1/4" SH CAP SCREW	-
)(	16	4500NSS	SCREW, SEC(BH), S/S, 1/4-20 × 1/2"	9
(12)	17	980142	SPRING FOR PET FOUNTAIN ADJUSTABLE PUSHBUTTON VALVE	-
6	18	380112	SLEEVE FOR PET FOUNTAIN ADJUSTABLE PUSHBUTTON VALVE	-
) (	19	600286	NUT, CARTRIDGE MOUNTING	-
(18)	20	600285	SELF-CLOSING CARTRIDGE, 1.0 GPM	٢
	21	600471	TUBING, 1/4" O.D. X 0.17" I.D. X 18" LONG	-
(19	23	380056	(PBB) 30 DEG. PET BOWL BUBBLER	٢
	24	S200462	BRIDGE - FOOT ACTIVATION	-
	25	S200470	COVER WELDMENT - REMOVABLE - FOOT ACTIVATION	٢


Installation & Operation Manual

# Parts List and Exploded-view Drawing-Standalone

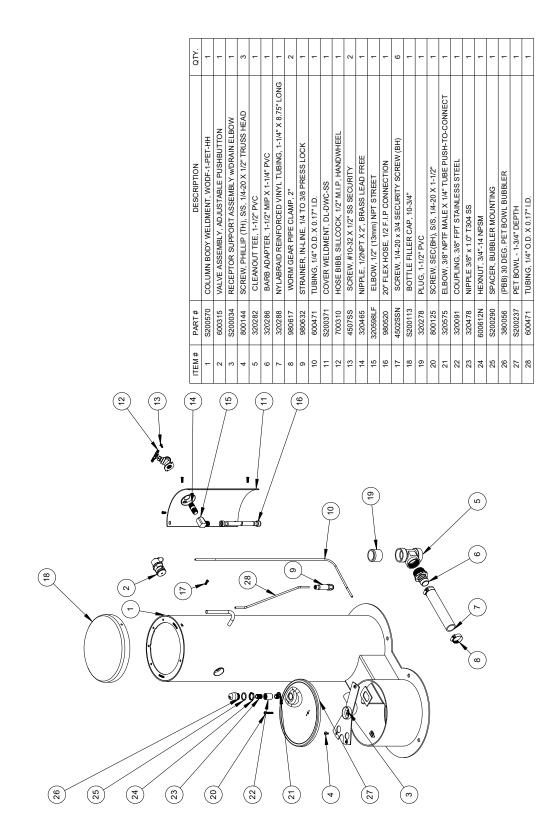



1/4-20 x 1/2" SECURITY SCREW 4500NSS

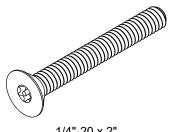

1/4"-20 x 2" FLAT HEAD SECURITY SCREW 4509SSN



T27 1/4" PINNED TORX BIT 800115

# **Hardware Identification Chart**



1/4"-20 x 1/2" PHILLIPS SCREW 800144



6-32 x 1/4" SOCKET HEAD CAP SCREW 800157



3/4" NPT BRASS LOCKNUT 600612N

# Installation Instructions

# Step 1: Fixture Installation

Note: the outdoor fountain is to be mounted on a flat, level surface (concrete or otherwise) with an adequate support structure.

Note: refer to Rough-In Dimensions for locating plumbing connections.

- Install service shut-off valve in water supply line (valve not furnished). 1.)
- Locate and install drinking fountain using 1/2"-13 x 4" stainless steel concrete anchors. 2.)
- 3.) As noted previously, flush the water supply line with clean drinking water before making final connections to the drinking fountain.
- Connect water supply line to inline strainer inside drinking fountain using 3/8" plastic tubing 4.) (extra tubing not furnished). Push tube straight into fitting on filter about 3/4" until it reaches a positive stop. Water supply connection must comply with local codes.
- 5.) Connect fountain drain line to drainage system. Drain is to be 1-1/2" IPS minimum to a porous gravel fill or main sewer line located below frost line. Installer to provide waste trap downstream of drain connection. Drain and waste trap must comply with local codes.
- 6.) Turn on water supply and check both the water supply lines and drain lines for leaks.

# Installation Instructions (cont.)

# Step 2A: Adjusting Drinking Fountain Flow

- 1.) Insert a standard flat-head screwdriver into adjustment opening on face of pushbutton, as shown.
- 2.) Rotate screwdriver to adjust until desired flow is achieved:


Rotate clockwise to increase flow. Rotate counterclockwise to decrease flow.

# Step 2B: Foot Operated Adjusting Flow


- 1.) Remove the foot plate cover, pushbutton and spring from the base of the fixture.
- 2.) Using a standard flat-head screwdriver, adjust as shown until desired flow is achieved:

Rotate clockwise to increase flow. Rotate counterclockwise to decrease flow.

3.) Replace the foot plate cover, pushbutton and spring from onto base of the fixture.

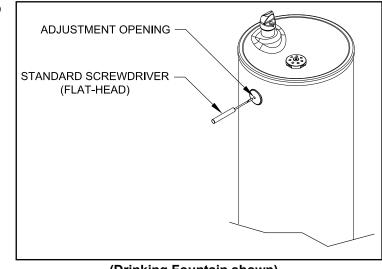

(Drinking Fountain shown)

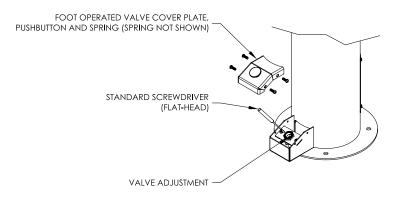

# Care and Maintenance

# Unit Care

Outdoor Drinking Fountains are not freeze resistant. The unit should be disconnected or shut off from the water supply and drained during the colder months. For more information, refer to the rough-in detail.

In order to ensure adequate flow and cleanliness of water, the inlne strainer in the supply line should be cleaned or replaced regularly. New inline strainers can be ordered using Part No. 980632.

# **Stainless Steel Care**

Stainless Steels are basically alloys of iron and chromium and are corrosion resistant. Stainless steel has a bright surface that is easy to clean and is free from oxides. Therefore, cleaning of stainless steel is relatively simple and easy if done on a regular basis.

Frequency of cleaning should depend on the rate at which the fixture becomes dirty. Remember that fresh (soft) deposits of all kinds are relatively easy to remove, while removing older (hard) deposits are much more difficult. Establish a cleaning SCHEDULE.

Routine cleaning should involve ordinary soap or detergent and water, applied with a sponge, brush or cloth. Baking soda, borax or any of several non-abrasive commercial cleansing agents can help hasten the cleaning action. After scrubbing, rinse THOROUGHLY and wipe dry.

DO NOT use common steel wool, scouring pads, scrapers, wire brushes, files or other steel tools to clean stainless steel. Such items will scratch the surface or leave small particles of iron imbedded in the surface, which will eventually rust and stain the surface - even appearing as if the stainless itself was rusting.


Certain chemical compounds, if used on stainless steel, can give the appearance of rust and if allowed to stand for long periods of time, can pit the surface of even stainless. Products containing hydrochloric acid, muriatic acid or potassium hydrochloride can ruin the surface.


# **Troubleshooting**

- I. Insufficient Flow
  - A. Ensure the service shut-off valve is fully open (provided by installer).
  - B. Ensure water supply is within the normal operating range of 40-60 psi.
    - 1. If pressure is too low, flow can be drastically reduced.
    - 2. If pressure is too high, the strainer and/or valve may have been damaged.
  - 3. The unit is rated for a maximum range of 30-105 psi.
  - C. Inspect the unit's valve for damage, and replace if necessary.
- II. Unit has problems draining
  - A. Remove any debris from the drain.
  - B. Remove any debris from the PVC pipe and fittings.
  - C. Check and clear the waste trap (provided by installer).


D. Inspect the inline strainer for damage and/or clogging, and clean or replace as necessary. E. Check all fittings and tubing for damage and leaks. Replace components as necessary.



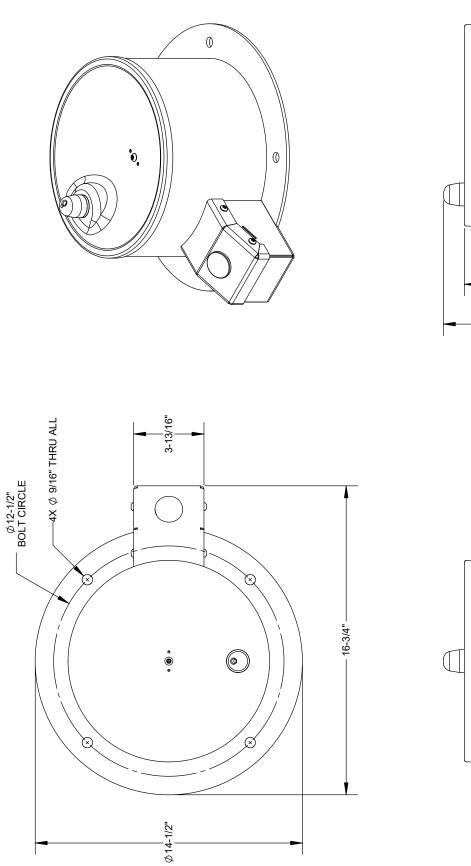


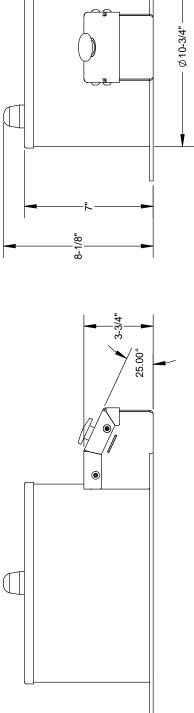



# Pet Fountain with Hose Hanger and Hose Bibb General Dimensions DRAWING:

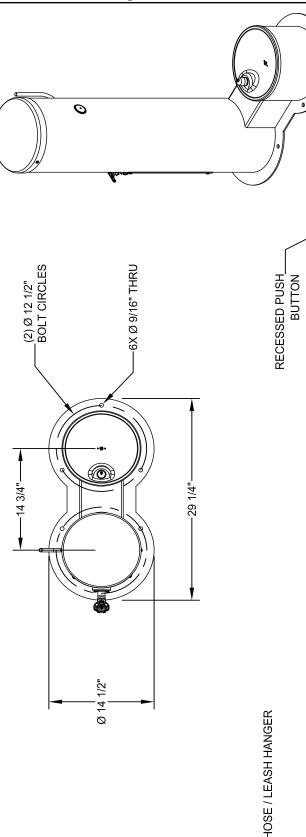


Page 16

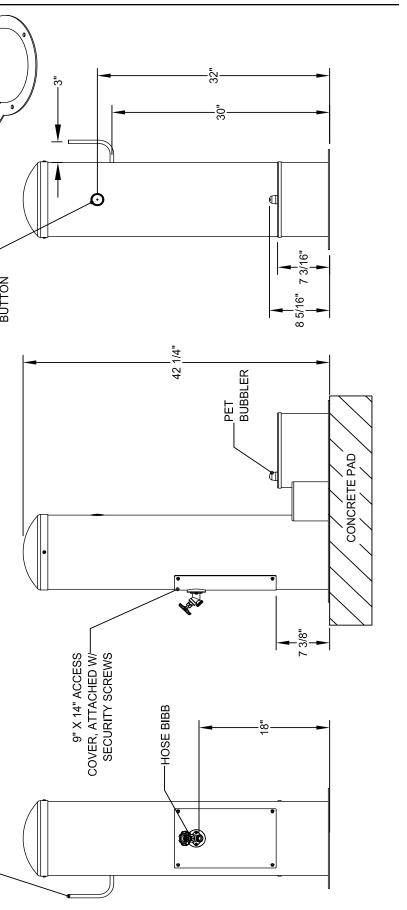

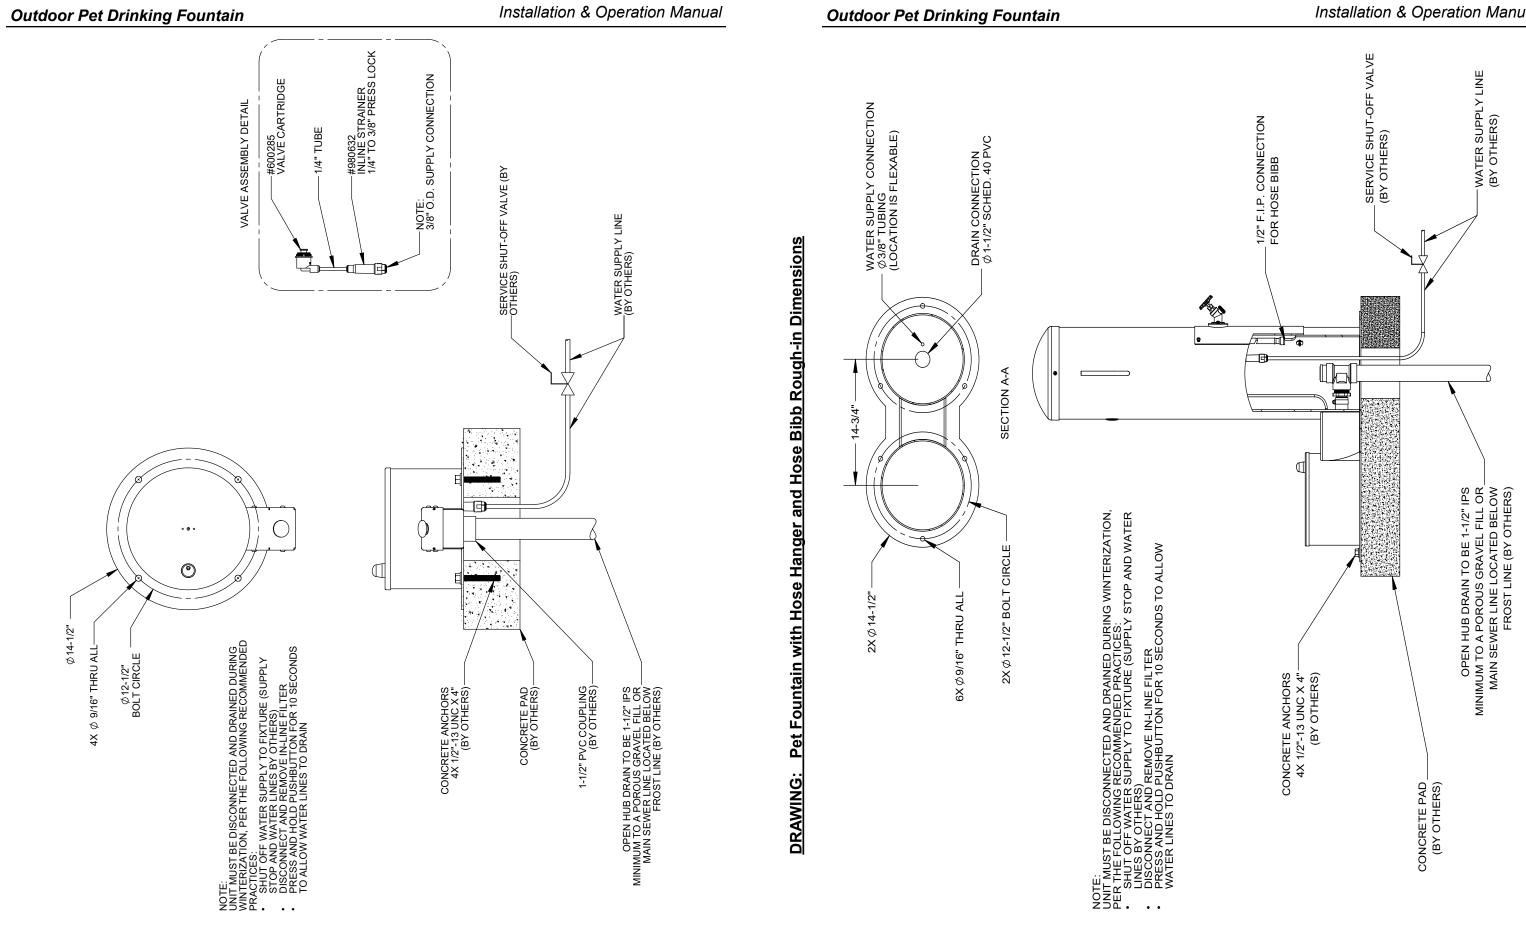

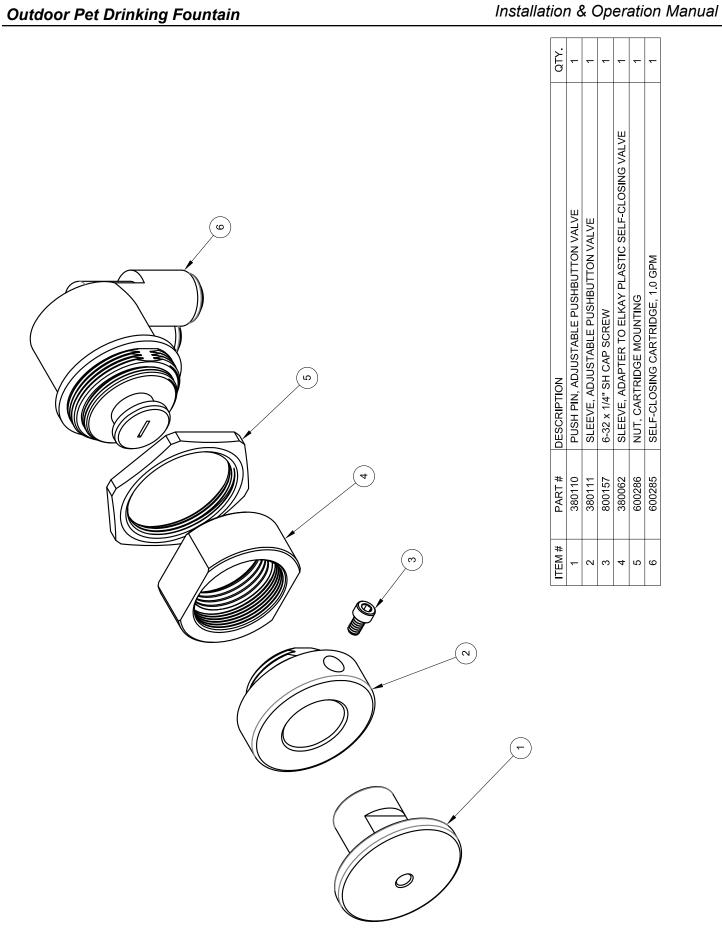



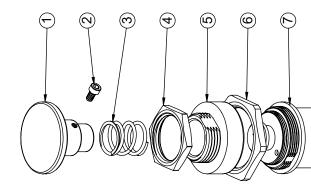

			i
ITEM # PART #	RT #	DESCRIPTION	QTY.
380113	113	PUSH PIN FOR PET FOUNTAIN ADJUSTABLE PUSHBUTTON VALVE	1
800	800157	6-32 x 1/4" SH CAP SCREW	1
980	980142	SPRING FOR PET FOUNTAIN ADJUSTABLE PUSHBUTTON VALVE	1
900	600612N	HEXNUT, 3/4"-14 NPSM	1
38(	380112	SLEEVE FOR PET FOUNTAIN ADJUSTABLE PUSHBUTTON VALVE	1
00	600286	NUT, CARTRIDGE MOUNTING	1
00	600285	SELF-CLOSING CARTRIDGE, 1.0 GPM	1

