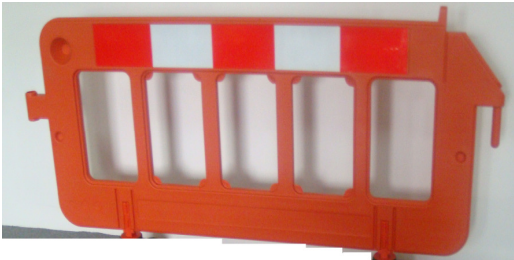



Installation Instructions

Plastic Crowd Control Barriers

Before assembly, be sure that all components are included.

Part List	Description	Qty.	Drawings
A	Panel	1	
B	Rubber Foot	2	
C	Connectors	2	

Tools required: None

- We suggest you thoroughly read and follow this simple step-by-step assembly instruction. Portions of the assembly may be easier with two people.
- Do not discard any of the packaging until you have checked that you have all the parts.
- Set out all parts on a clear, flat and level surface.

Assembly Steps:

Step # 1: Place solid end of one Connector (C) over the hole in the Rubber Foot (B). Attach one Connector (C) to one Rubber Foot (B). Repeat.



Step #2: Align Panel (A) over the two the pronged ends of the Connectors (C). Carefully push down on Panel (A) and slide the Connector (C) prongs into the panel on each side.

