

REQUIRED TOOLS:

- -(1) SCREW GUN
- -(1) 7/16" SOCKET
- -(1) 8" 10" POST HOLE DIGGER
- -(1) LEVEL

BEFORE INSTALLING BENCH, PLEASE CHECK LOCAL CODES TO ENSURE PROPER INSTALLATION. THESE INSTRUCTIONS ARE A GENERAL GUIDELINE ON HOW TO INSTALL A BENCH. IF UNSURE ON HOW TO INSTALL, PLEASE CONTACT A PROFESSIONAL.

REQUIRED MATERIALS:

- -READY-TO-MIX CONCRETE
- -LOOSE GRAVEL
- -WIRE & BRACING MATERIAL

INCLUDED HARDWARE & REQUIRED TOOLS FOR ASSEMBLY

PRE-DRILLED PILOT HOLE—


F0001-(BACK VIEW) F0002--SEAT SLATS 1/8" **SPACING**

KEEP SPACING BETWEEN BOARDS APPROXIMATELY 1/8".

REPEAT STEPS FOR REMAINING SEAT SLATS


2

USING POST HOLE DIGGER, DIG FOUR HOLES AS SHOWN BELOW. THEN, FILL IN EACH HOLE WITH APPROXIMATELY 4" OF LOOSE GRAVEL.

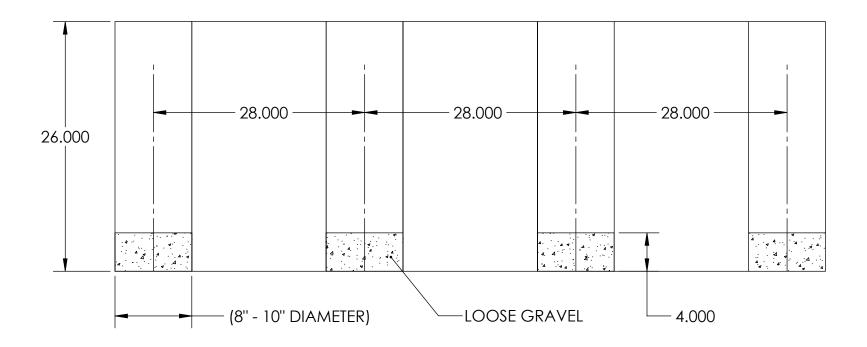

BEFORE INSTALLING BENCH, PLEASE CHECK LOCAL CODES TO ENSURE PROPER INSTALLATION. THESE INSTRUCTIONS ARE A GENERAL GUIDELINE ON HOW TO INSTALL A BENCH. IF UNSURE ON HOW TO INSTALL, PLEASE CONTACT A PROFESSIONAL.

CAREFULLY, PLACE THE BENCH INTO HOLES. CENTER EACH POST IN EACH HOLE AND LEVEL BENCH. ALSO, BE SURE TO CHECK SEAT HEIGHT TO ENSURE COMFORTABLE SEATING. SECURE PLACEMENT OF BENCH WITH BRACING MATERIALS AND FILL IN HOLES WITH READY-TO-MIX CONCRETE. ALLOW TO DRY AND REMOVE BRACING MATERIALS.

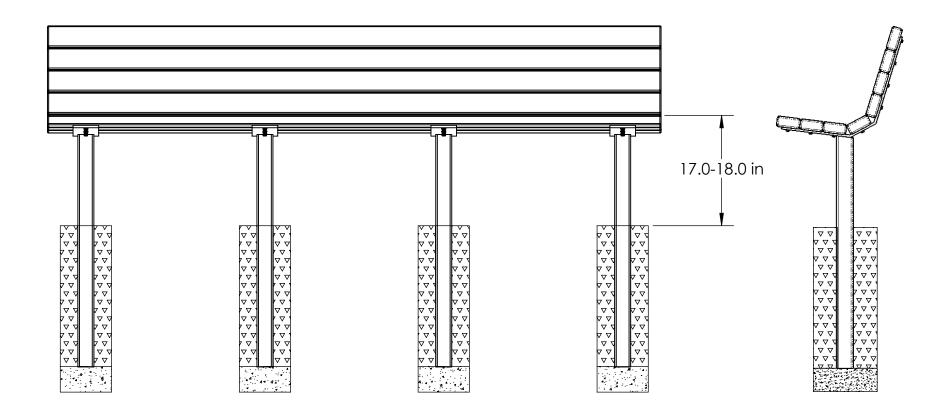

BEFORE INSTALLING BENCH, PLEASE CHECK LOCAL CODES TO ENSURE PROPER INSTALLATION. THESE INSTRUCTIONS ARE A GENERAL GUIDELINE ON HOW TO INSTALL A BENCH. IF UNSURE ON HOW TO INSTALL, PLEASE CONTACT A PROFESSIONAL.

BENCH SPECIFICATIONS BC1335 TOP 19.519 3.500 - 95.875 -**-** 13.846 **-**1.500 30.976 17.000 25.455 4.750 25.460 25.460 →→ 4.750 GROUND **CONSTRUCTION MATERIALS:** SET POSTS 24 TO 26 INCHES INTO GROUND

Recycled Plastic, Powder Coated Steel HARDWARE:

Stainless Steel

ALL DIMENSIONS SHOWN IN INCHES