

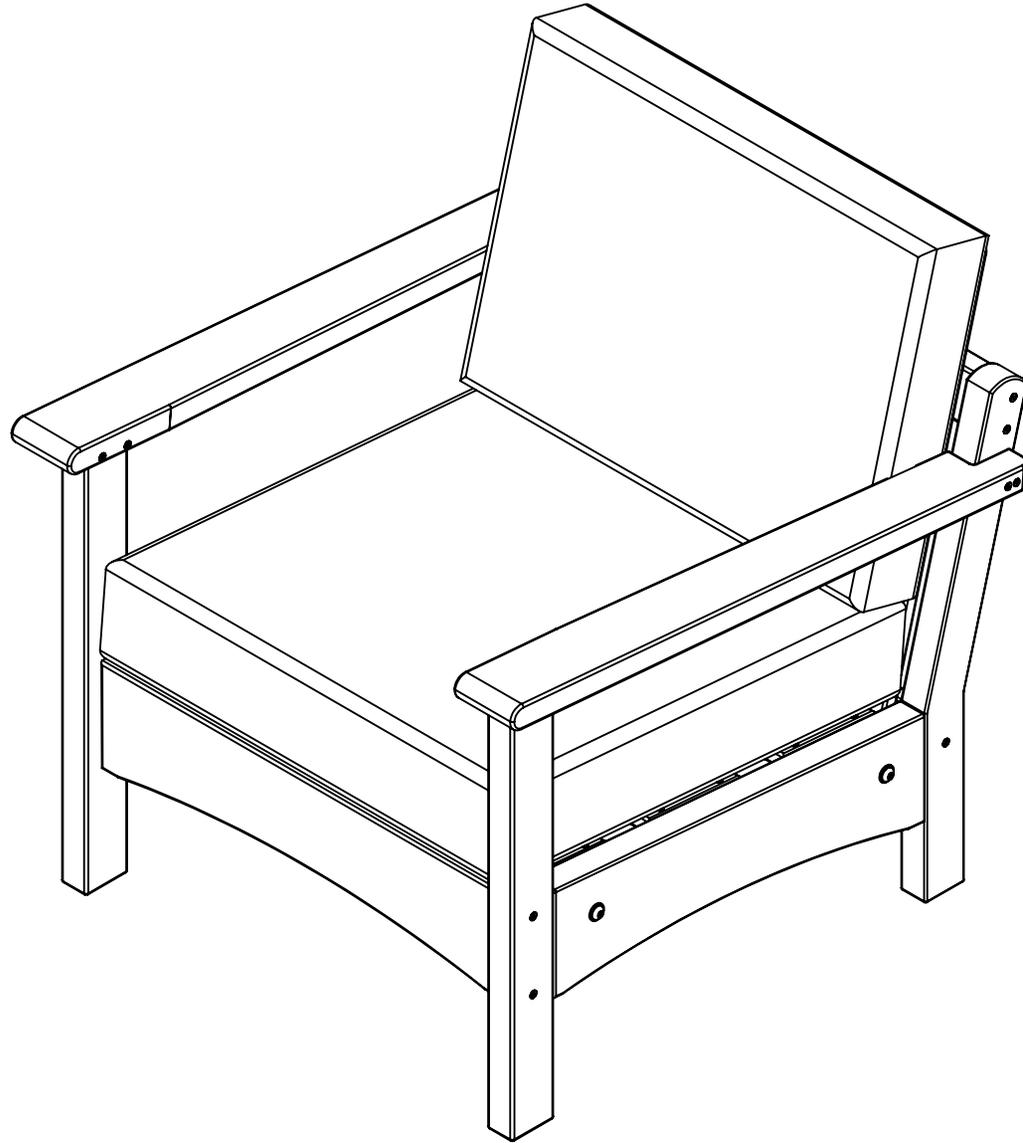
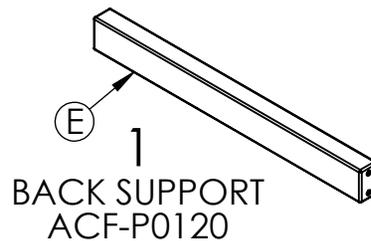
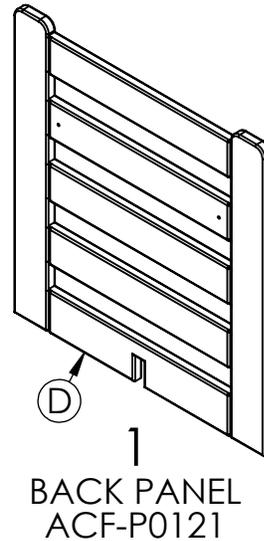
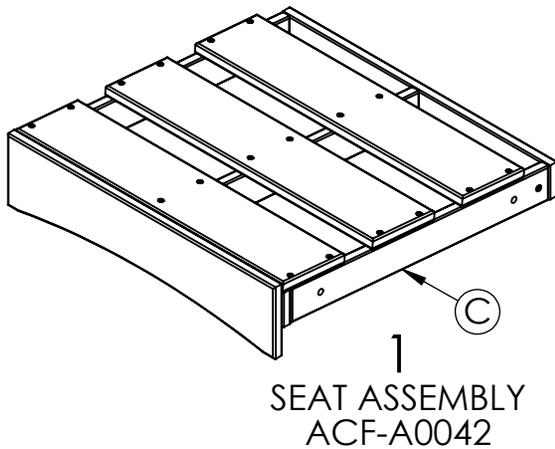


# CHAIR INSTRUCTIONS

CF2000 REV# 1  
7-10-2018

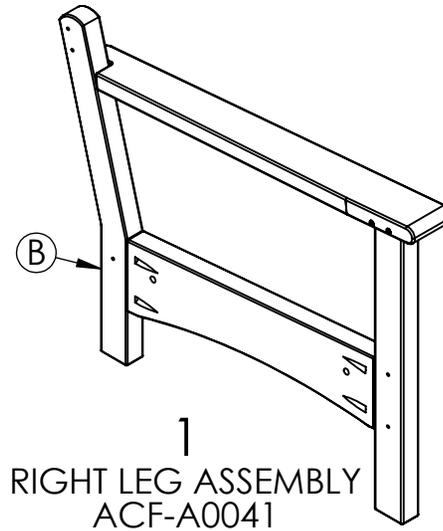

# CHAIR INSTRUCTIONS

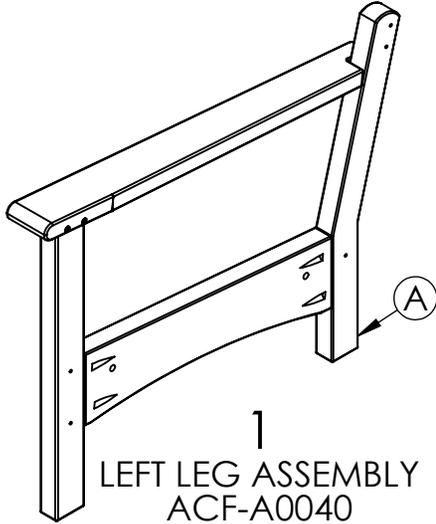


## REQUIRED TOOLS (NOT INCLUDED)

- POWER DRILL
- #2 SQUARE DRIVE
- 7/32 ALLEN WRENCH
- 9/16 WRENCH


## HARDWARE




4  
3/8 x 3 BUTTON HEAD SOCKET  
SCBH031C300188

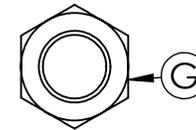


4  
3/8 HEX NUT  
NNYL037CNUT188

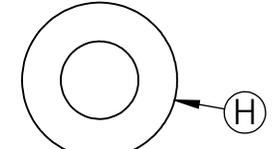


8  
3/8 WASHER  
WUSS037WAS188



10  
#10 x 2.5 FLAT HEAD SCREW  
DSSF010C250188



2  
#8 x 1.625 FLAT HEAD SCREW  
DSSF008C162188



2  
#12 x 2.0 FLAT HEAD SCREW  
DSSF012C200188



**HARDWARE &  
TOOLS REQUIRED  
FOR ASSEMBLY**

**2/5**

# CHAIR INSTRUCTIONS

## STEP 1


COUNTERSINK HOLES FACING TO THE FRONT

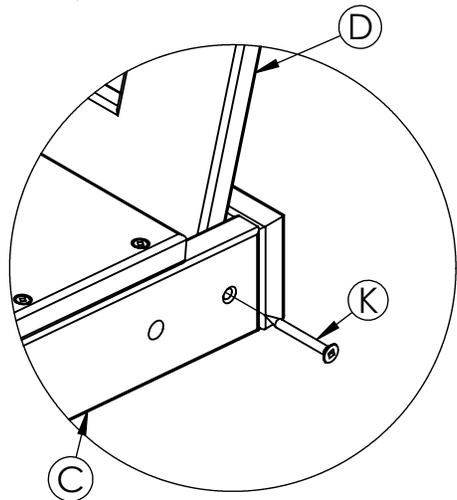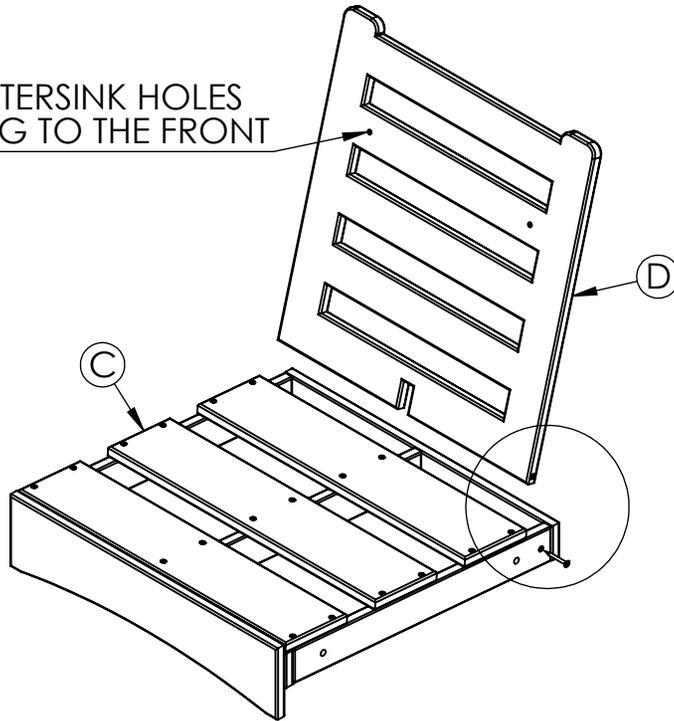

REPEAT FOR OTHER SIDE

## STEP 2

COUNTERSINK HOLES FACING OUT

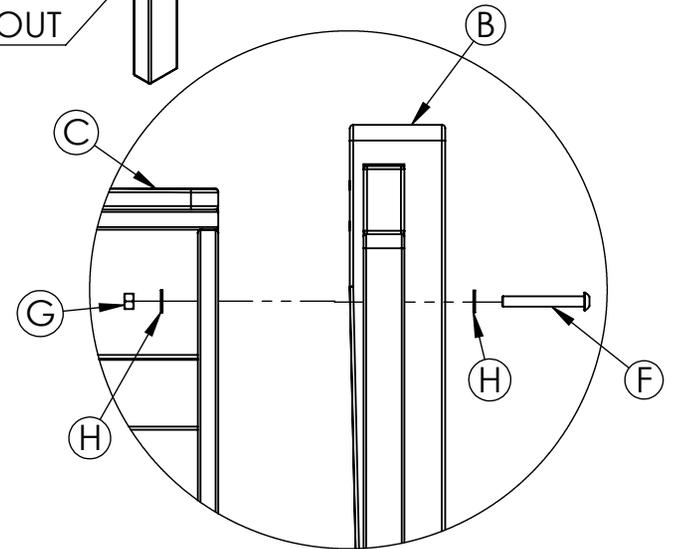


REPEAT FOR OTHER LEG

ASSEMBLY

3/5


# CHAIR INSTRUCTIONS

## STEP 3

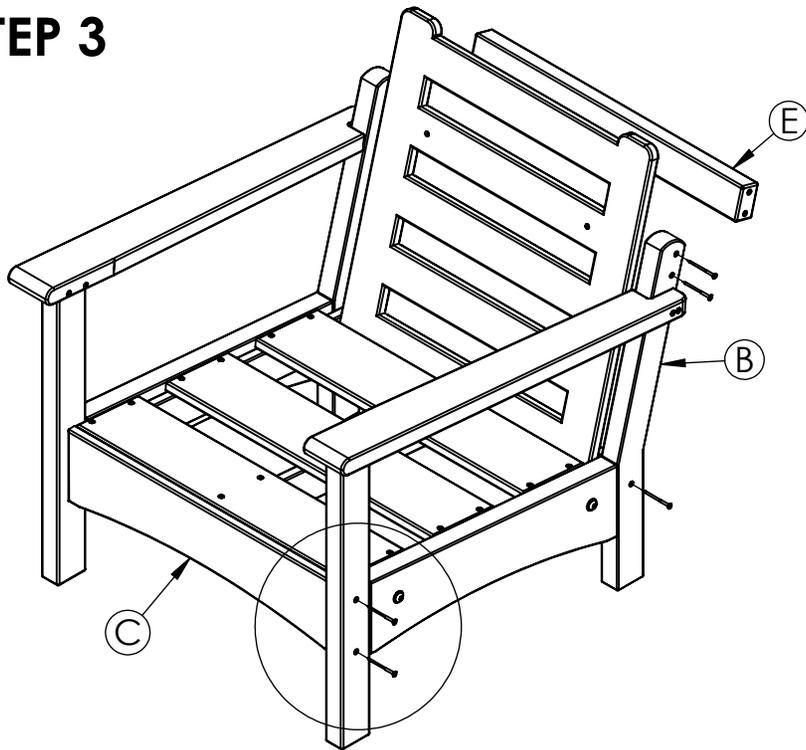

**REPEAT FOR ALL COUNTERSINK HOLES IN BOTH LEGS**

## STEP 4

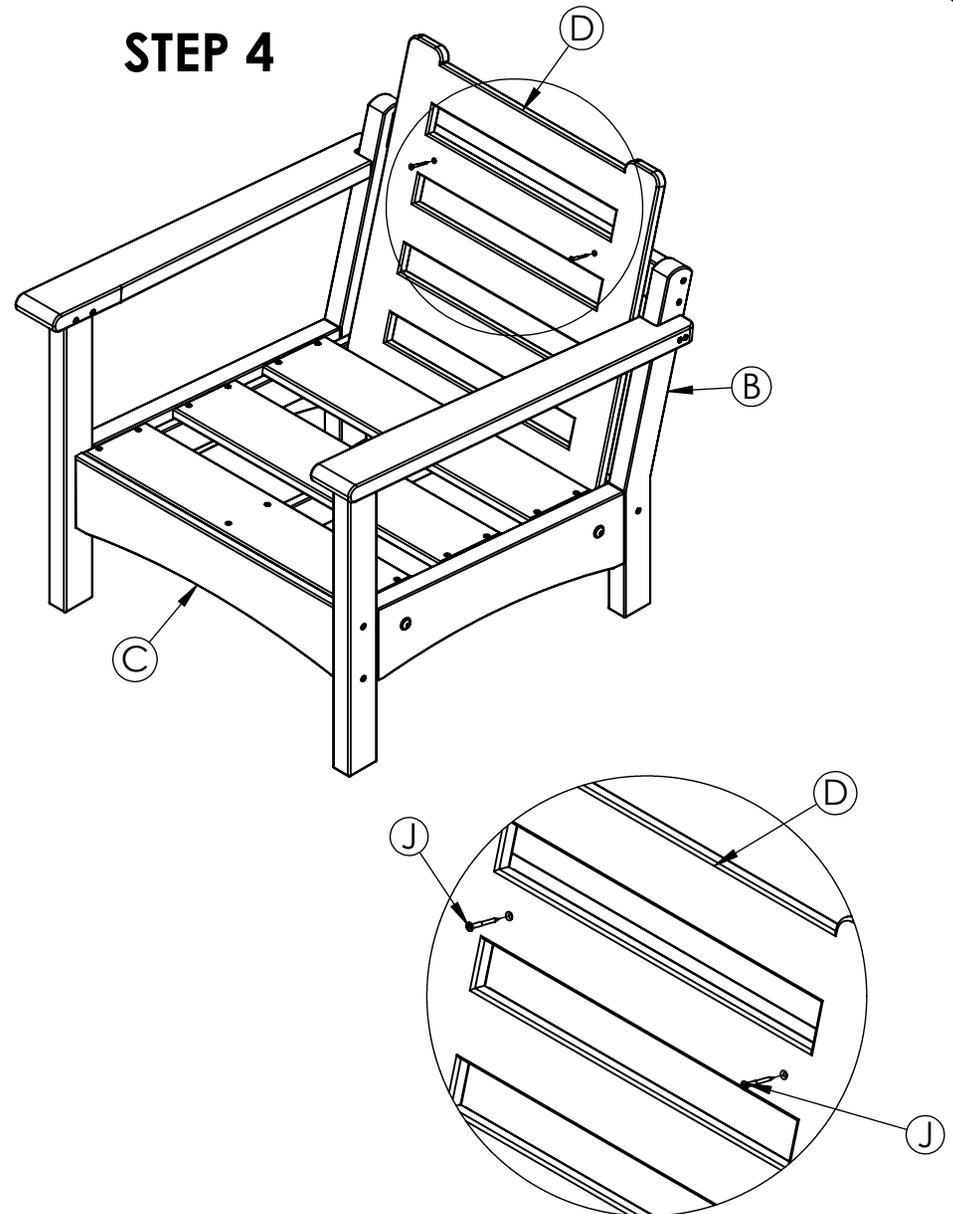





**ATTACH CUSHION WITH STRAPS TO SEAT AND BACK**

**ASSEMBLY**

**4/5**

# CHAIR SPECIFICATIONS

CF2000 REV# 1  
7-10-2018

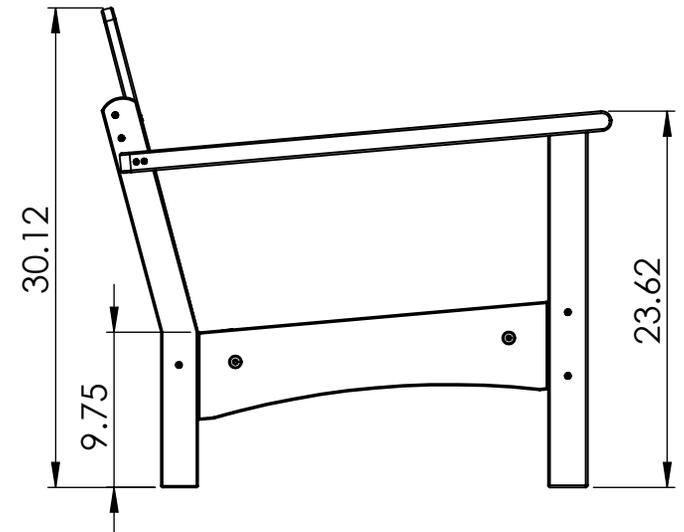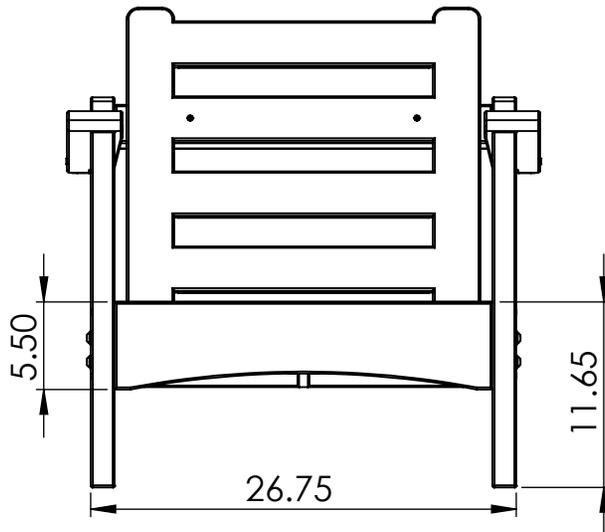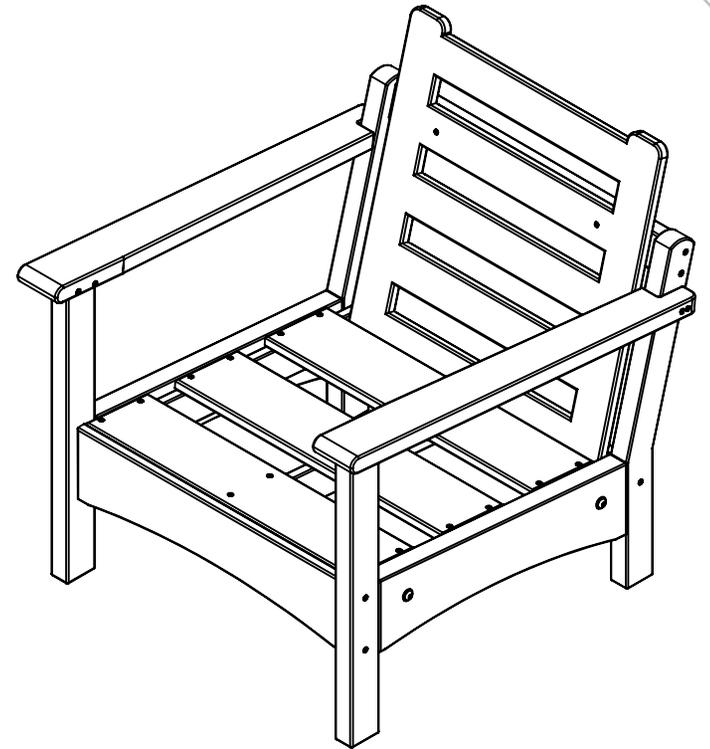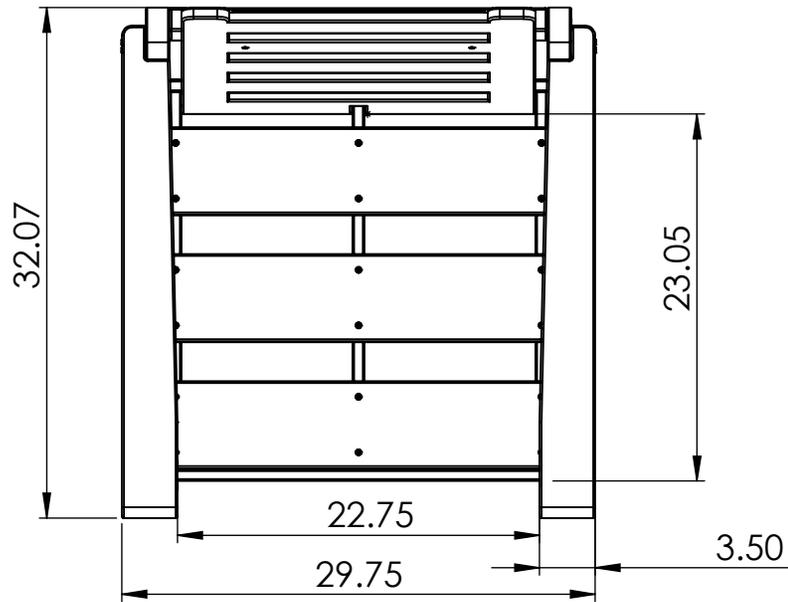

**CONSTRUCTION MATERIALS:**  
Recycled Plastic  
**HARDWARE:**  
Stainless Steel

ALL DIMENSIONS SHOWN IN INCHES