



CHAIR BACK ASSEMBLY X1 ABC-A0001




CHAIR FRAME ASSEMBLY X1 ABC-A0007

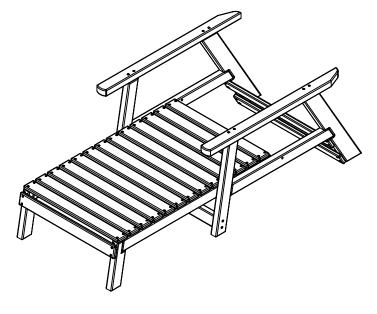








3/8" FLAT WASHER X4

3/8" HEX HEAD NUT X2


3/8" X 3.5" HEX HEAD BOLT X2

-9/16" SOCKET -SCREW GUN/DRILL



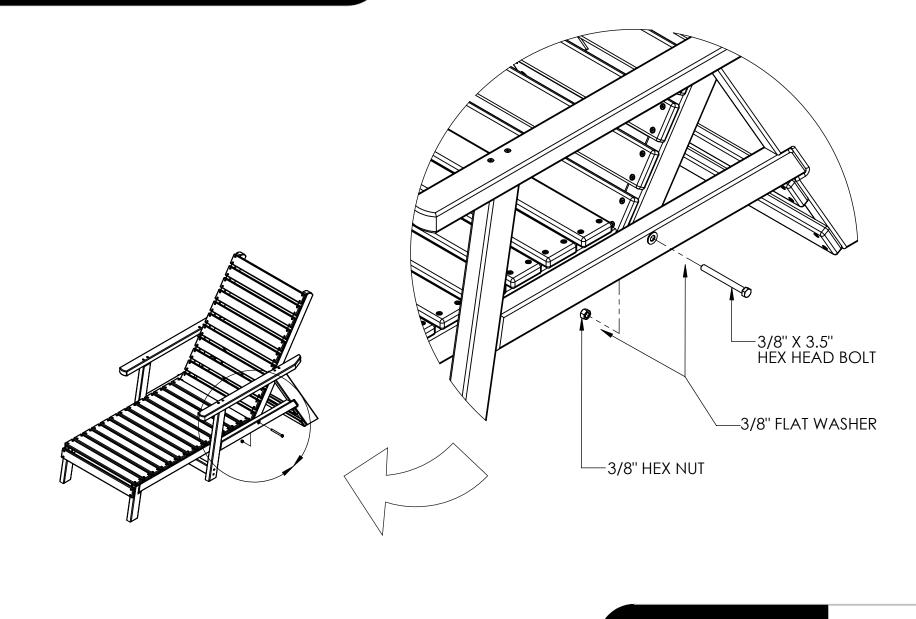

ATTACH CHAIR BACK ASSEMBLY TO CHAIR FRAME ASSEMBLY

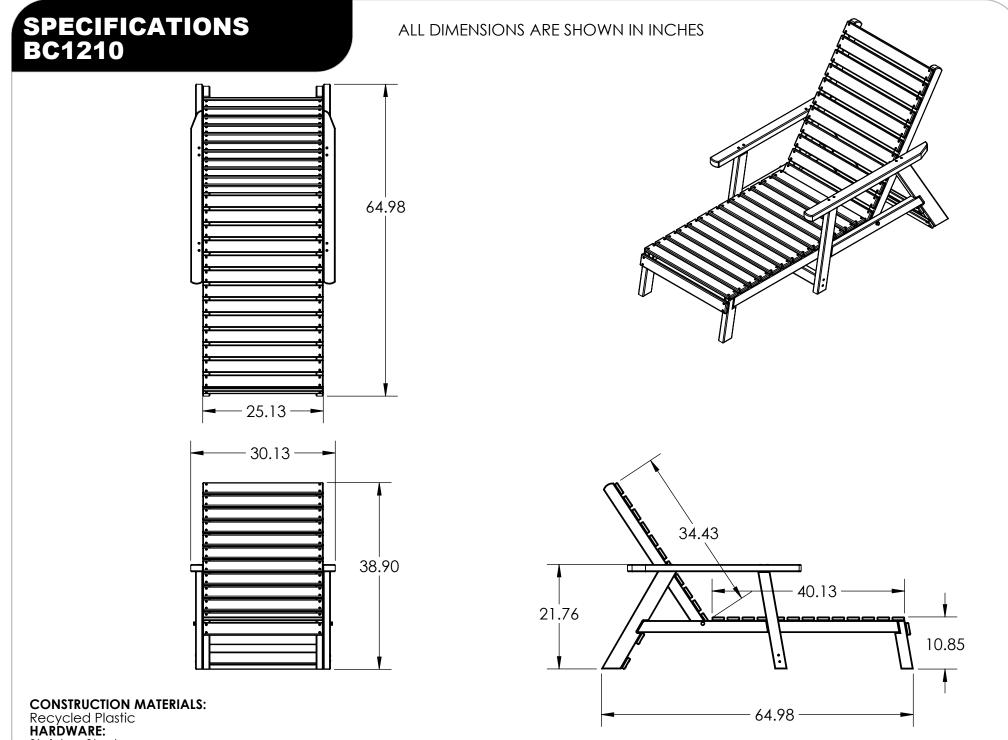

Stainless Steel