



TETE-A-TETE ASSEMBLY INSTRUCTIONS


KBC1177
Revision #1
5/11/2021

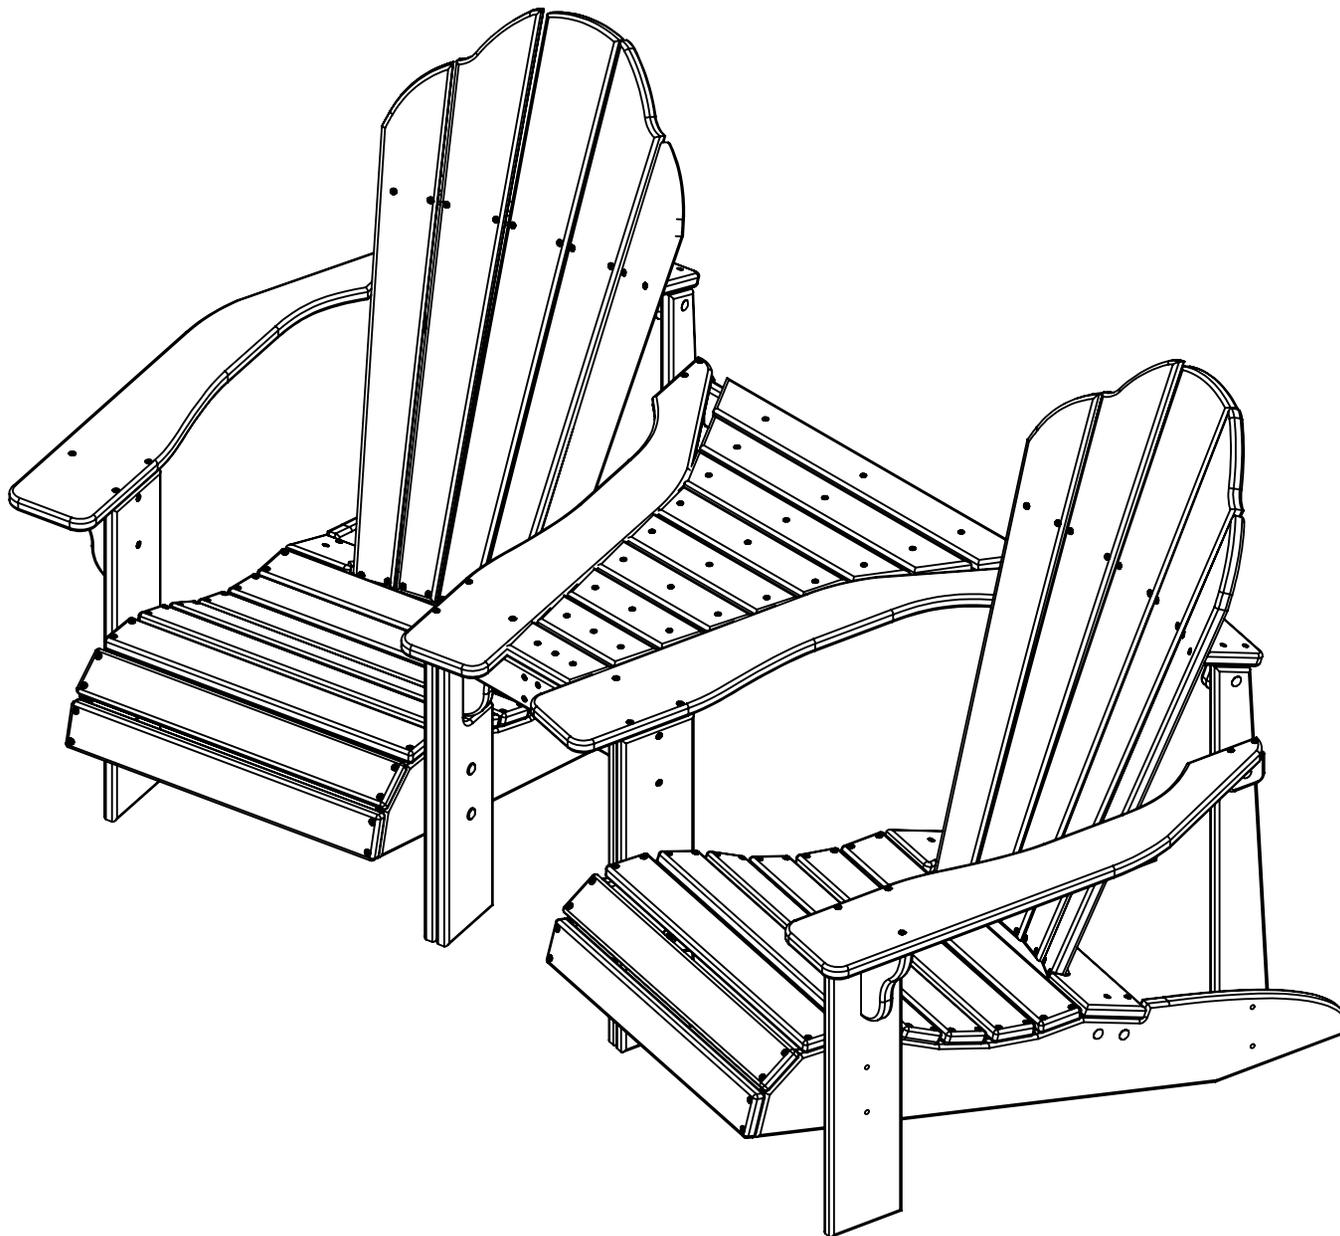


TETE-A-TETE ASSEMBLY INSTRUCTIONS

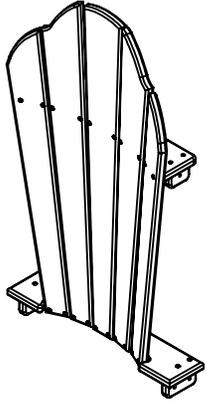


CHAIR BACK ASSEMBLY
2X
ABC-A0013

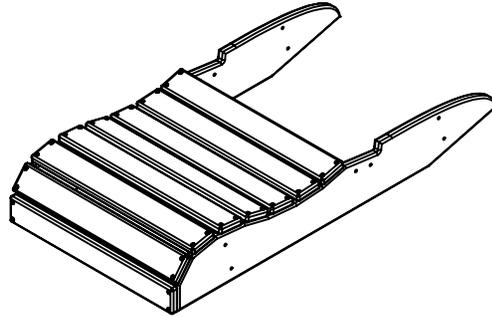


CHAIR SEAT ASSEMBLY
2X
ABC-A0014

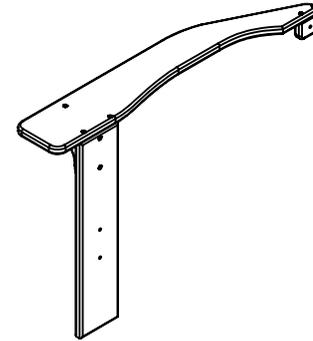


CHAIR ARMREST
ASSEMBLY(R)
2X
ABC-A0015

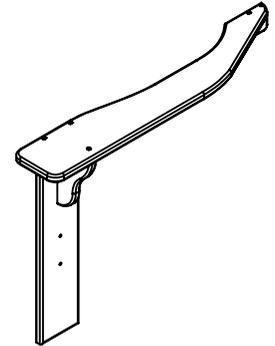

CHAIR ARMREST
ASSEMBLY(L)
2X
ABC-A0016



CHAIR BACK LEG
4X
ABC-P0062

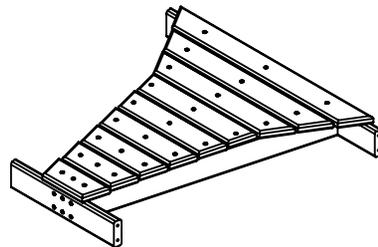

TETE-A-TETE FRAME
1X
ABC-A0066



TETE-A-TETE FRONT LEG
2X
ABC-P0160




TETE-A-TETE BACK LEG
2X
ABC-P0161


COMPONENTS
REQUIRED FOR
ASSEMBLY

1/5


TETE-A-TETE ASSEMBLY INSTRUCTIONS

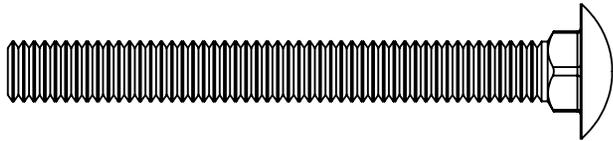


1/4" x 3.00" CARRIAGE BOLT
10X
F0001

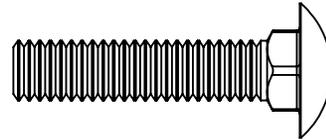


1/4" x 1.75" CARRIAGE BOLT
32X
F0002

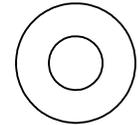

1/4" FLAT WASHER
32X
F0003

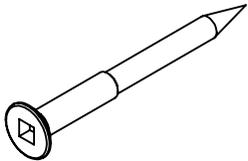

#8 X 1.625" DECK SCREW
8X
F0004





1/4" HEX NUT
32X
F0005

**REQUIRED TOOLS
(NOT INCLUDED)**
1 - 7/16" SOCKET
1 - SCREW GUN
1 - RUBBER MALLETT

**HARDWARE &
TOOLS REQUIRED
FOR ASSEMBLY**


2/5

TETE-A-TETE ASSEMBLY INSTRUCTIONS

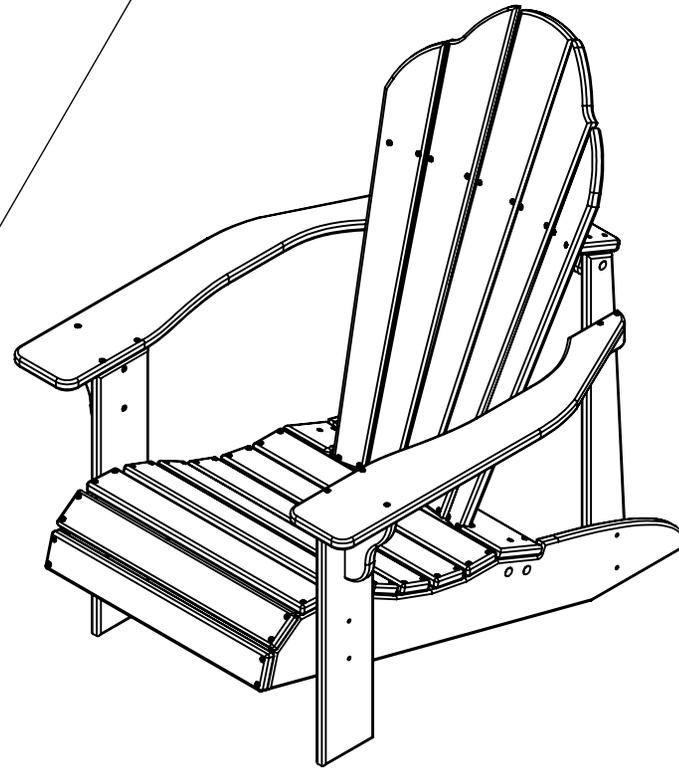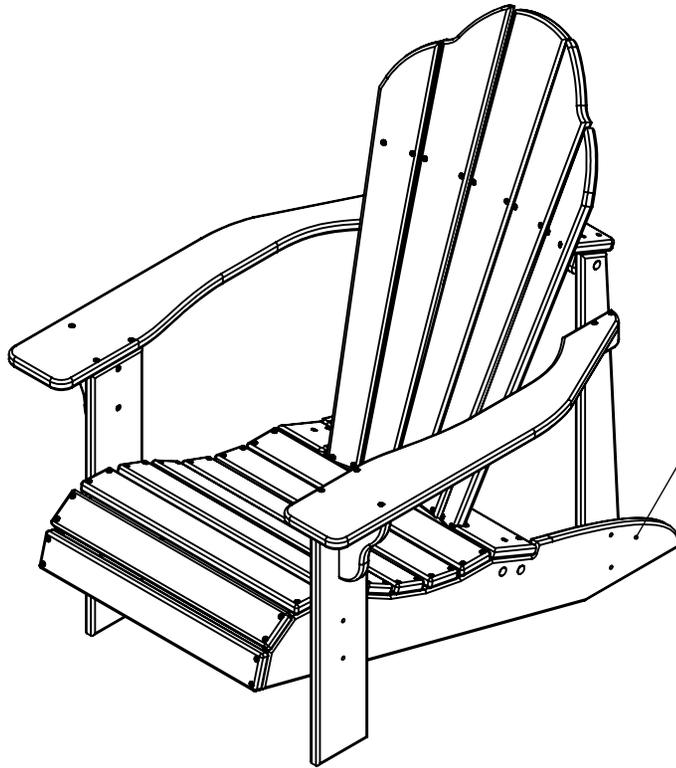


ASSEMBLE 2 ADIRONDACK CHAIRS
REFER TO ADIRONDACK CHAIR
ASSEMBLY INSTRUCTIONS INCLUDED IN KIT.

TETE-A-TETE ASSEMBLY INSTRUCTIONS

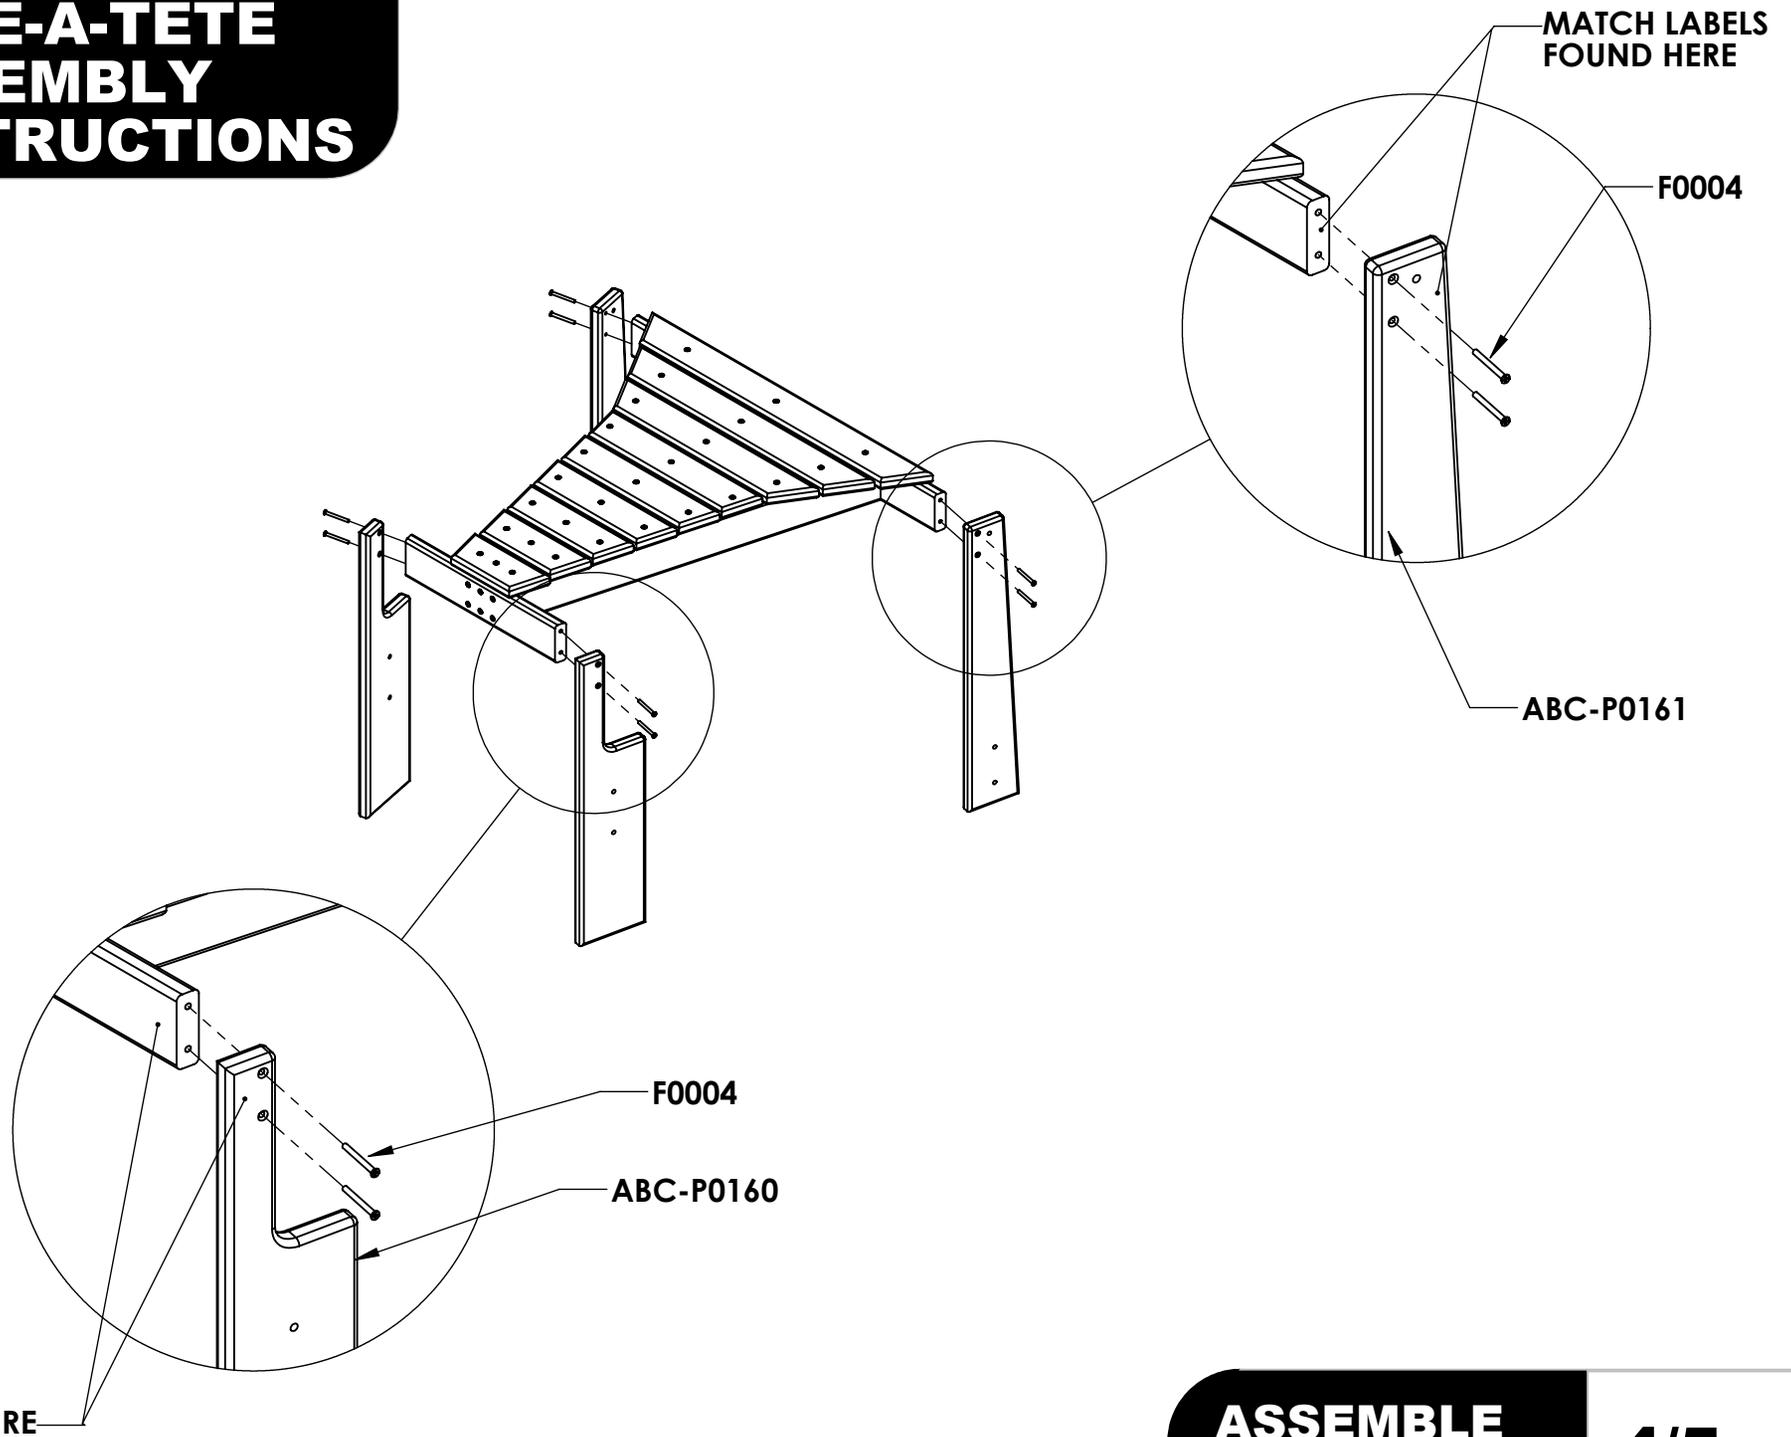

TETE-A-TETE ASSEMBLY INSTRUCTIONS





NOTE:
BEFORE ATTACHING
TETE-A-TETE TO CHAIR,
REMOVE 1/4" X 1.75"
CARRIAGE BOLTS WHERE
INDICATED

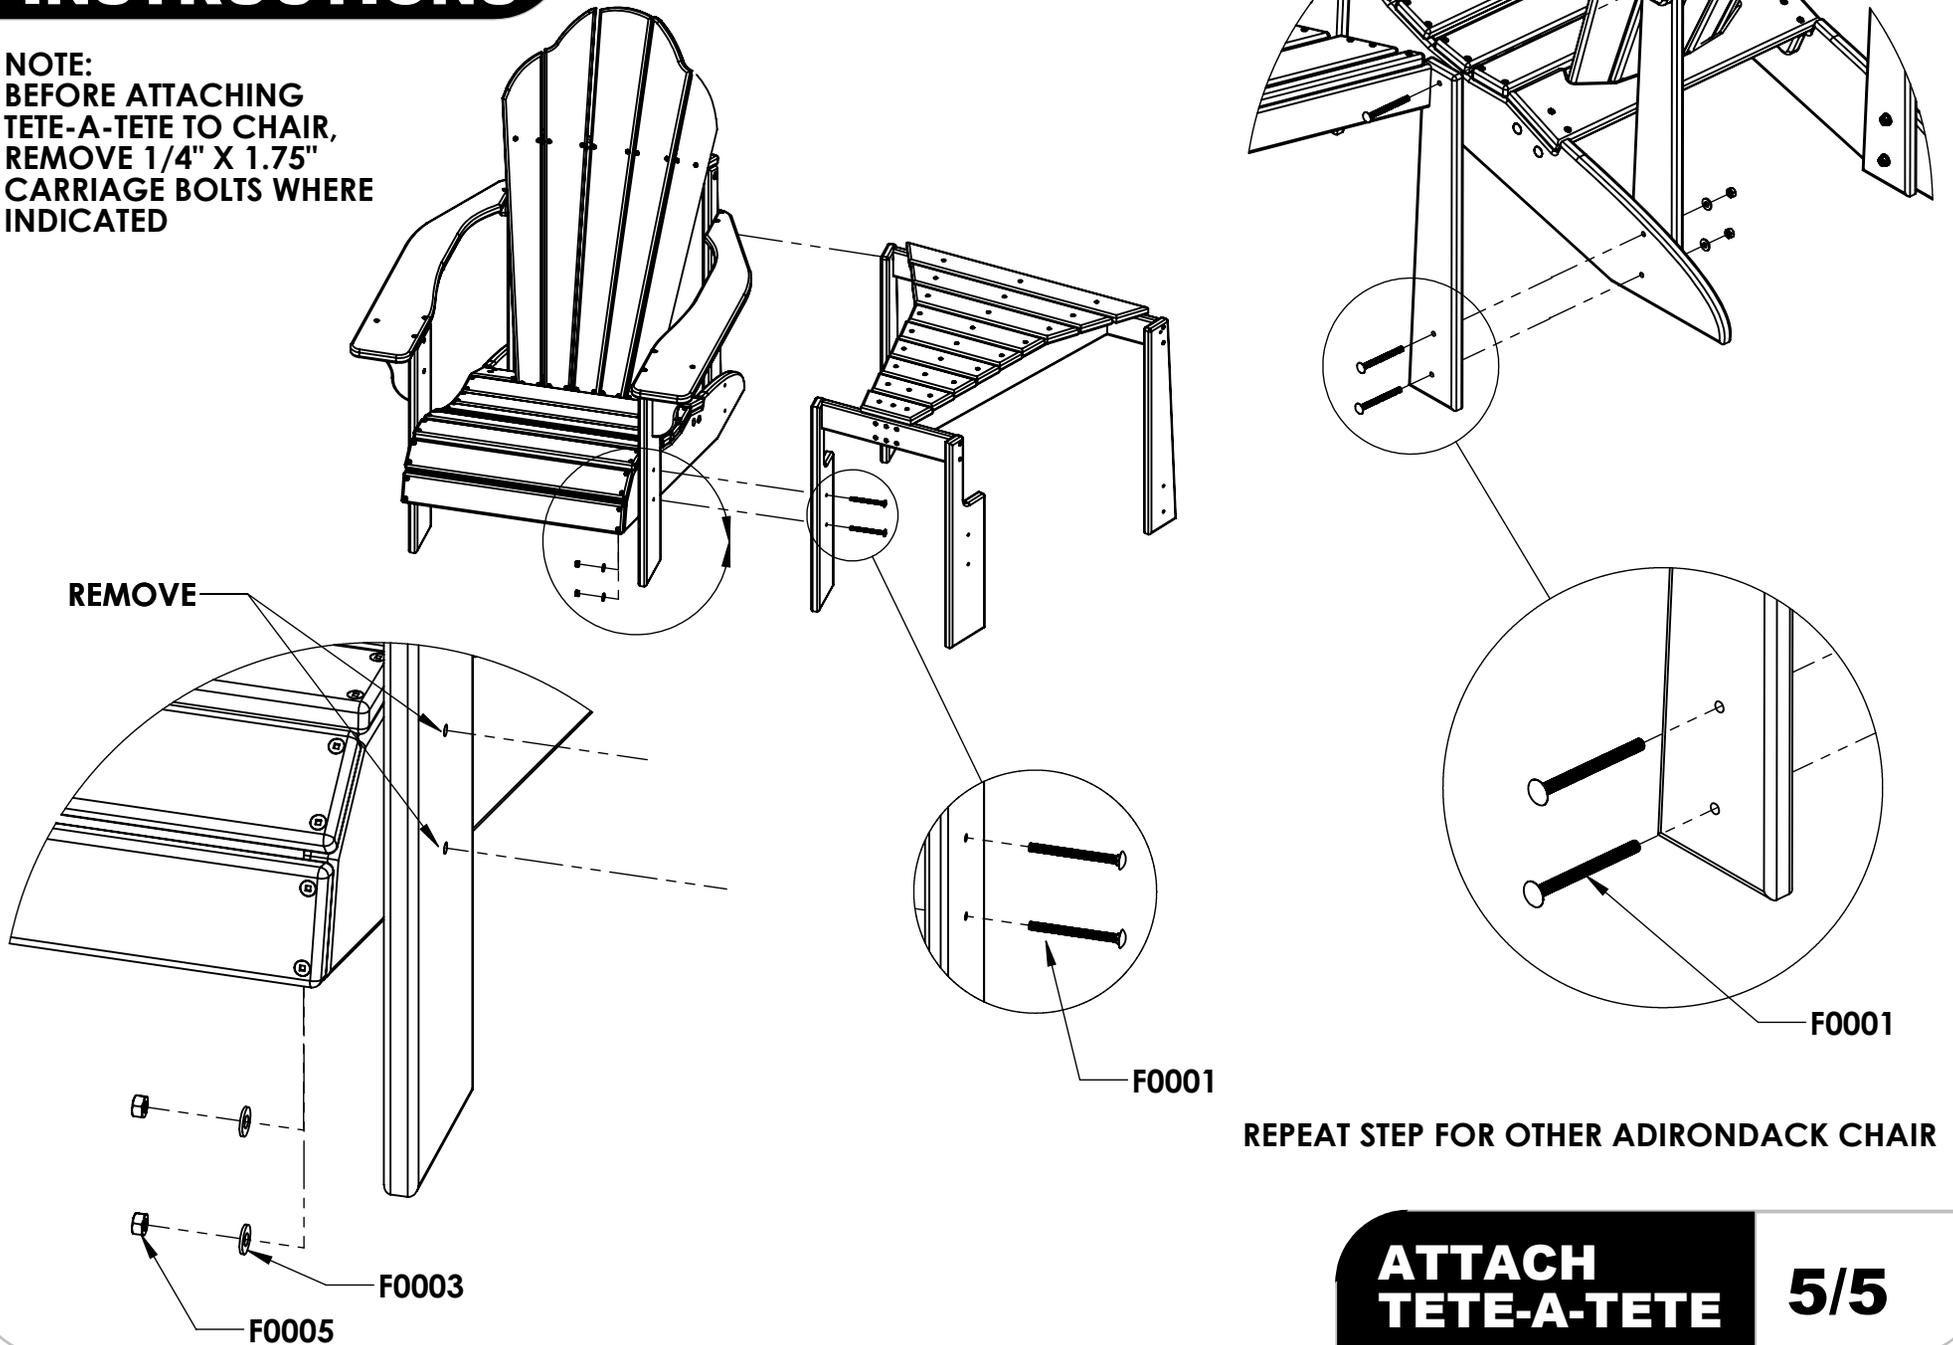

**ATTACH
TETE-A-TETE**

5/5

SPECIFICATIONS BC1177

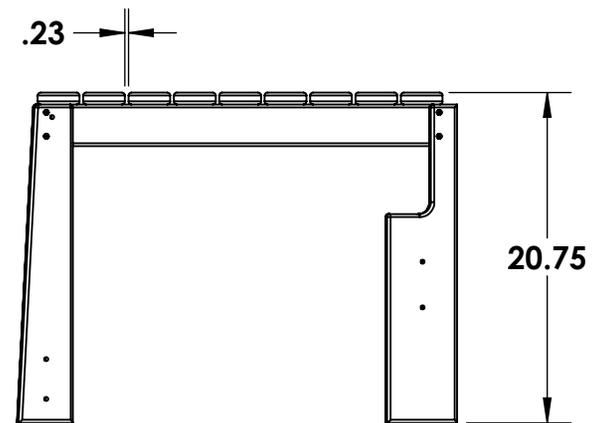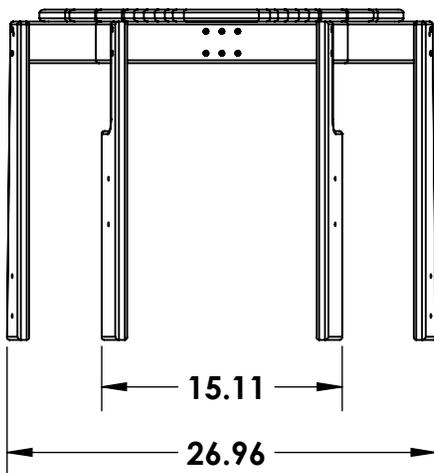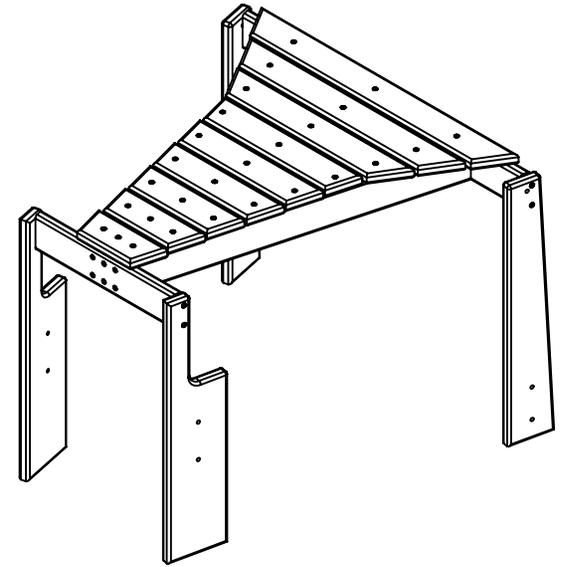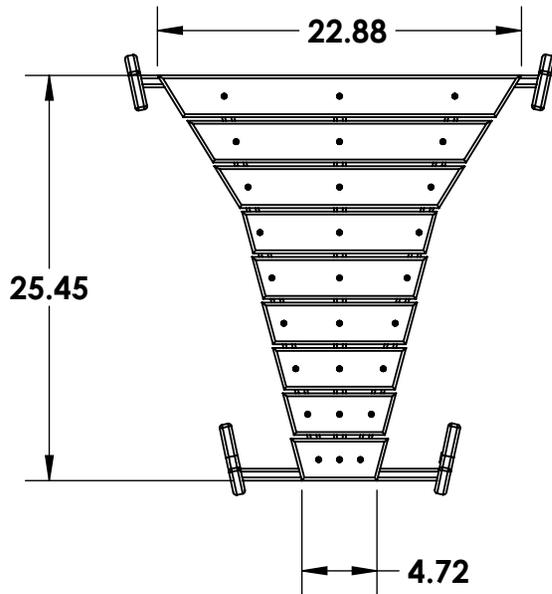

SPECIFICATIONS

BC1177

