BENCH INSTRUCTIONS

REV#5
5/12/23

KBC1115
KBC1120
KBC1125
KBC1151
KBC1152
KBC1153
KBC1155
KBC1156
KBC1157
KBC1161
KBC1162
KBC1163

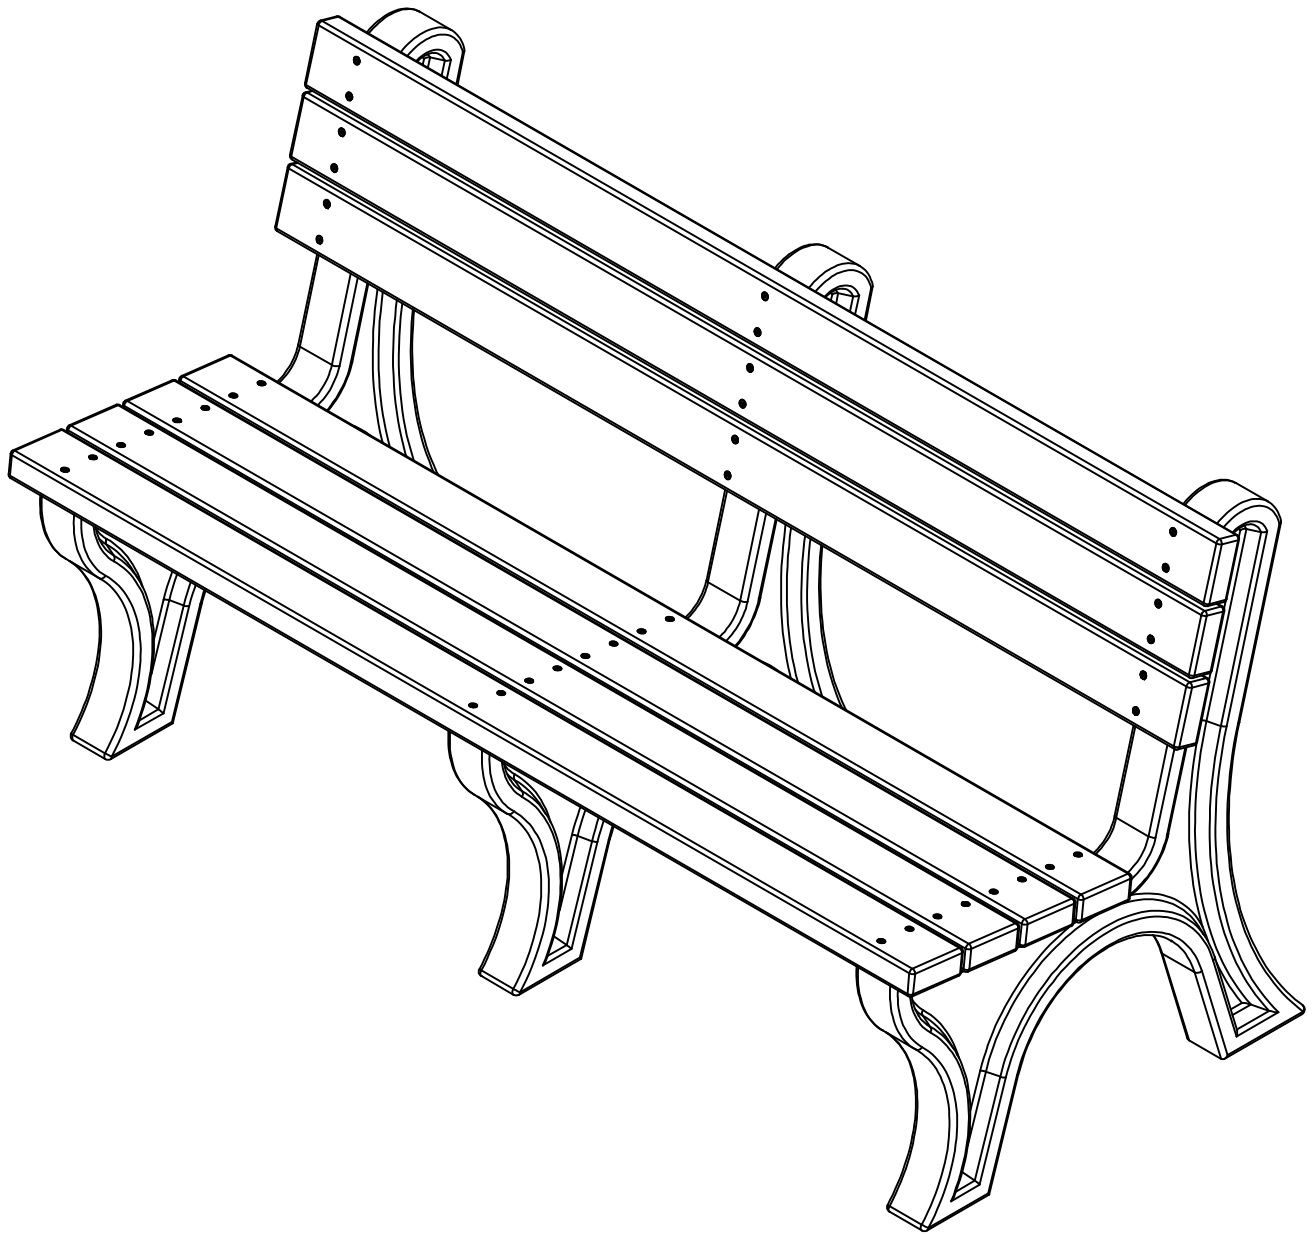

BENCH INSTRUCTIONS

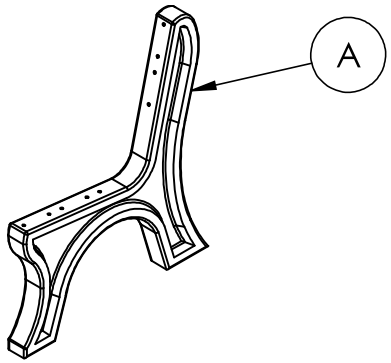

3
BENCH END
ABC-PPL1000

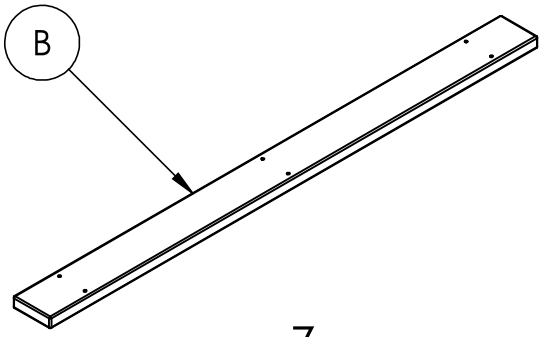

7
PLASTIC BOARDS
ABC-P0097

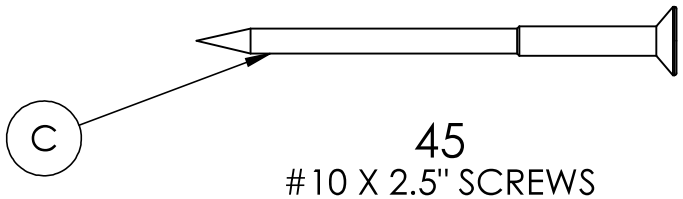

45
#10 X 2.5" SCREWS

REQUIRED TOOLS (NOT INCLUDED)
- POWER DRILL
- #2 SQUARE DRIVE

NOTE: IT IS IMPORTANT TO KEEP ALL SCREWS LOOSE DURING ASSEMBLY UNTIL ENTIRE BENCH IS ASSEMBLED

BENCH INSTRUCTIONS

STEP 1 Seat Assembly

- Stand two outer bench ends (A) upright
- Lay a plastic board (B) over the bench ends (A) closest to the end
- Align the holes in the plastic board with the guide marks in the bench ends
- Secure the board (B) with the #10 x 2.5" screws (C)
- Repeat for each plastic board starting at the front seat board and working toward the back

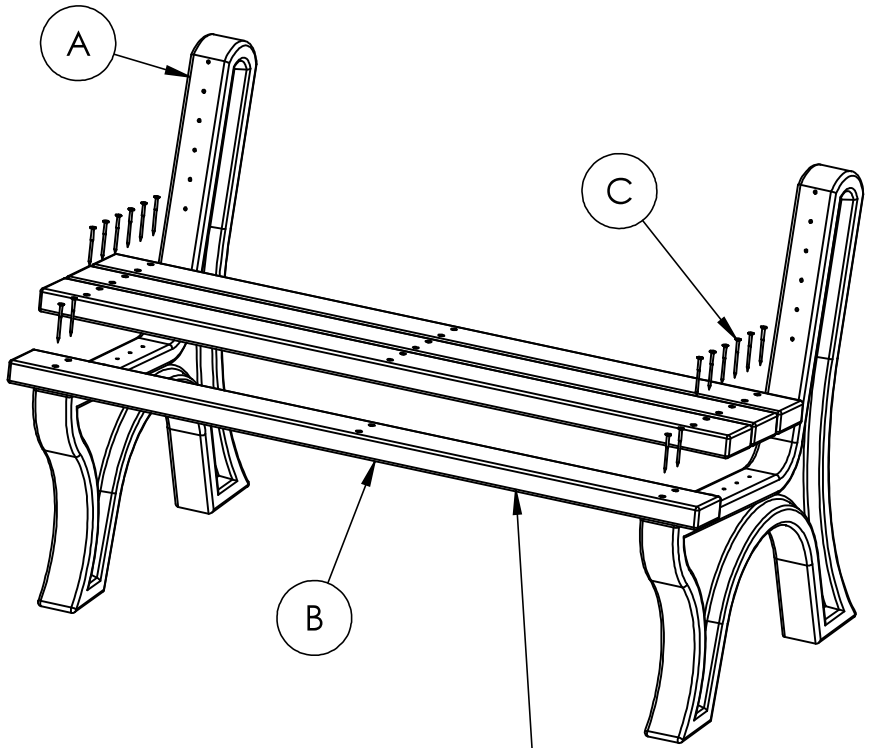

INSTALL THIS BOARD FIRST

STEP 2 Seat Assembly

- Move the remaining bench end (A) to the center of the bench
- Align the guide marks in the bench end with holes in the plastic board (B)
- Secure each plastic board to the end with #10 x 2.5" screws (C)

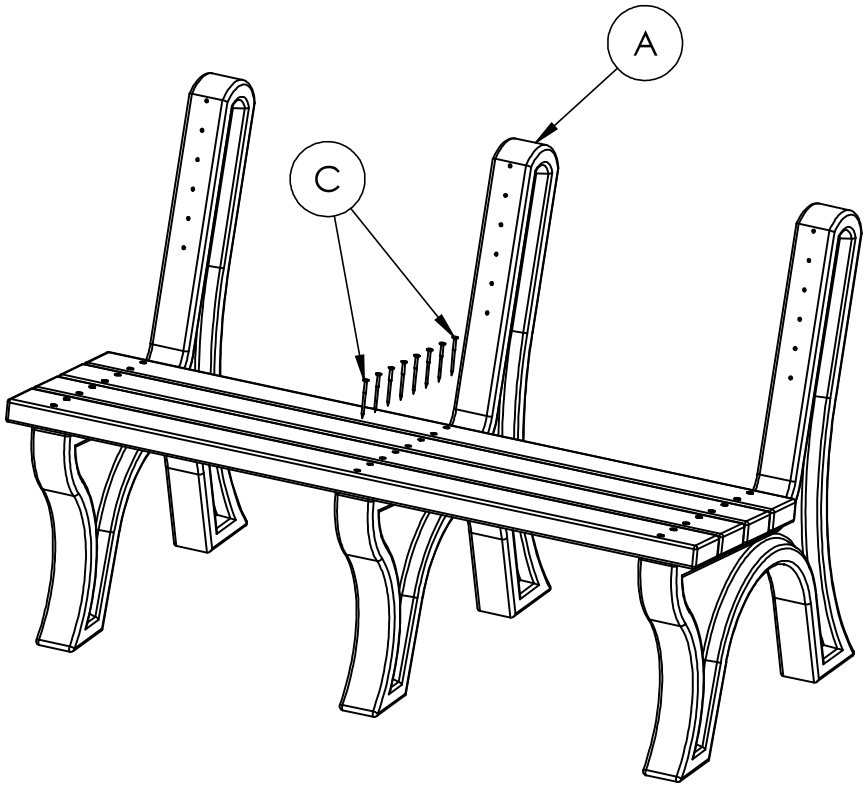

STEP 3 Backrest Assembly

- Hold a plastic board (B) up to the back rest portion of the bench end (A)
- Align the guide marks in the bench end (A) with holes in the plastic board (B)
- Secure each plastic board to the bench end with #10 x 2.5" screws (C)
- Square all components and tighten all screws
- Level board and leave 1/4" spacing between boards and secure to bench ends

Note: If there are engraved boards, holes may be missing or not line up properly with bench ends

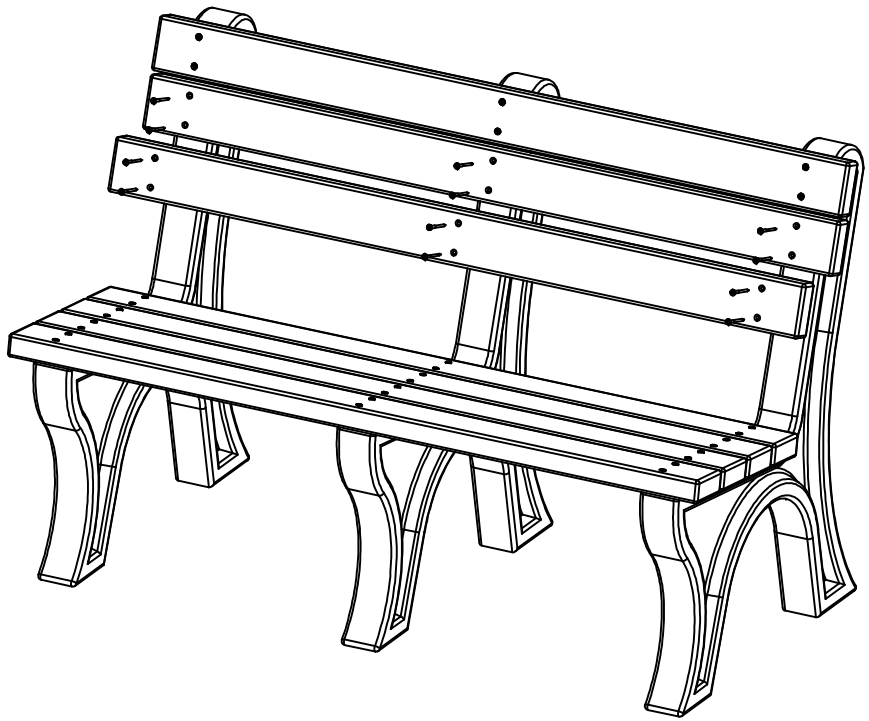

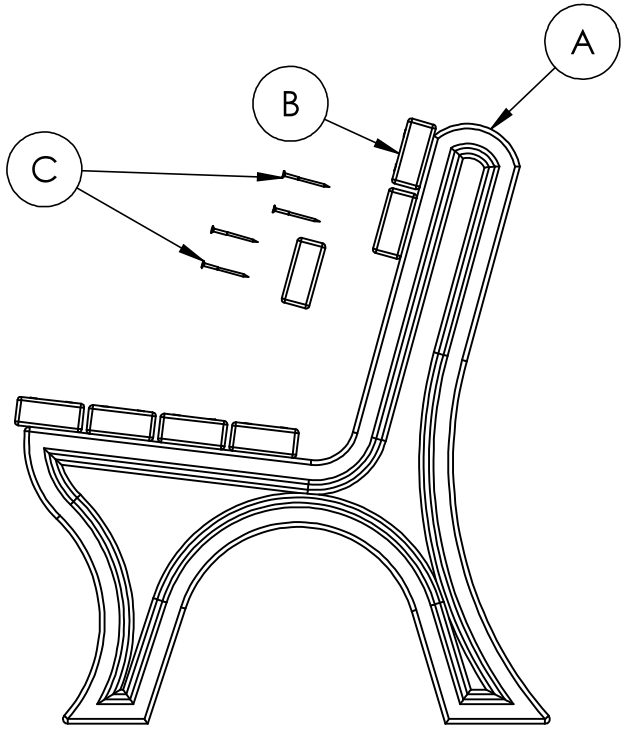

BENCH SPECIFICATIONS

REV# 5
5/12/23

KBC1115
KBC1120
KBC1125
KBC1151
KBC1152
KBC1153
KBC1155
KBC1156
KBC1157
KBC1161
KBC1162
KBC1163

TOP

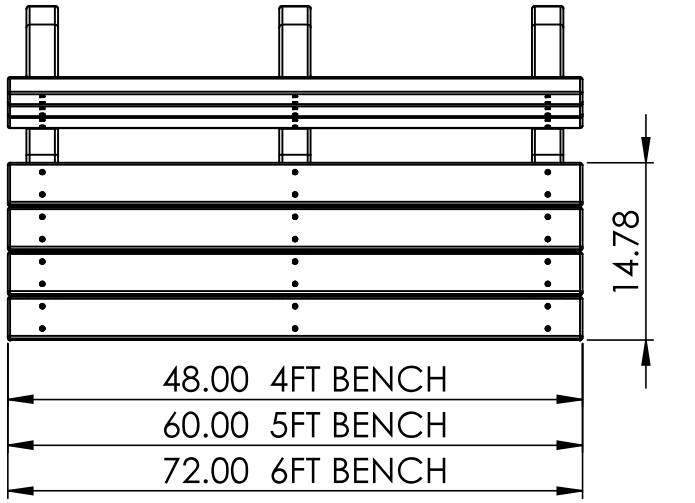

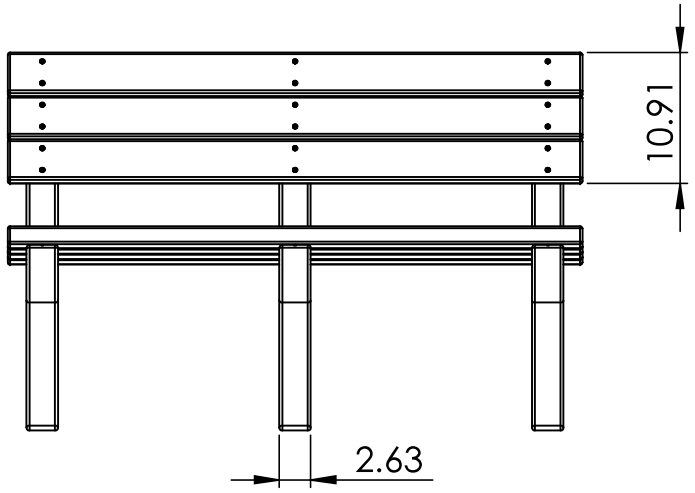

FRONT

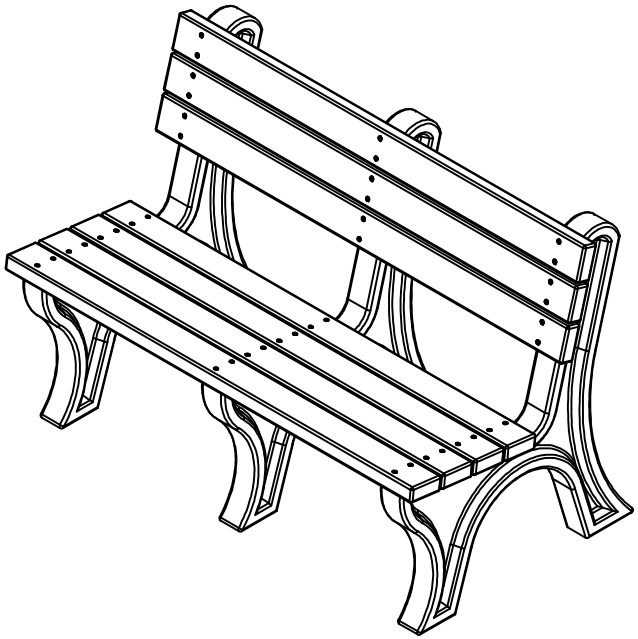

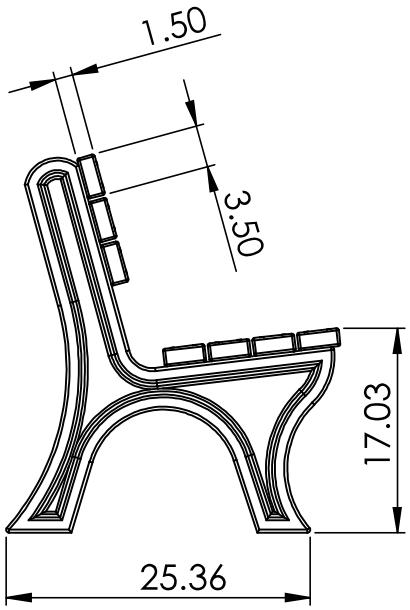

SIDE

CONSTRUCTION MATERIALS:
Recycled Plastic
HARDWARE:
Stainless Steel

ALL DIMENSIONS SHOWN IN INCHES