



INGROUND & SURFACE MOUNT MESSAGE CENTER ASSEMBLY INSTRUCTIONS

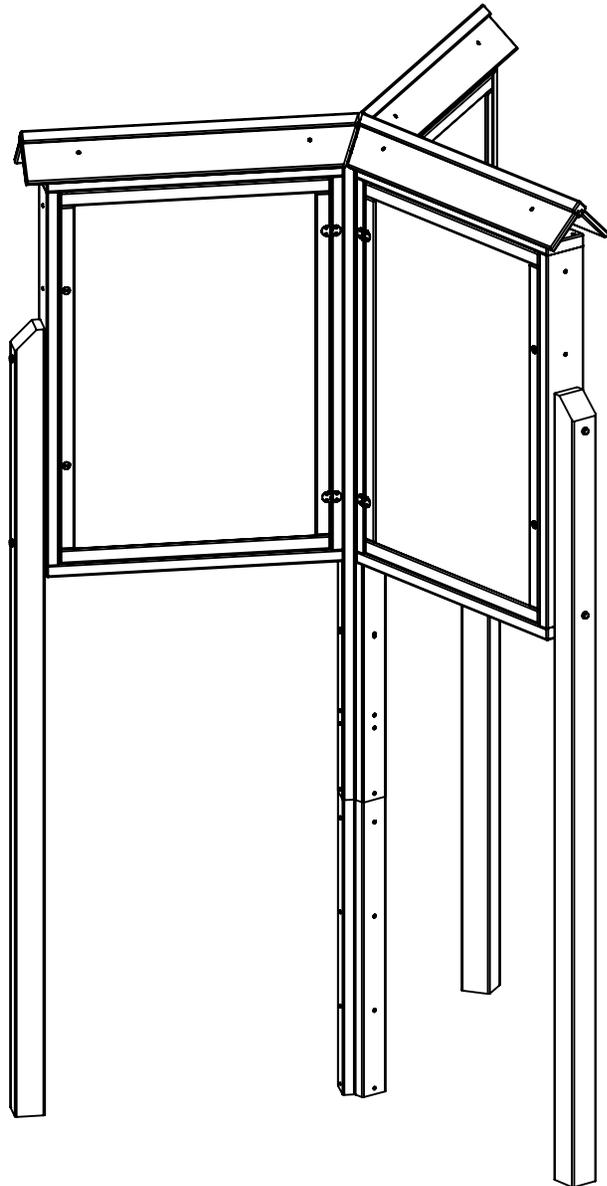


Inground Mount

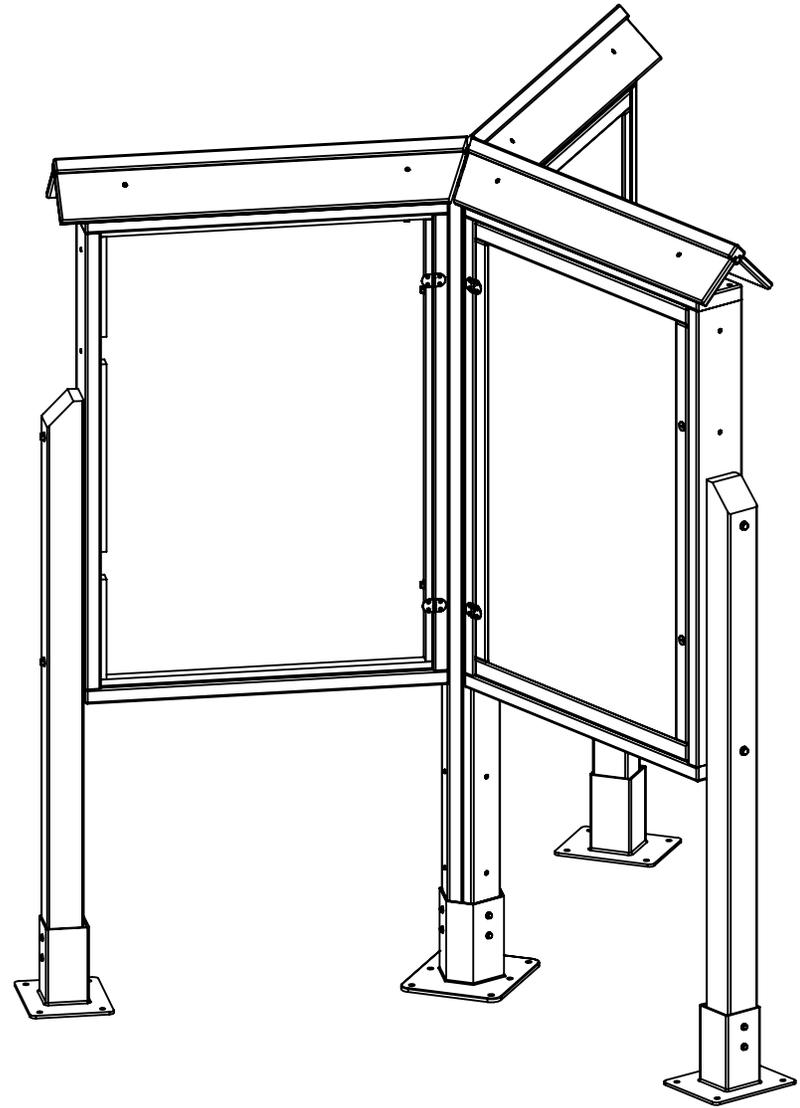


Surface Mount


INGROUND & SURFACE MOUNT MESSAGE CENTER ASSEMBLY INSTRUCTIONS

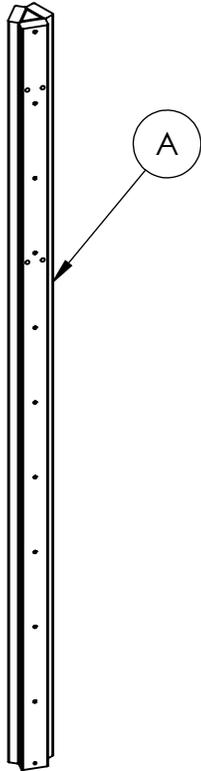


1X
Center Post
AMC-A0056

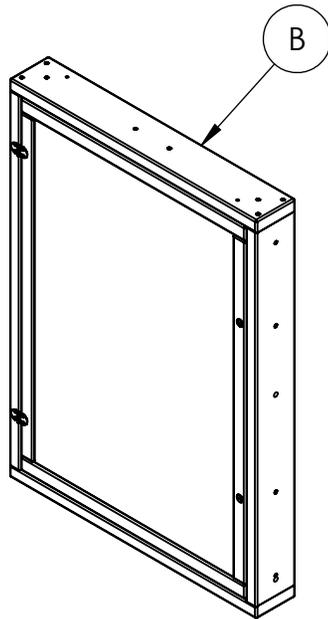

3X
Message Centers
AMC-A0058

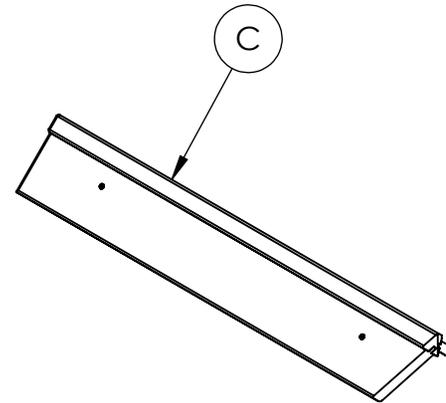

3X
Roof Assembly
AMC-A0059

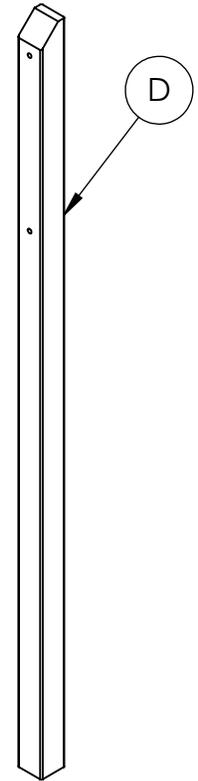

3X
Outpost
AMC-P0070

REQUIRED TOOLS (NOT INCLUDED)

- 1 - 7/16" SOCKET
- 1 - 9/16" WRENCH
- 1 - 9/16" SOCKET
- 1 - SCREW GUN
- 1 - LEVEL


OTHER REQUIRED MATERIALS FOR INGROUND MOUNTING (NOT INCLUDED)

- 2 - 80lb BAG OF SAKCRETE
- 1 - POST HOLE DIGGER
 - GUIDE WIRES
 - A FRIEND TO HELP


**COMPONENTS &
TOOLS REQUIRED
FOR ASSEMBLY**

1/8


INGROUND & SURFACE MOUNT MESSAGE CENTER ASSEMBLY INSTRUCTIONS

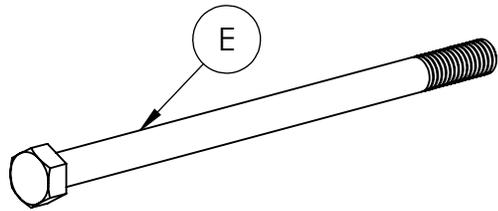


6X
3/8" X 5" Hex Head Bolt

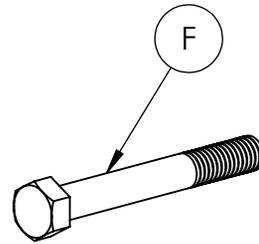


12X
3/8" X 3-1/2" Hex Head Bolt

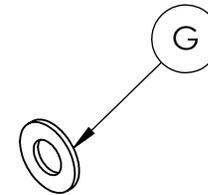

18X
3/8" Flat Washer

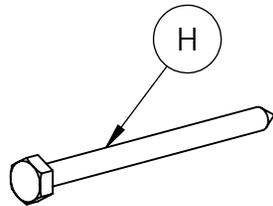


6X
1/4" X 3-1/2" Lag Screw

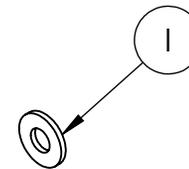


6X
1/4" Flat Washer


SURFACE MOUNT ONLY

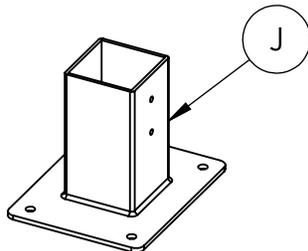


3X
End Post
Surface Mount

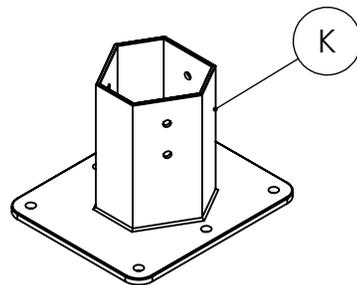

1X
Center Post
Surface Mount

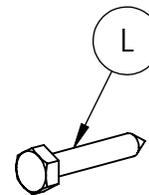

12X
1/4" X 1-1/2" Lag Screw



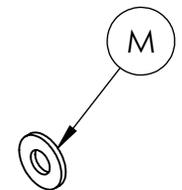


12X
1/4" Flat Washer

INGROUND & SURFACE MOUNT MESSAGE CENTER ASSEMBLY INSTRUCTIONS

STEP #1

- Lay message center (B) on the ground
- Put end post (D) on the side of message center (C) with holes lining up
- Secure the end post (D) with (2) 5" hex bolts (E) and washers (G)
- Lay center post (A) on the other side of message center (C)
- Secure the center post (D) with (4) 3.5" hex bolts and washers (G) (2 on each side of the message center)

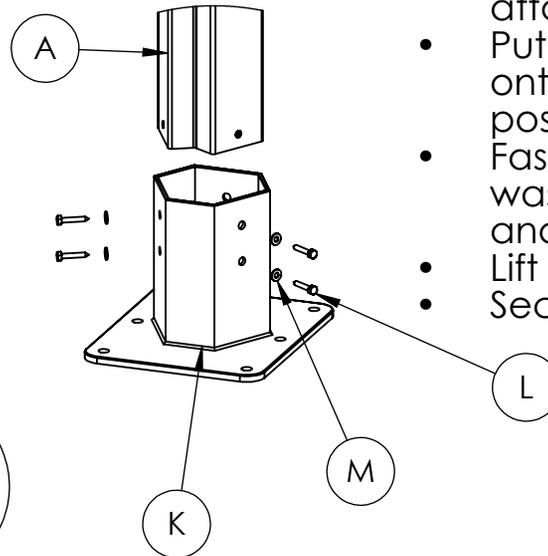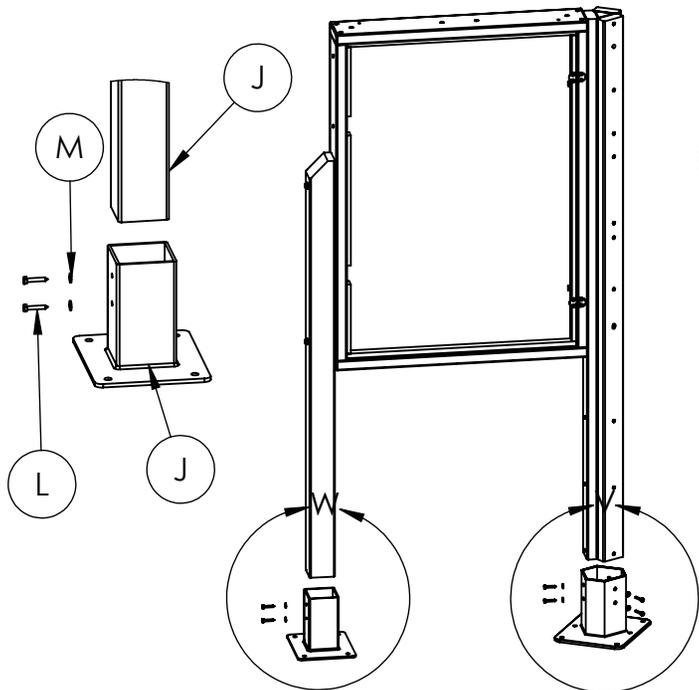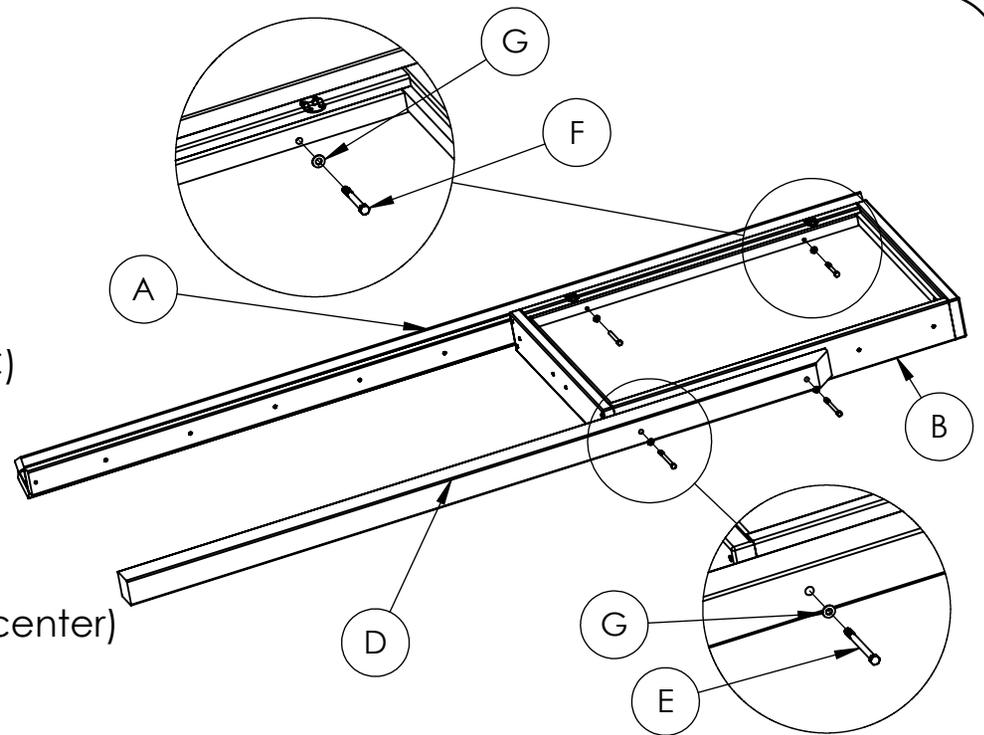




STEP #2 SURFACE MOUNT

- Keep the message center with the posts attached on the ground
- Put the surface mount bases (J) and (K) onto the post bottoms (D)
- Fasten with the 1-1/2" lag screw (L) and washer (M) thru surface mount base (J & K) and screw into post (A & D)
- Lift properly into standing position
- Secure surface mount bases to ground

INGROUND & SURFACE MOUNT MESSAGE CENTER ASSEMBLY INSTRUCTIONS

STEP #2-A INGROUND MOUNT

- Move message center assembly to desired location
- Mark the post location on the ground
- Dig two holes, approximately 10" in diameter to a depth of 36" (or to building code / frost line)

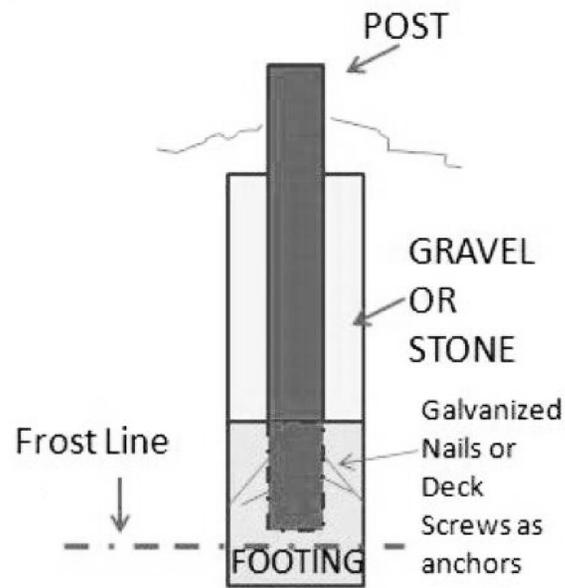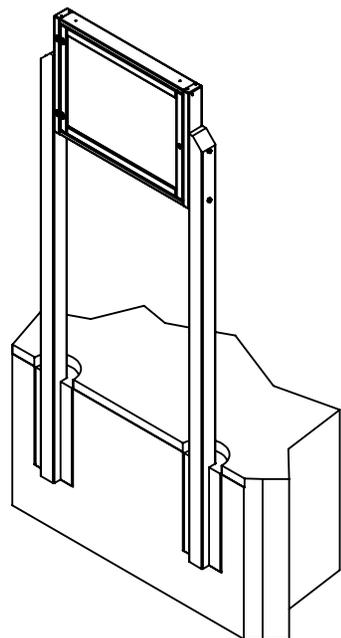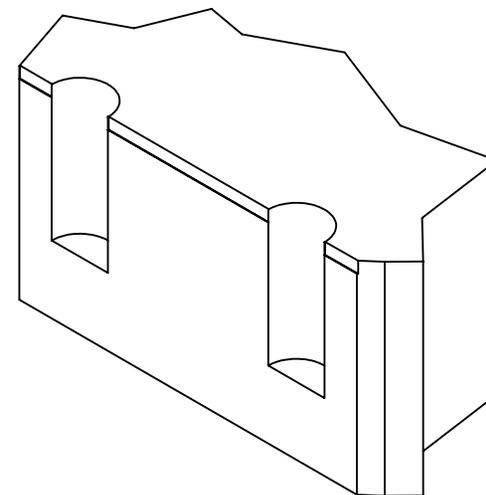


Post in Poured Concrete Footing

STEP #2-B INGROUND MOUNT

- Place post into holes
- Fill with Sakcrete to a level about 4" - 6" below ground level
- Use guide wire to secure until Sakcrete is dry
- Use a level to make sure message center is square and level
- Allow Sakcrete to set before proceeding to the next step

INGROUND & SURFACE MOUNT MESSAGE CENTER ASSEMBLY INSTRUCTIONS

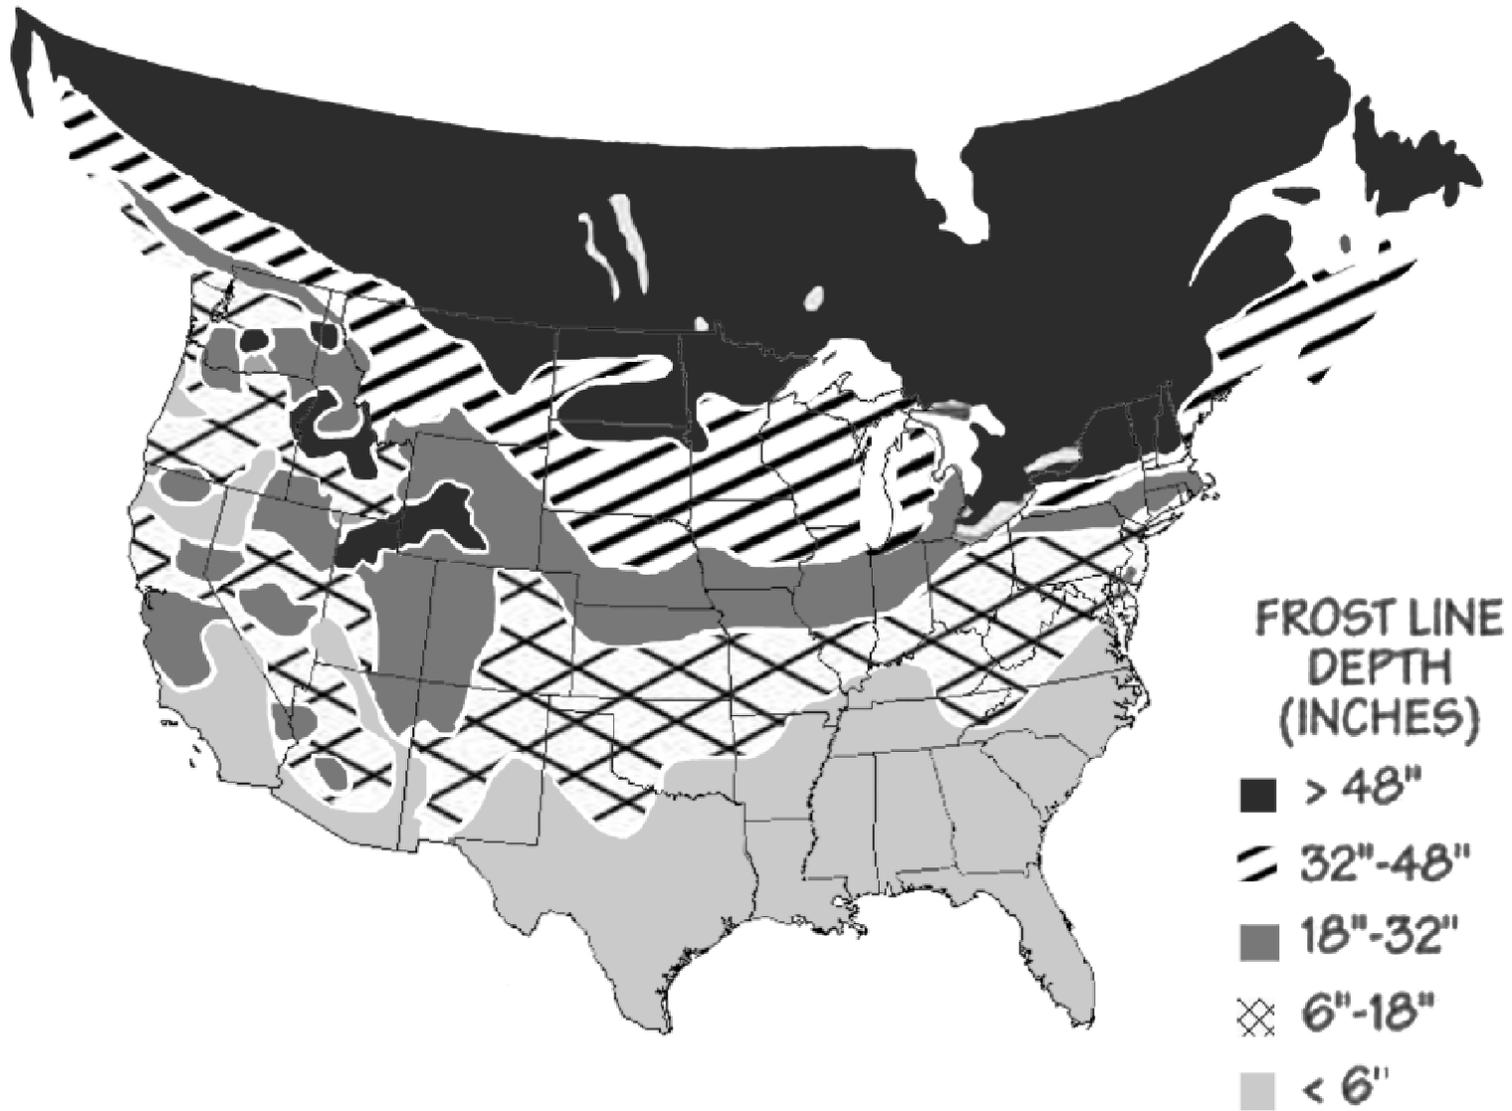

INGROUND & SURFACE MOUNT MESSAGE CENTER ASSEMBLY INSTRUCTIONS

Step #3


- Lay the remaining message centers and end posts out on the ground
- Secure the end posts (D) to message centers (B) with the 5" hex bolts (E) and flat washers (G)

Surface Mount

- Attach remaining end post mounts (J) to the posts (D) using 1-1/2" lag screws (L) and flat washers (M)

Inground Mount

- Hold the end post and message center assembly up to the center post and mark the post locations on the ground
- Dig two holes, approximately 10" in diameter to a depth of 36" (or to building code / frost line)

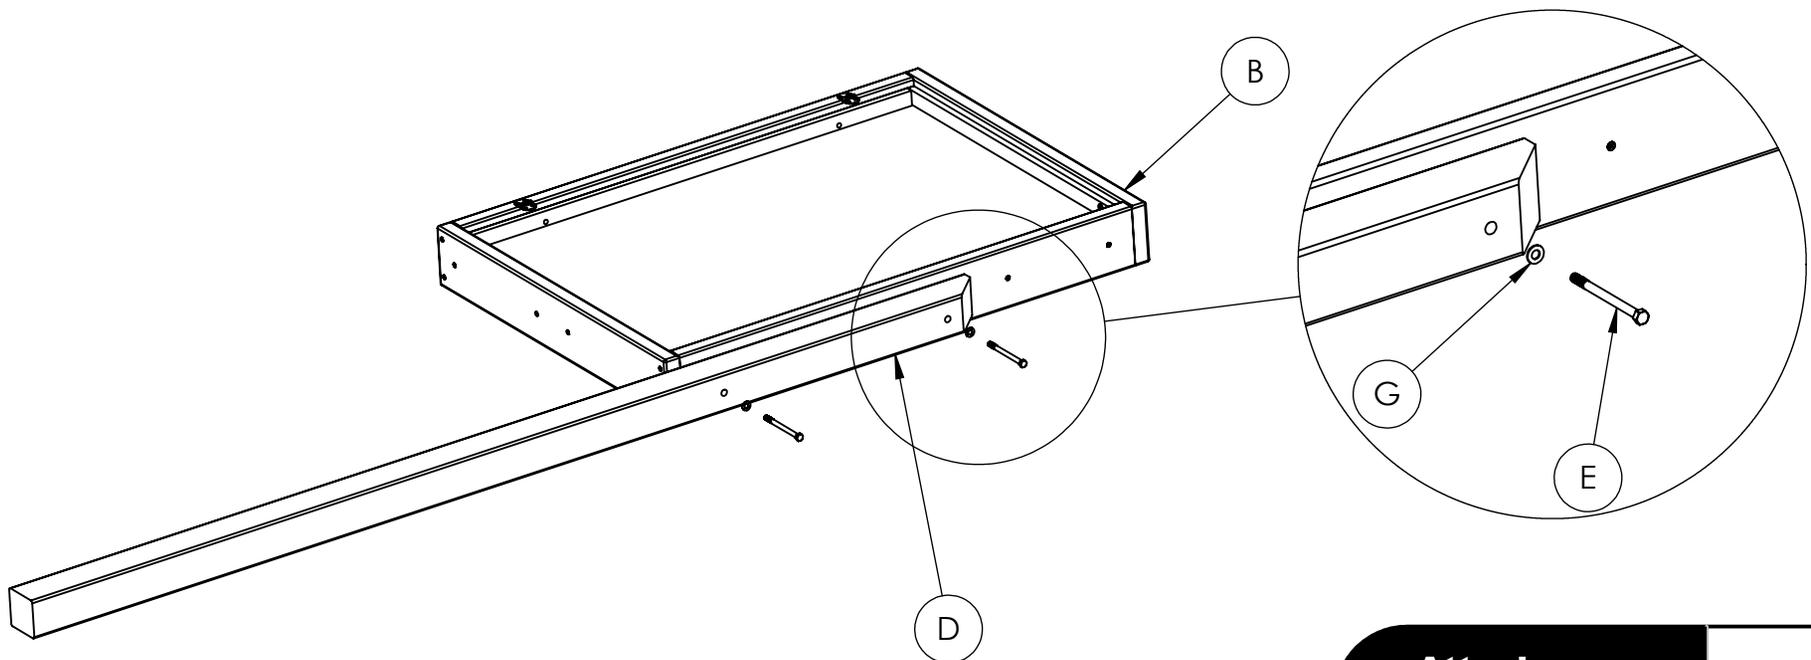


**Attach
Remaining
Posts**

6/8

INGROUND & SURFACE MOUNT MESSAGE CENTER ASSEMBLY INSTRUCTIONS

Step #4-A Inground Mount

- With another person set the message center assembly into a hole
- Secure the assembly to the center post using (4) 3-1/2" hex bolts (F) and washers (G)
- Pour in cement or fill with dirt
- Repeat for the other message center assembly

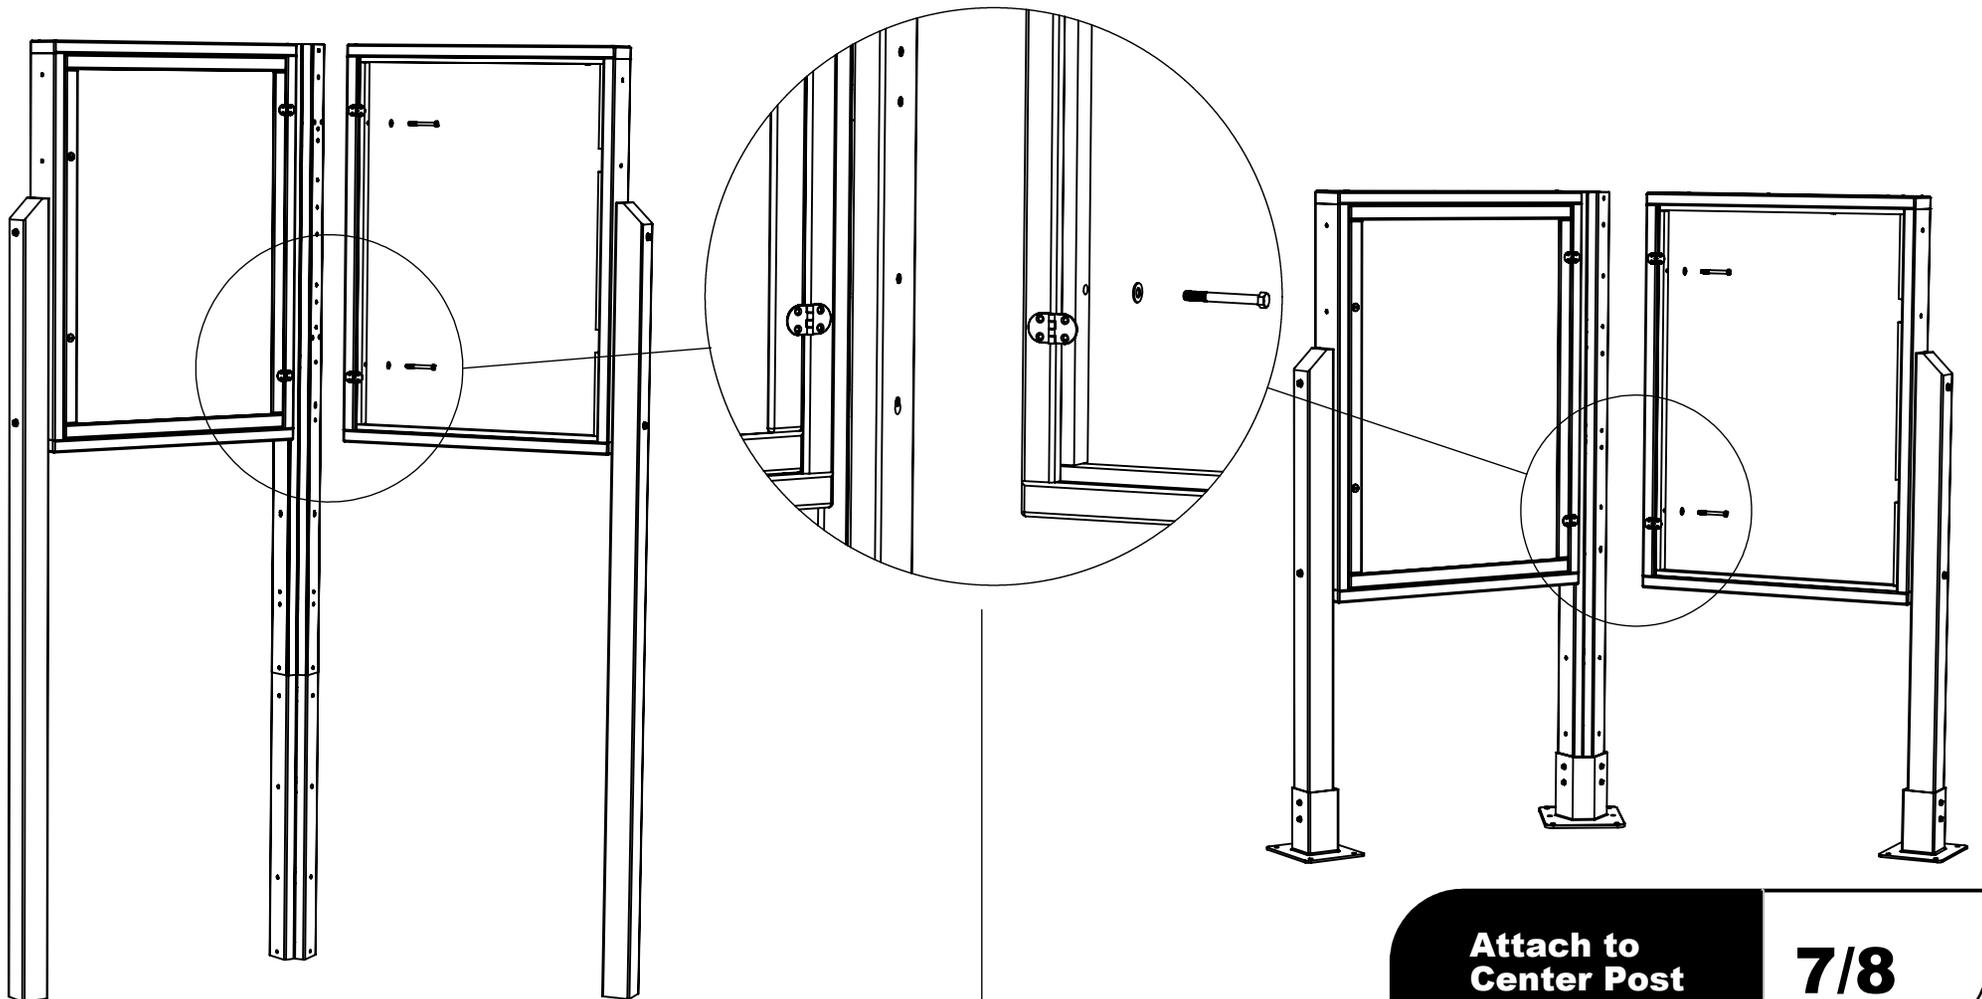

Step #4-B Surface Mount


- With another person, stand the a message center assembly upright
- Secure the assembly to the center post using (4) 3-1/2" hex bolts and washers
- Properly secure the end post mount to the ground
- Repeat for the other message center assembly

Attach to
Center Post

7/8



INGROUND & SURFACE MOUNT MESSAGE CENTER ASSEMBLY INSTRUCTIONS

Angled cut to
the center

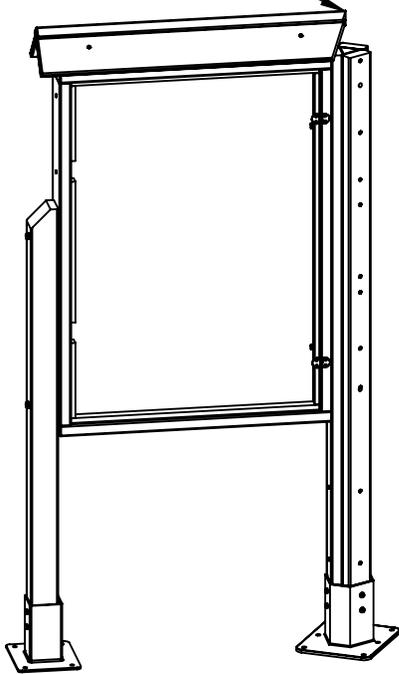

STEP #5 Attach the Roof

- Set roof piece (C) onto top of message center (B) with angled cut towards the center
- Fasten (2) 3-1/2" lag screws (H) thru washer (I) thru message center (B) into roof piece (C)
- Repeat for the remaining roof pieces

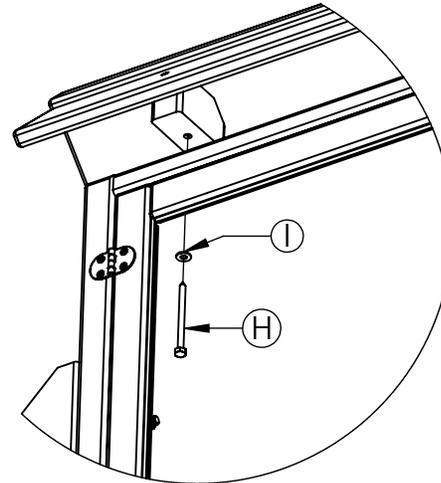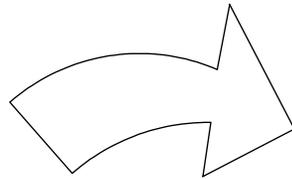


STEP #6-Remove Glass Covering

- To remove protective covering from glass, take a razor blade and trace along the frame cutting the covering
- In a corner peel back covering using the point of the blade
- Pull covering off of glass
- Repeat for other side of glass


**ATTACH ROOF
TO MESSAGE
CENTER**

8/8

SIX-SIDED KIOSK INGROUND MOUNT

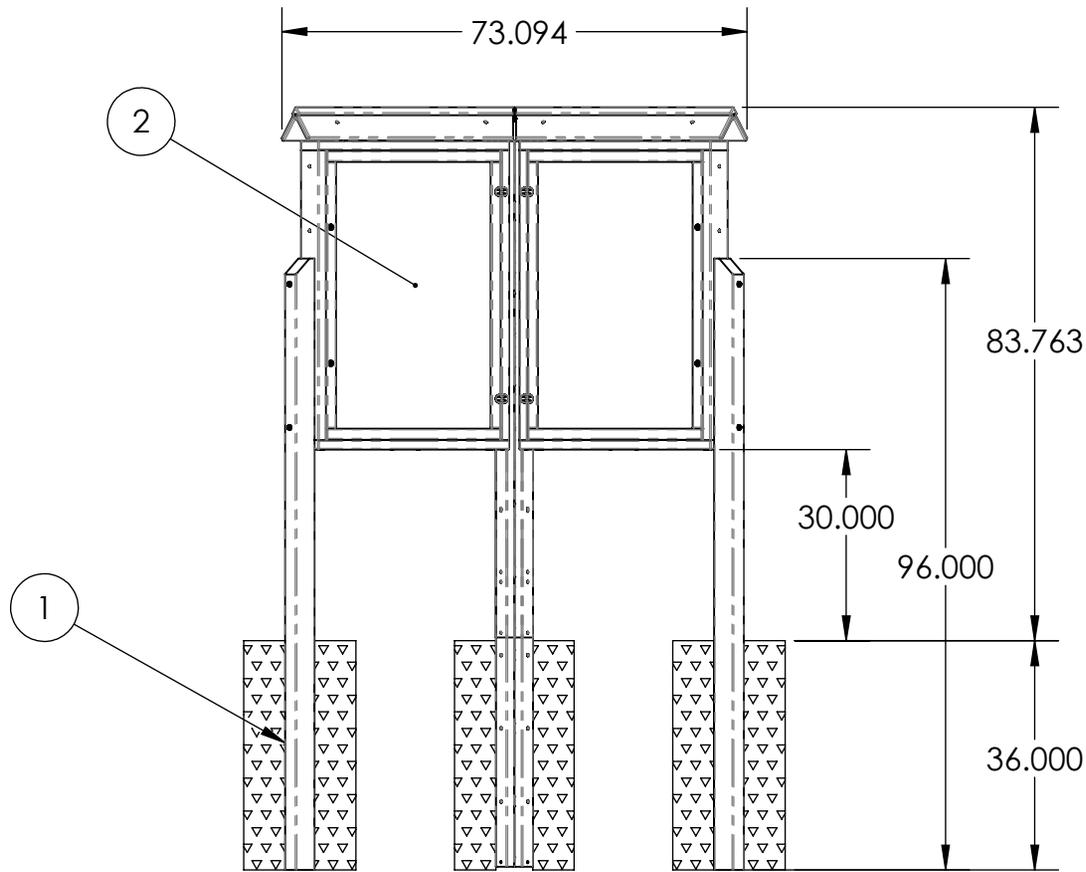


FRONT

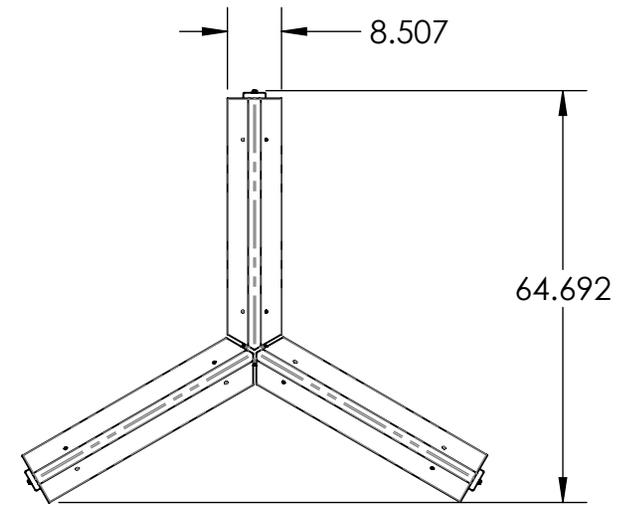


TOP

ALL DIMENSIONS ARE SHOWN IN INCHES

SIX-SIDED KIOSK SURFACE MOUNT

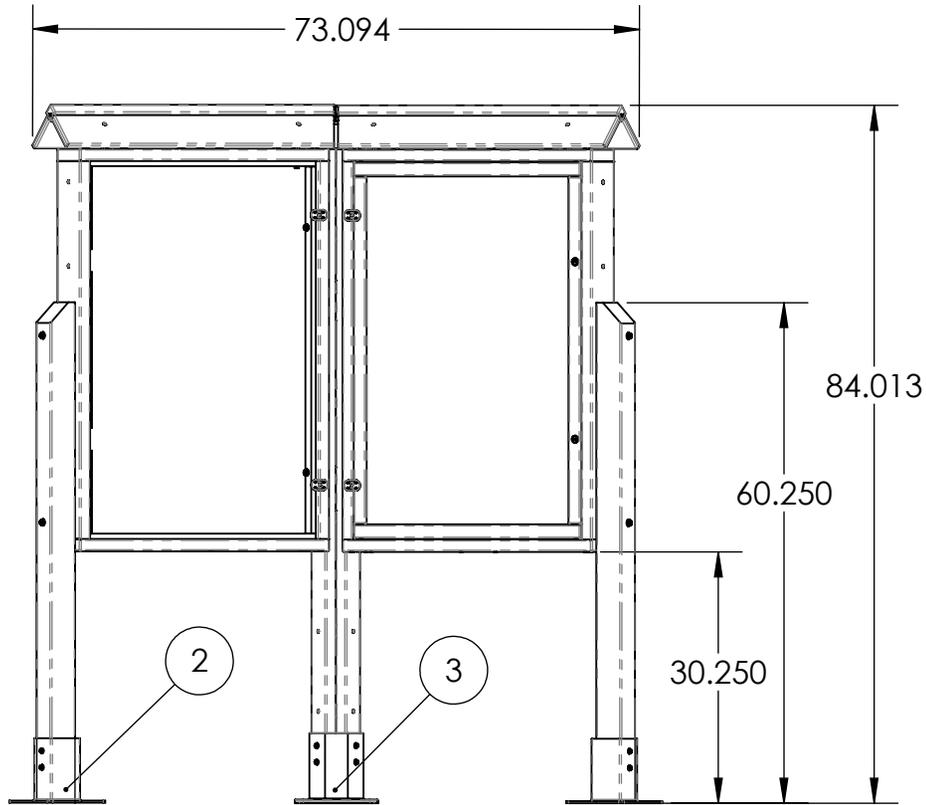



FRONT

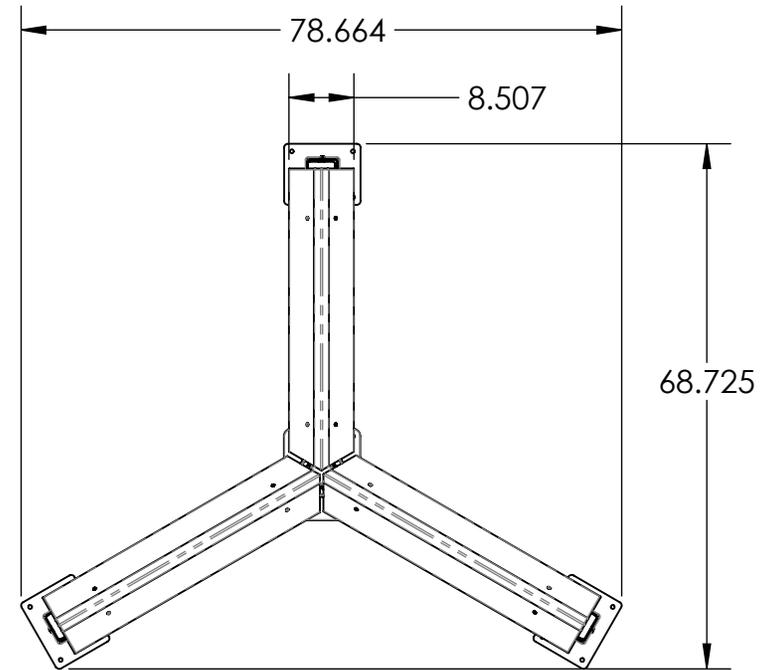


TOP

ALL DIMENSIONS ARE SHOWN IN INCHES


SIX-SIDED KIOSK SURFACE MOUNT

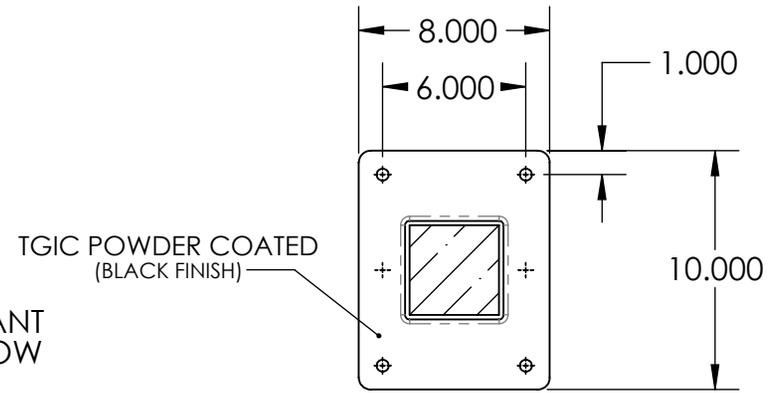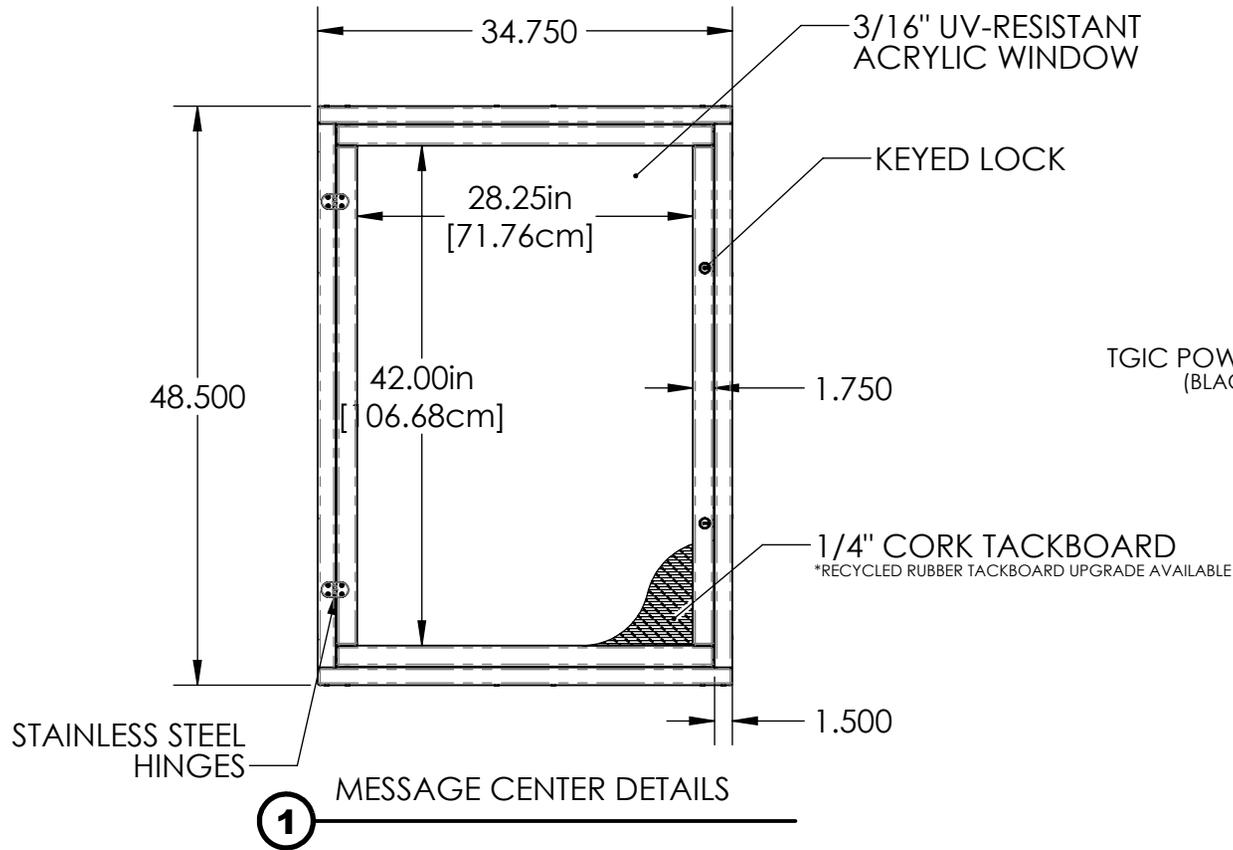

2 MOUNTING DETAILS

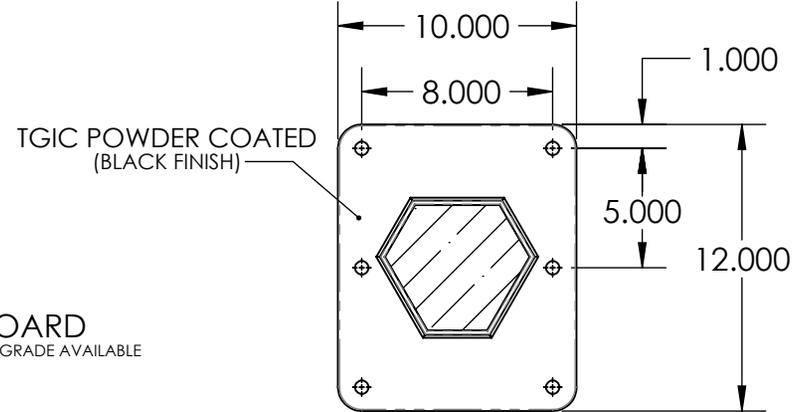

3 MOUNTING DETAILS

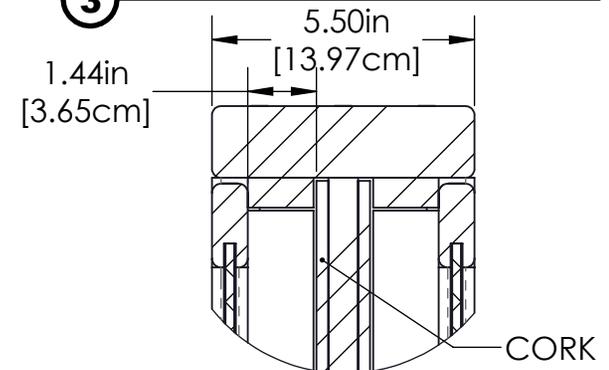

4 MESSAGE CENTER DEPTH DETAILS

HARDWARE: STAINLESS STEEL
MATERIAL: RECYCLED PLASTIC, ACRYLIC, 1/4" CORK

ALL DIMENSIONS ARE SHOWN IN INCHES