


A

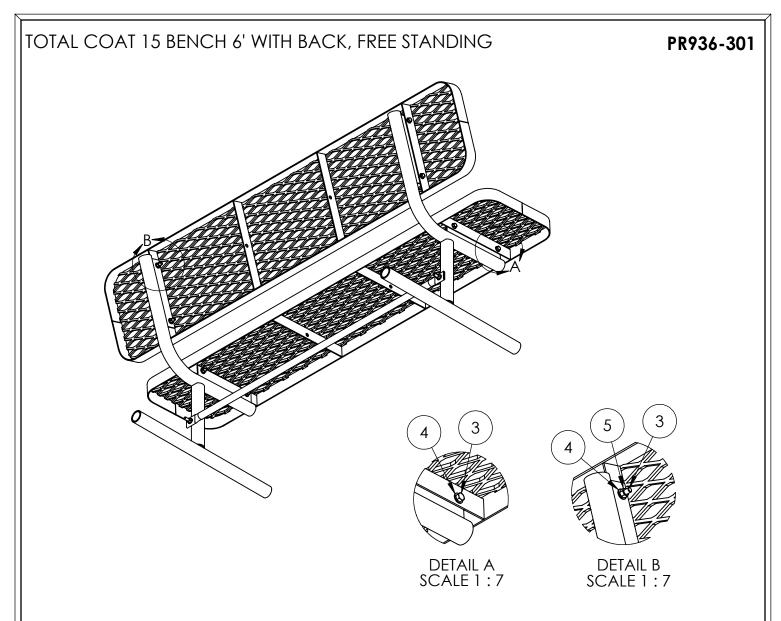

- 1. Drill plastic out of the mounting holes on the stands, seat and back using a 7/16" diameter drill bit.
- 2. Attach seat and back to the stands with fixings provided. Do not tighten up.
- 3. Attach the brace to the stands, set on level surface and tighten up all bolts.

<u>Tools List</u>

- 7/16" Drill bit
- 9/16" Socket
- 9/16" Wrench
- Imapct Gun (Optional)
- Drill

Periodic check of bolts tightness reccommended

In accordance to California law: WARNING - This product contains a chemical known to the State of California to cause cancer and birth defects or other reproductive harm.