



6 FT BENCH INSTRUCTIONS


BC1245 REV 2
10/4/2016

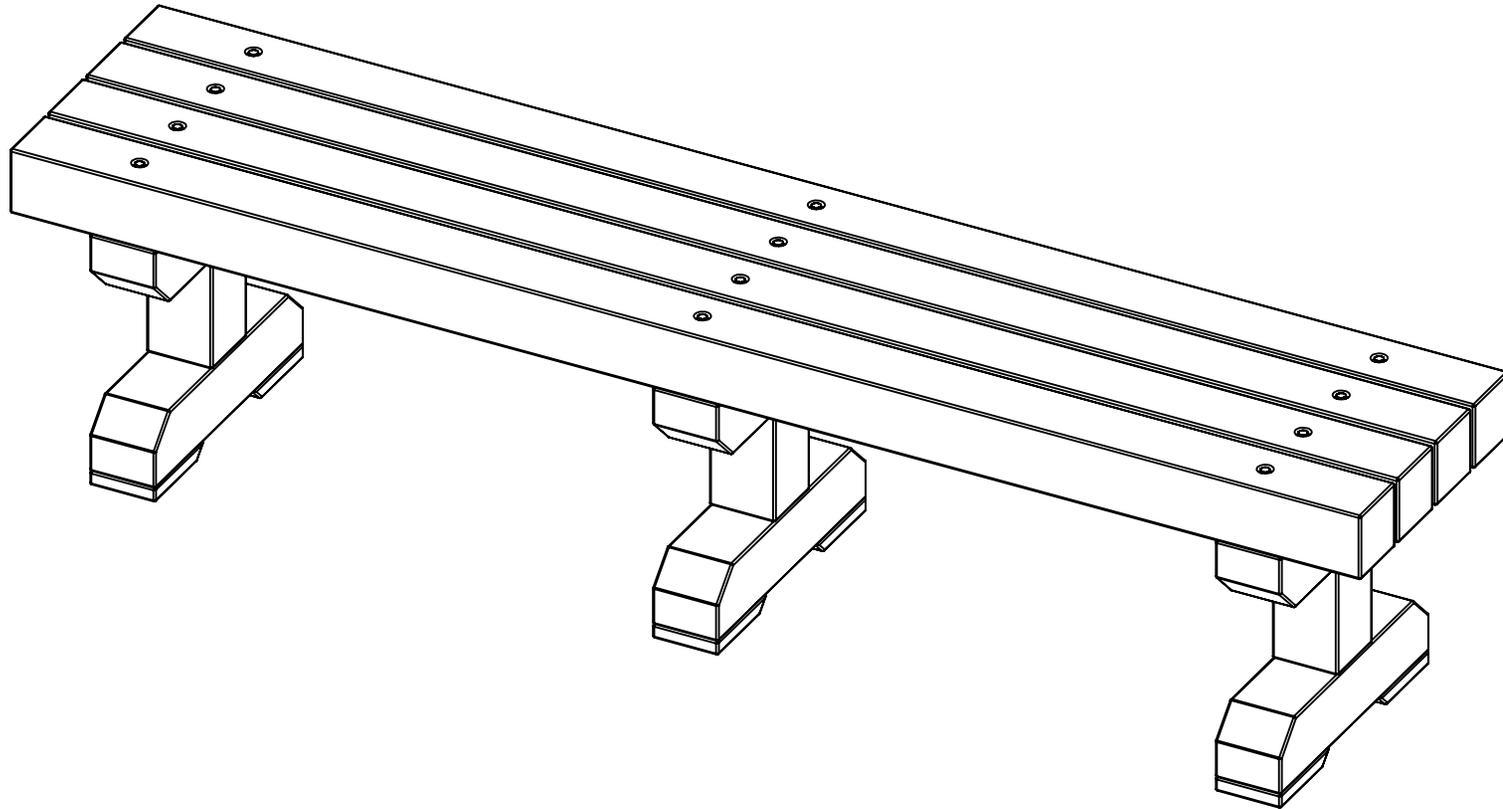


6 FT BENCH INSTRUCTIONS

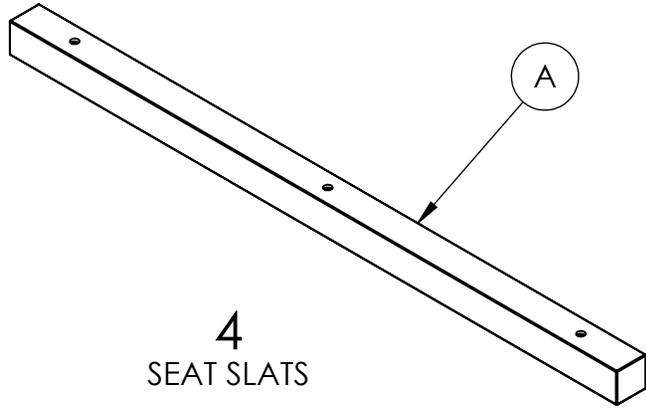


4
SEAT SLATS

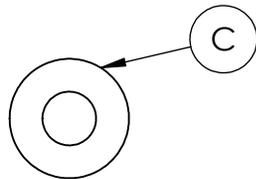


12
1/4" FLAT WASHER

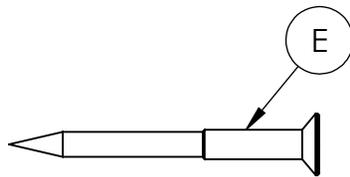


8
#8 x 1-5/8" SQ. DRIVE SCREW

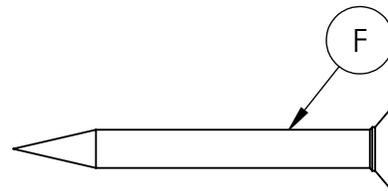


4
#12 x 2" SQ. DRIVE SCREW

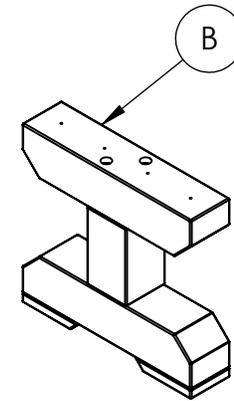

3
BENCH ENDS

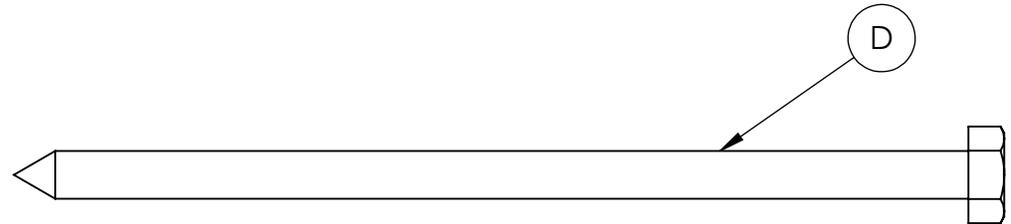

12
1/4" LAG SCREW

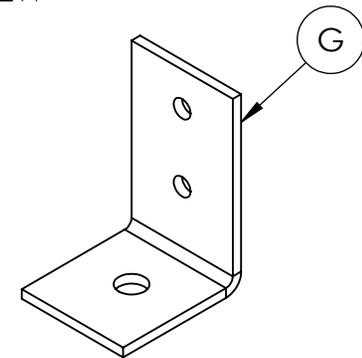

4
BENCH ANCHOR


REQUIRED TOOLS:

-(1) 7/16" SOCKET


-(1) #2 SQUARE DRIVE

**INCLUDED HARDWARE &
REQUIRED TOOLS FOR
ASSEMBLY**


6 FT BENCH INSTRUCTIONS

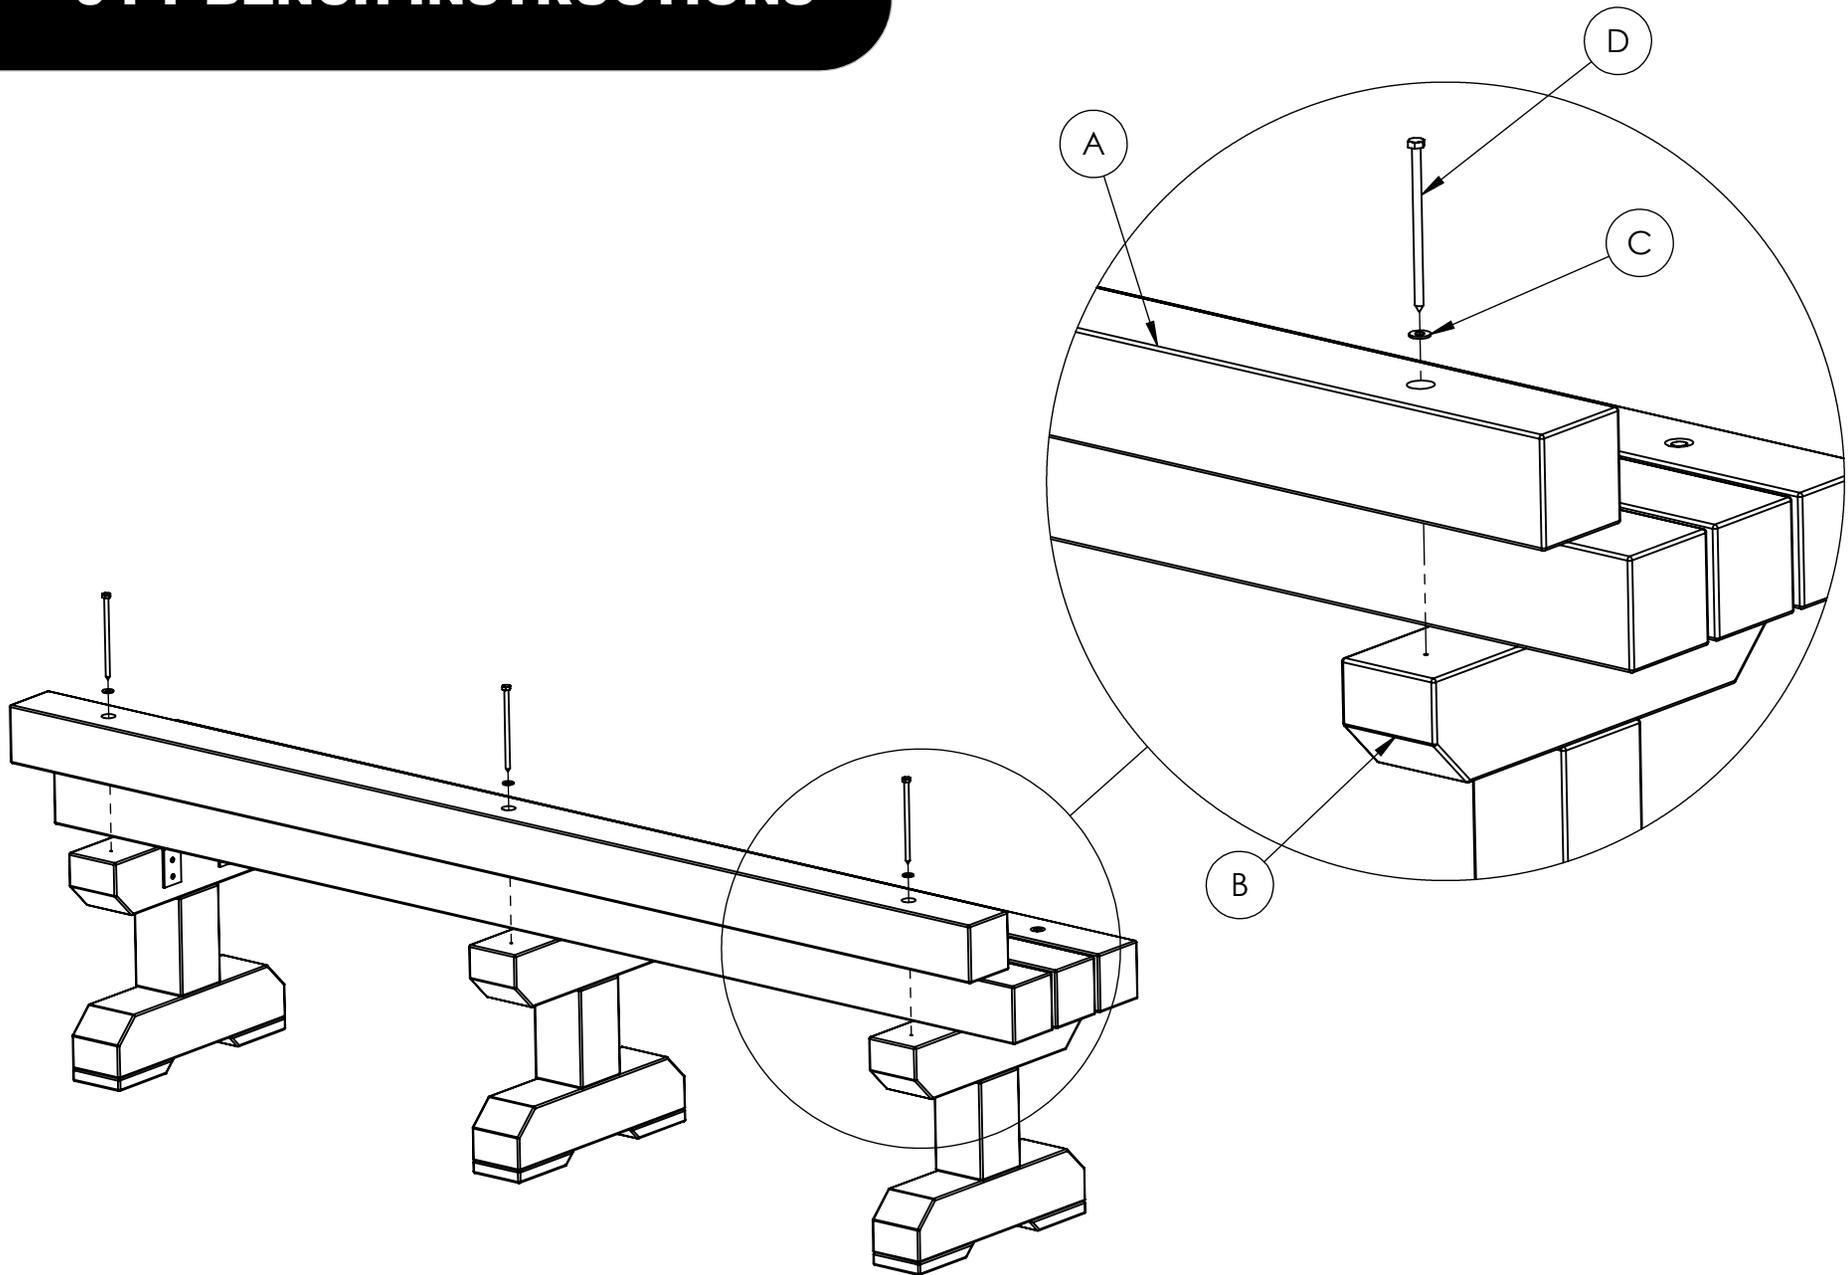

6FT BENCH INSTRUCTIONS

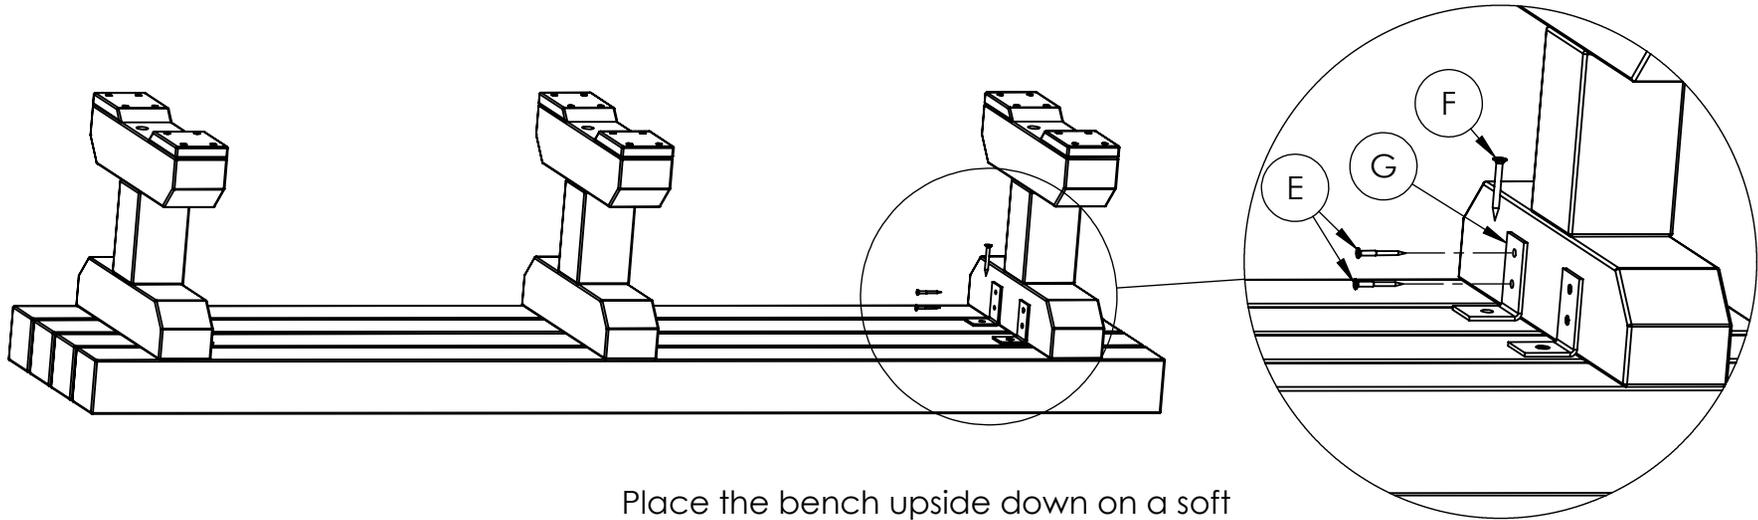

Place the bench upside down on a soft surface.
Locate Bench Anchors (G) off-center at each end of both center Seat Slats (A) to avoid hitting the Lag Screws (D).

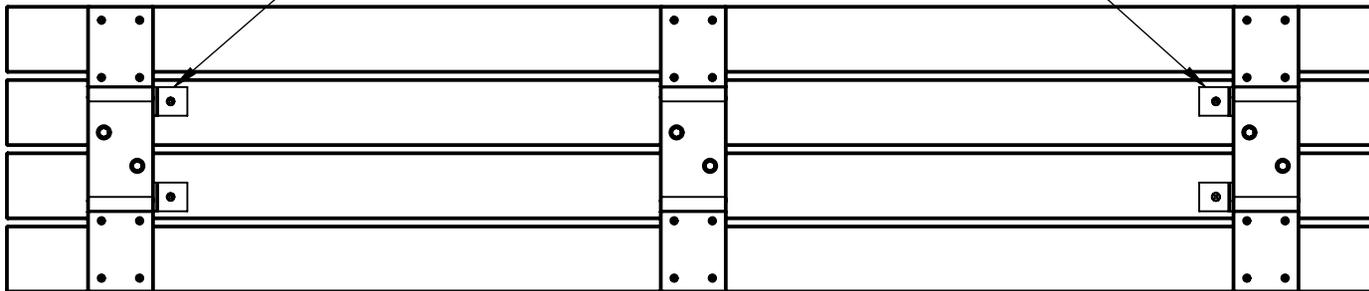

6 FT BENCH SPECIFICATIONS

