


# **BENCH INSTRUCTIONS**


## **BC1035**

Rev 2  
9/21/23

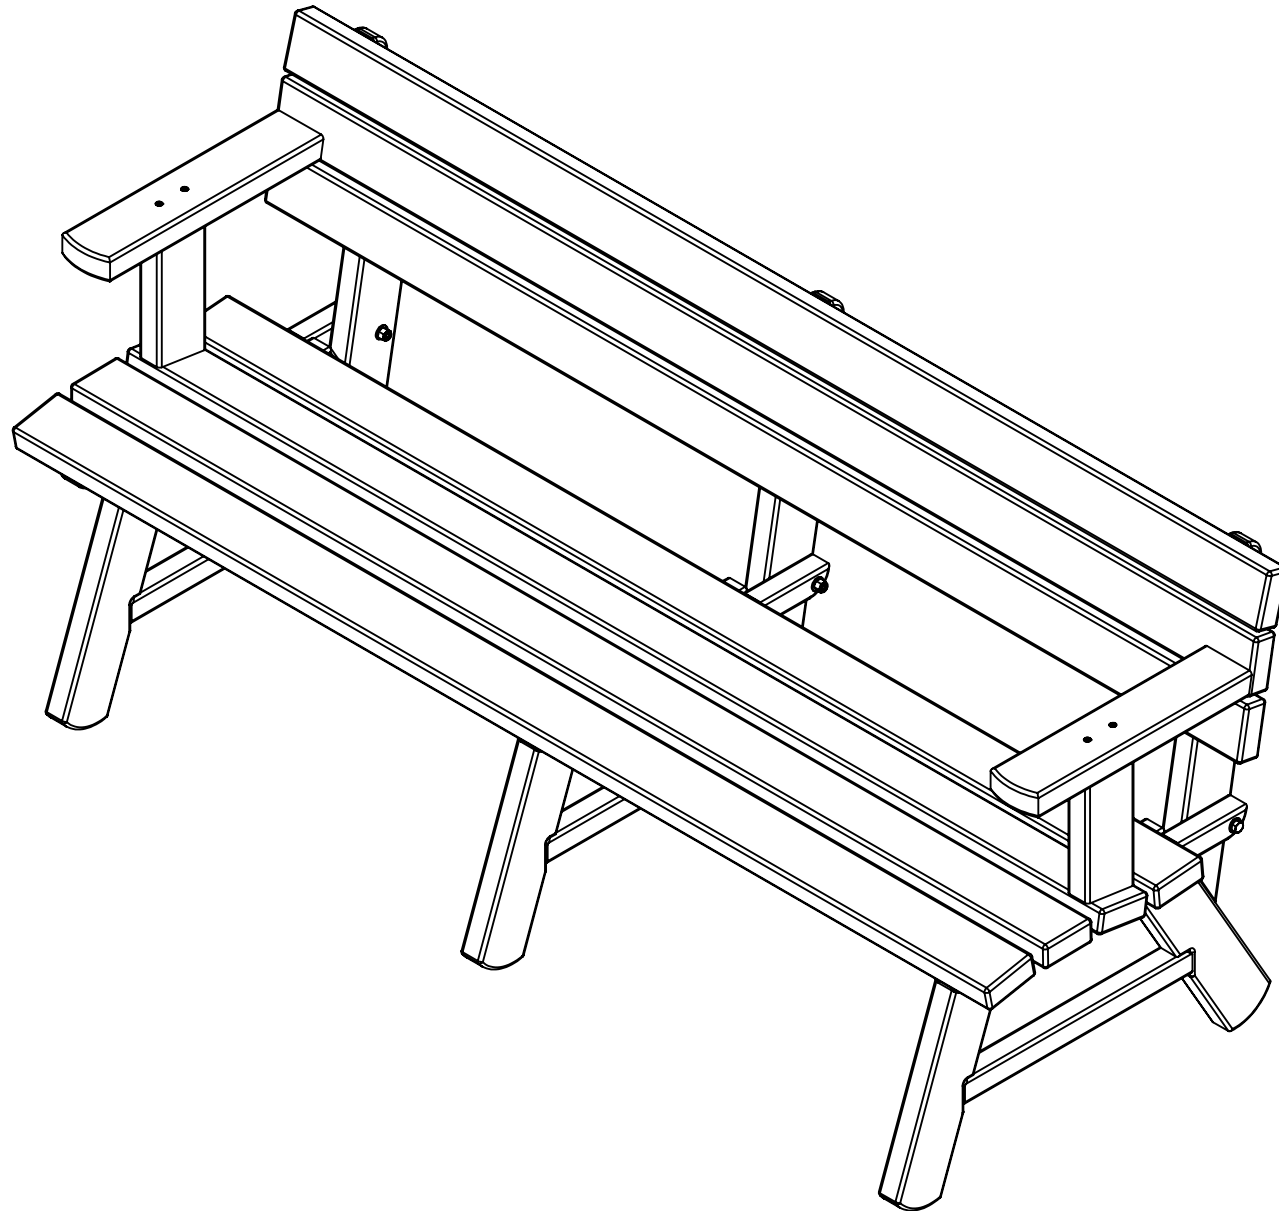


# BENCH INSTRUCTIONS


## BC1035

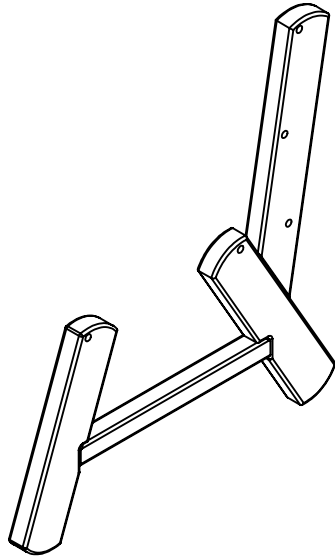


SEAT LEG ASSEMBLY  
ABC-A0019  
X3

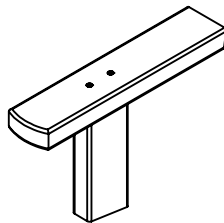

ARMREST ASSEMBLY  
ABC-A0028  
X2

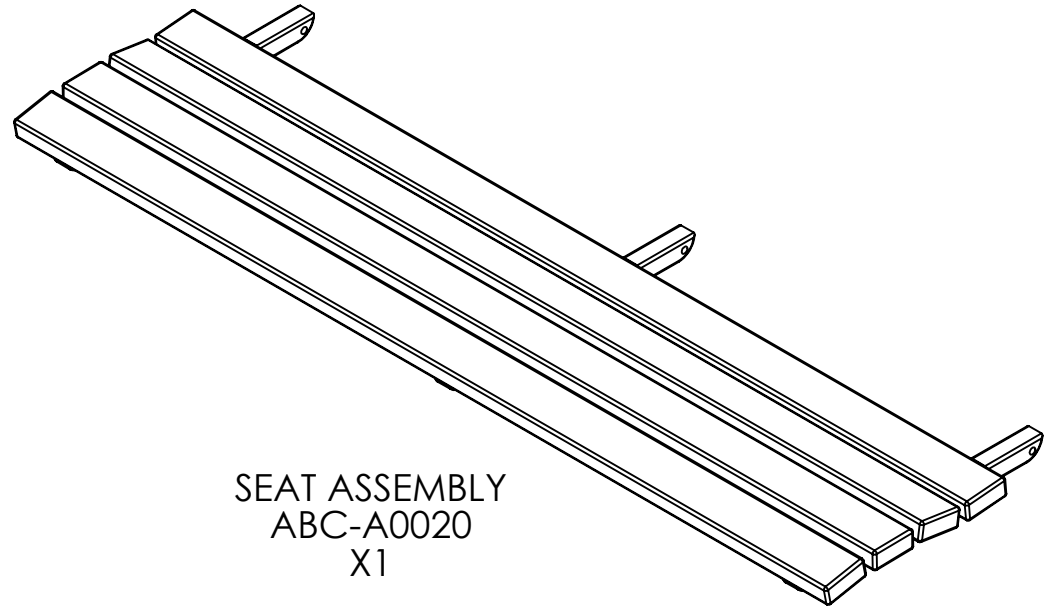


SEAT ASSEMBLY  
ABC-A0020  
X1

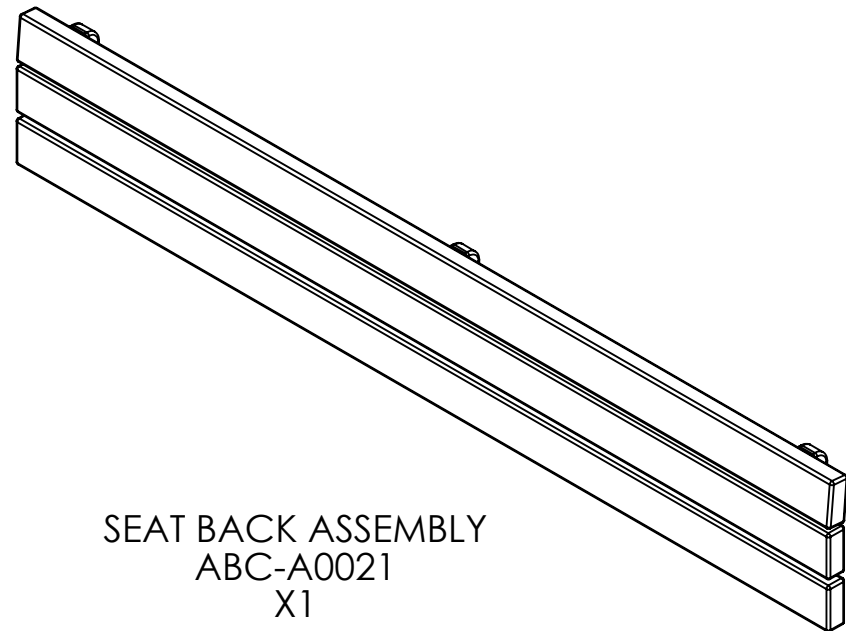


SEAT BACK ASSEMBLY  
ABC-A0021  
X1

## BENCH INSTRUCTIONS


### BC1035

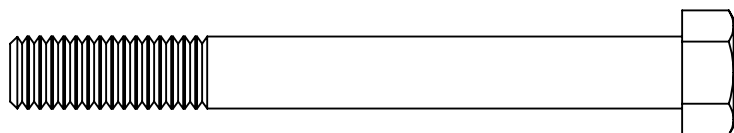


3/8-16 X 3.5"  
HEX HEAD BOLT  
X15  
F0001



#10 X 2.5" SQUARE DRIVE SCREW  
X8  
F0004

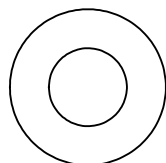

3/8 FLAT WASHER  
X30  
F0002




3/8-16 NYLOCK NUT  
X15  
F0003

**REQUIRED TOOLS:**  
**-(2) 9/16" WRENCHES**  
**-(1) #2 SQUARE DRIVE BIT**

**INCLUDED HARDWARE &  
REQUIRED TOOLS FOR  
ASSEMBLY**


# BENCH INSTRUCTIONS

## BC1035

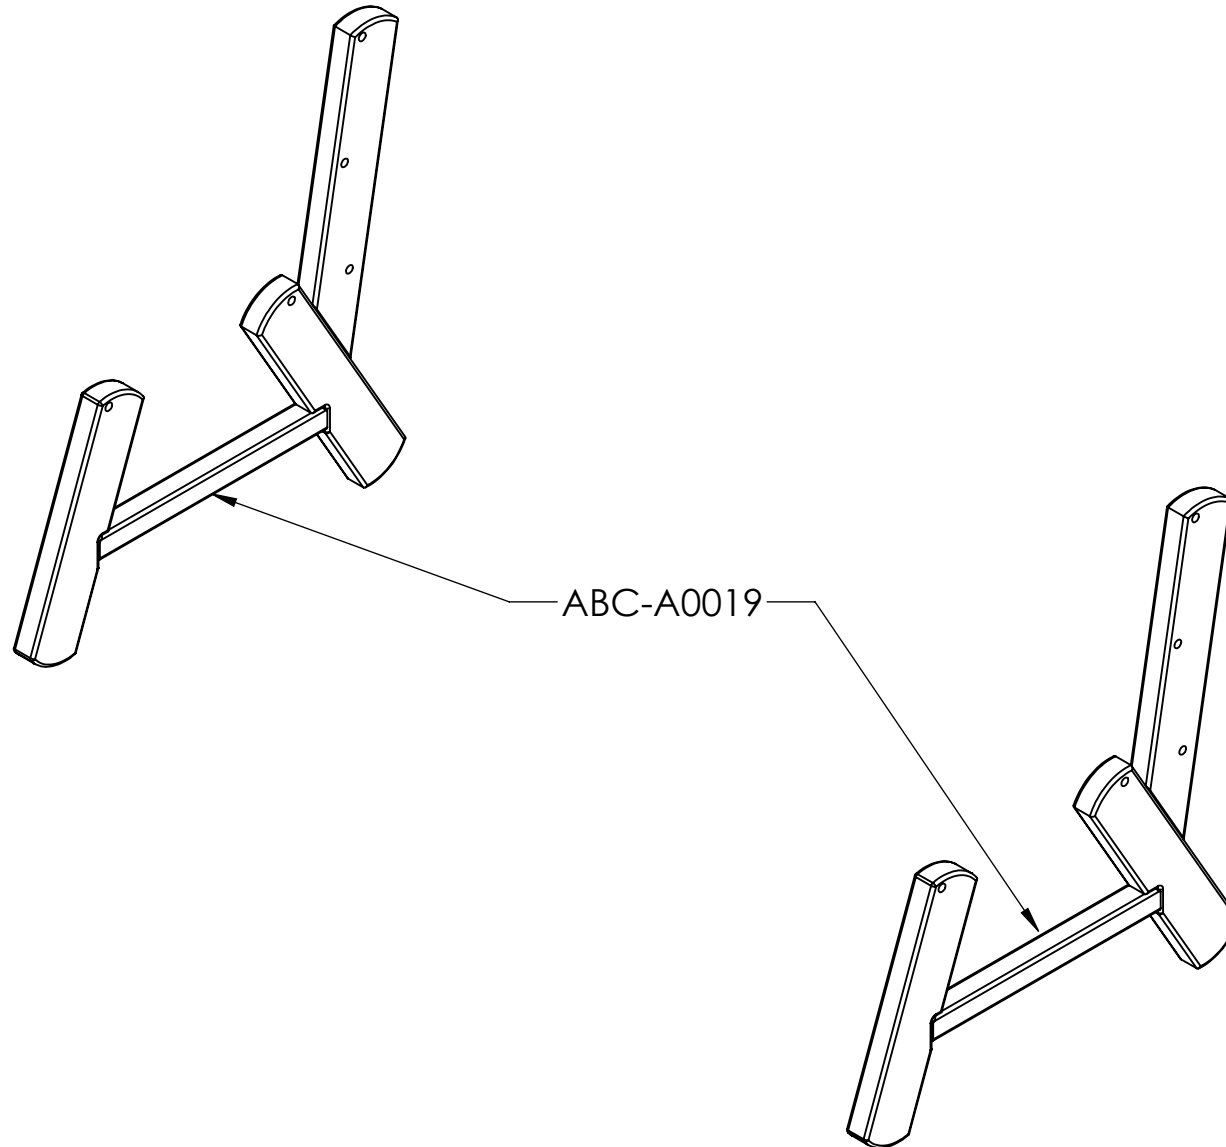

# BENCH INSTRUCTIONS




## BC1035

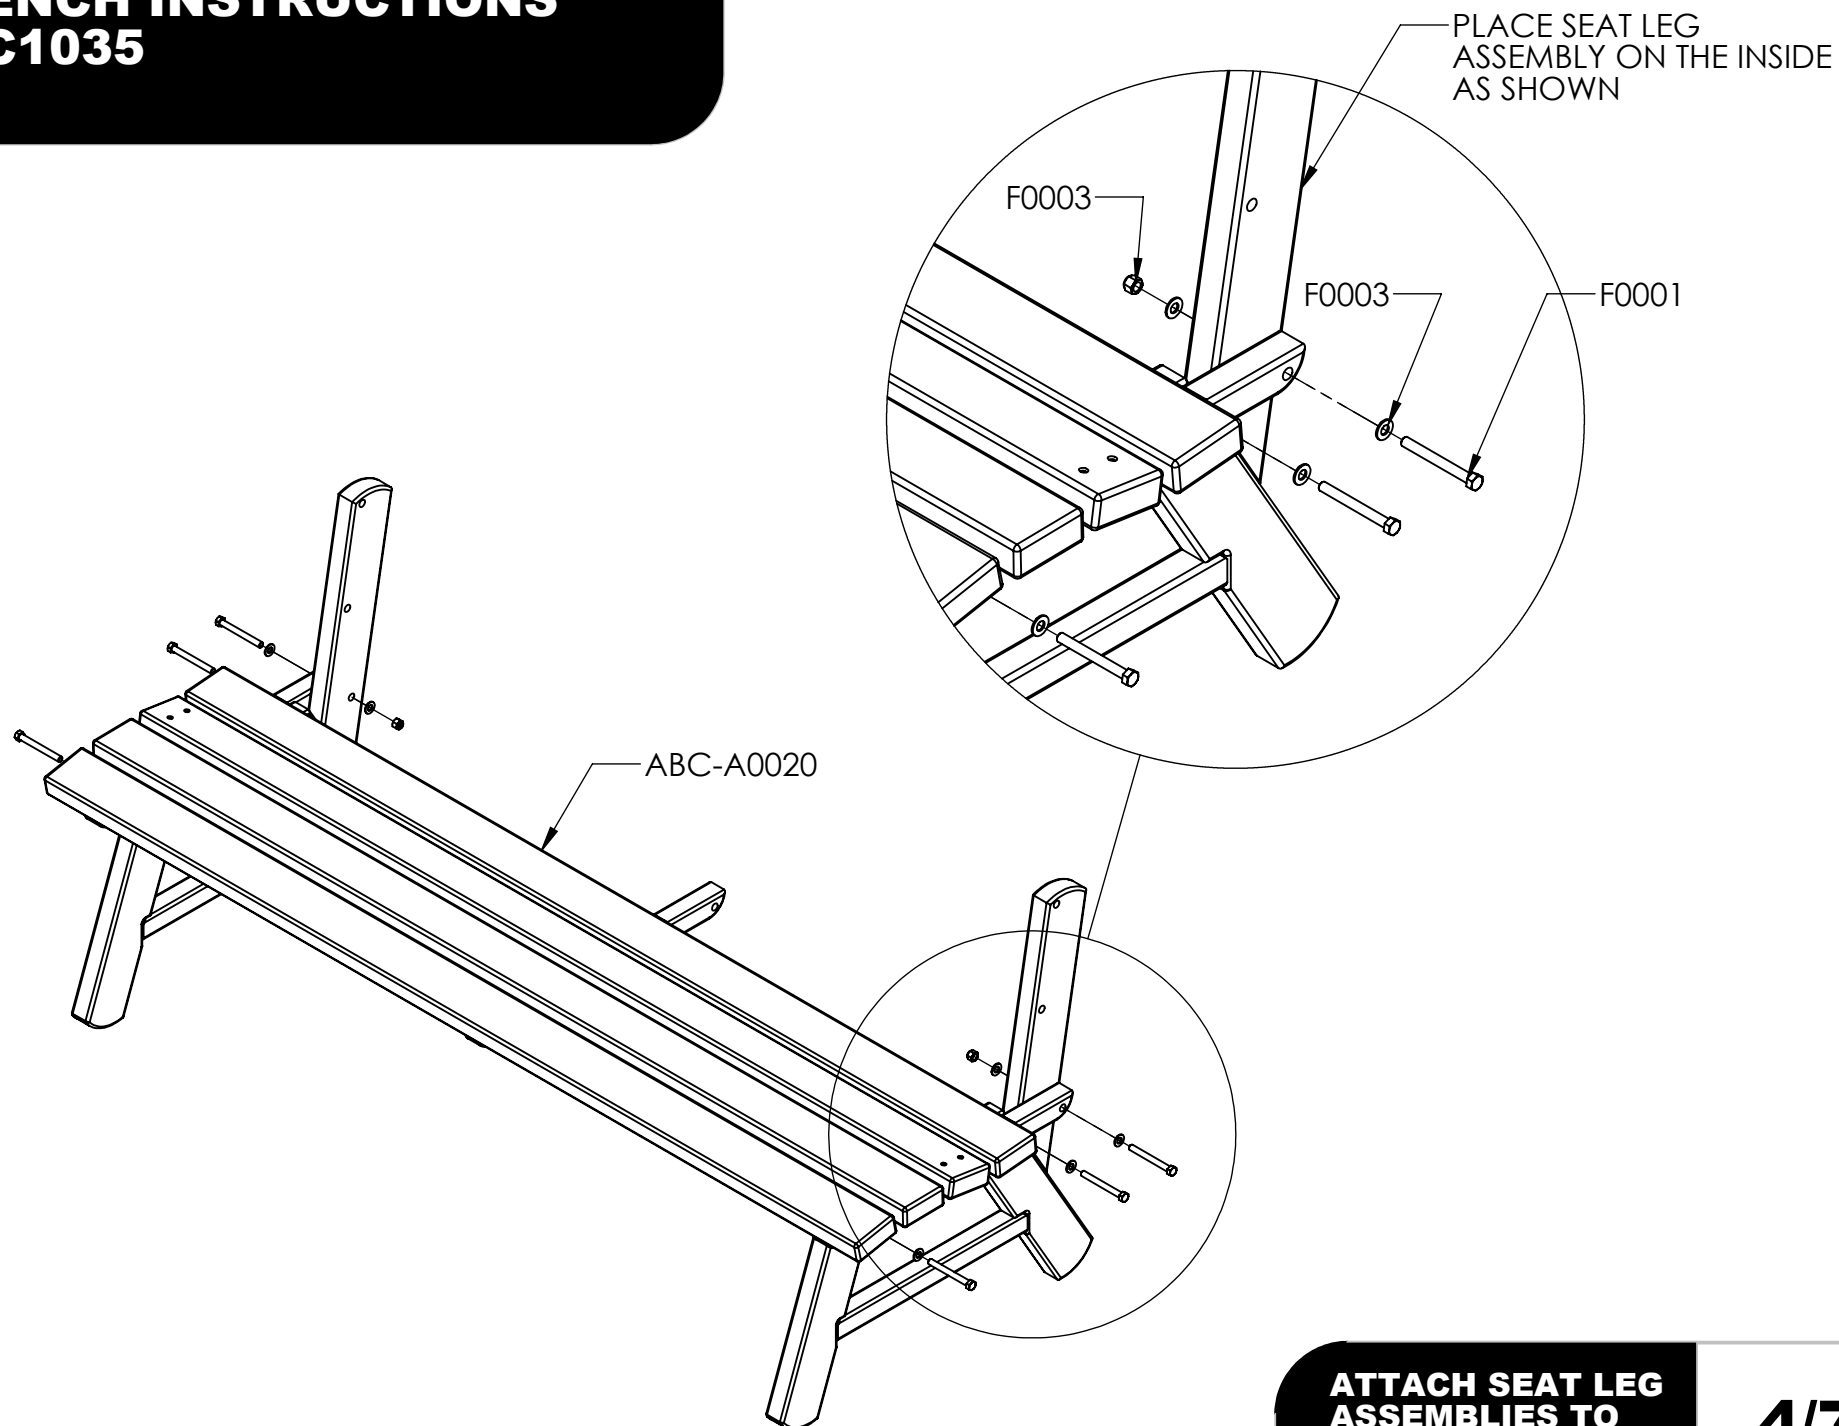

**ATTACH SEAT LEG  
ASSEMBLIES TO  
SEAT ASSEMBLY**

# BENCH INSTRUCTIONS

## BC1035

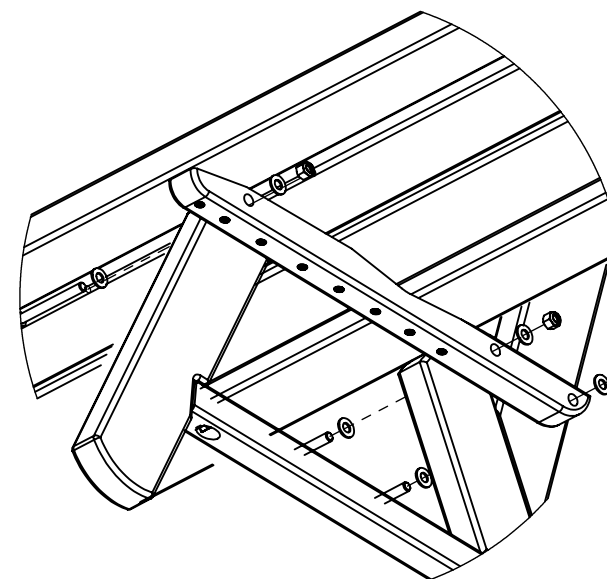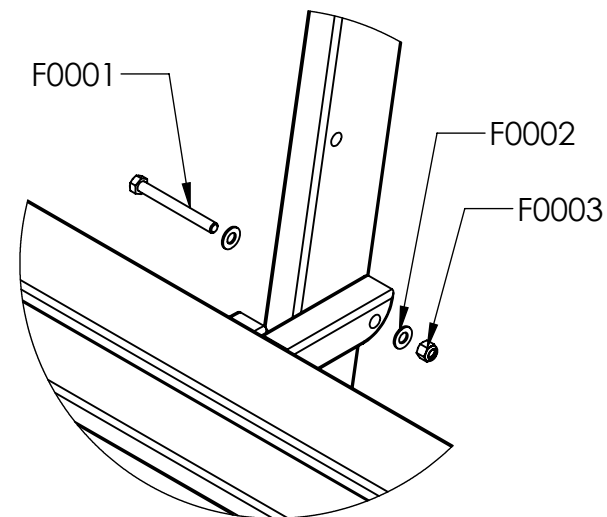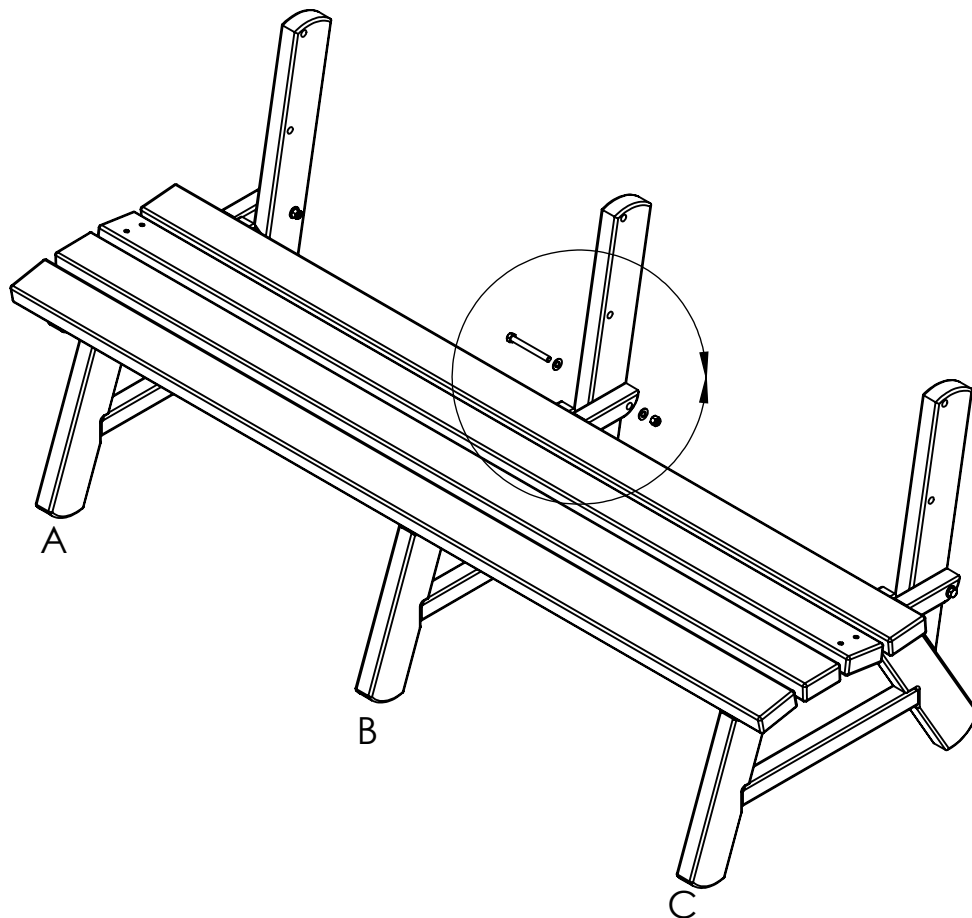

Underside Detail View


NOTE: BE SURE SPACING BETWEEN  
SEAT LEG ASSEMBLY A & B IS THE SAME  
AS THE SPACING AS B & C.

**ATTACH MIDDLE  
LEG ASSEMBLY TO  
SEAT ASSEMBLY**

**5/7**


# BENCH INSTRUCTIONS

## BC1035

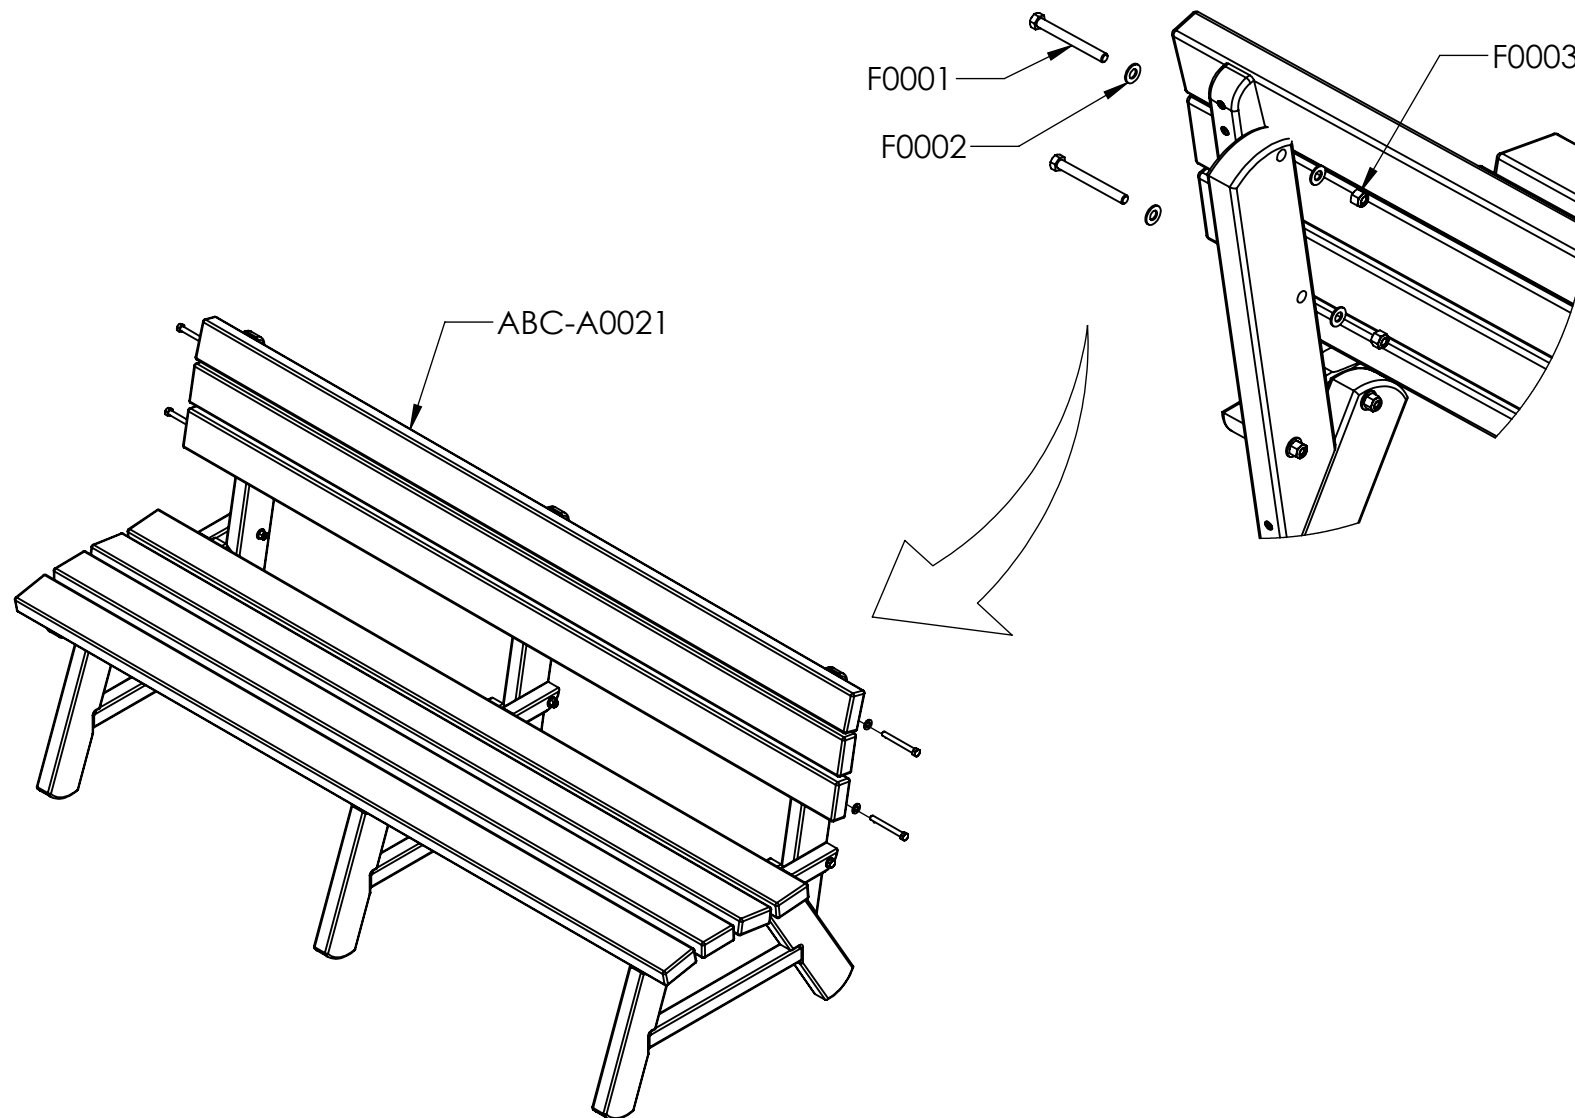

## BENCH INSTRUCTIONS

### BC1035

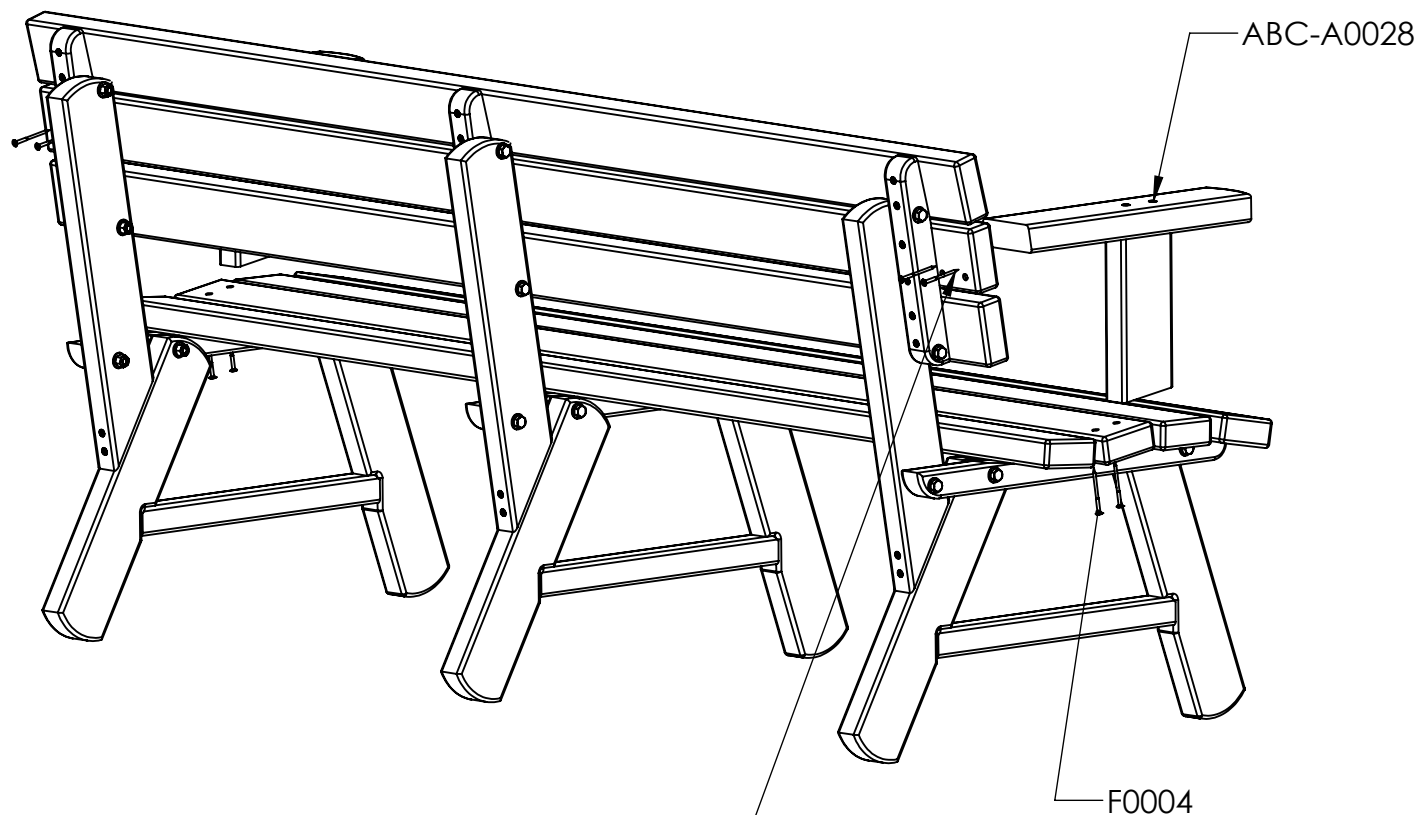


ATTACH ARMREST THROUGH PREDRILLED HOLES  
ON SEAT AND BACK SLATS

**ATTACH ARMRESTS  
TO SEAT AND BACK**


**7/7**



# BENCH SPECIFICATIONS BC1035

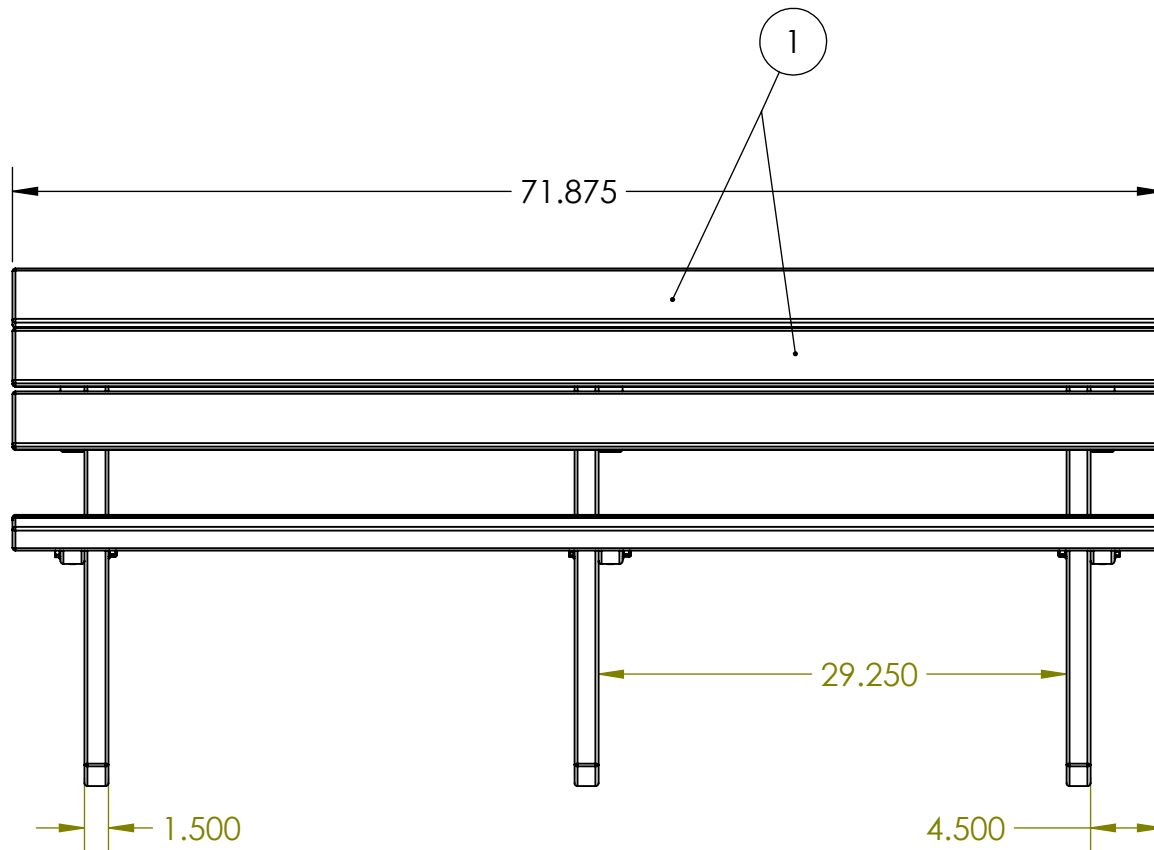


**FRONT**

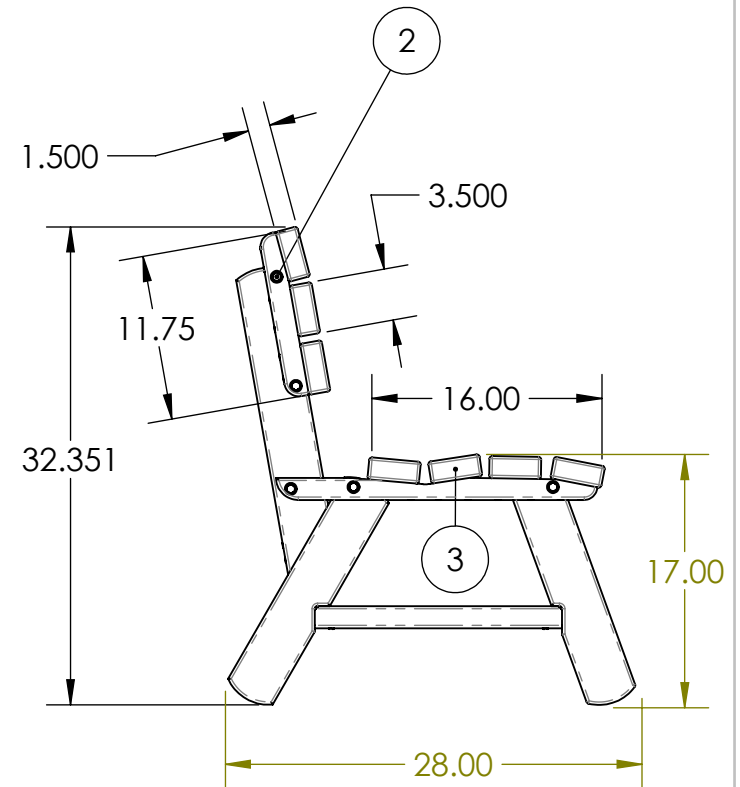

**SIDE**

NOTE: ALL MATERIAL IS RECYCLED PLASTIC LUMBER UNLESS NOTED  
ALL DIMENSIONS SHOWN IN INCHES

# BENCH SPECIFICATIONS BC1035

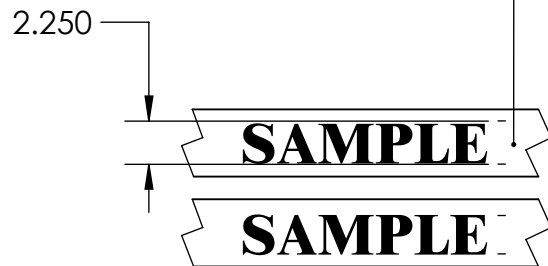

① ENGRAVING TEXT DETAILS

1 OR 2 BOARD ENGRAVING AVAILABLE

2-1/4" GLOSSY LETTERING INLAY

32 CHARACTERS PER BOARD MAX

AVAILABLE COLORS INCLUDE:

*GRAY BENCH/BLACK LETTERING*


*TAN BENCH/BLACK LETTERING*

*CEDAR BENCH/BLACK LETTERING*


*BROWN BENCH/TAN LETTERING*

*GREEN BENCH/TAN LETTERING*

*BLACK BENCH/GRAY LETTERING*

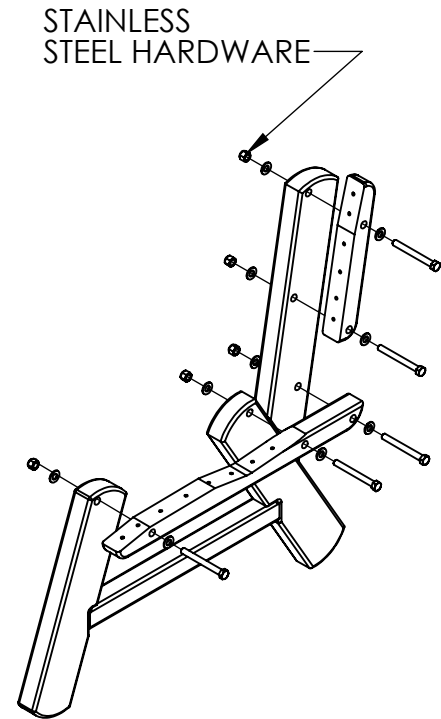

② HARDWARE DETAILS

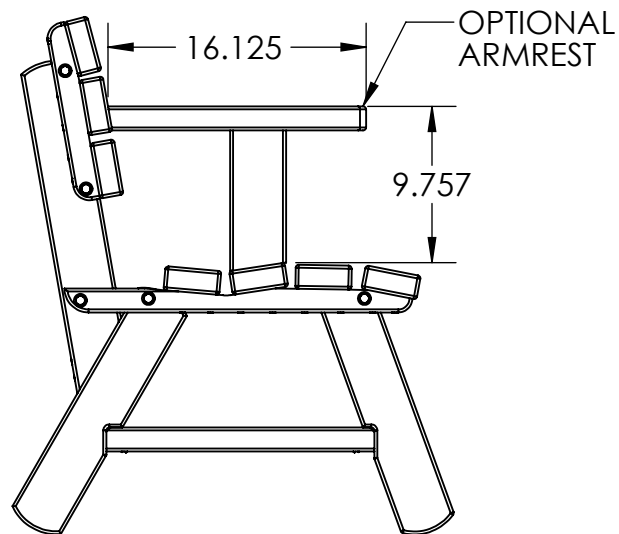

③ BENCH WITH ARMREST DETAILS