



# Backless Reflection Bench BC2320

Rev #1  
11/20/23

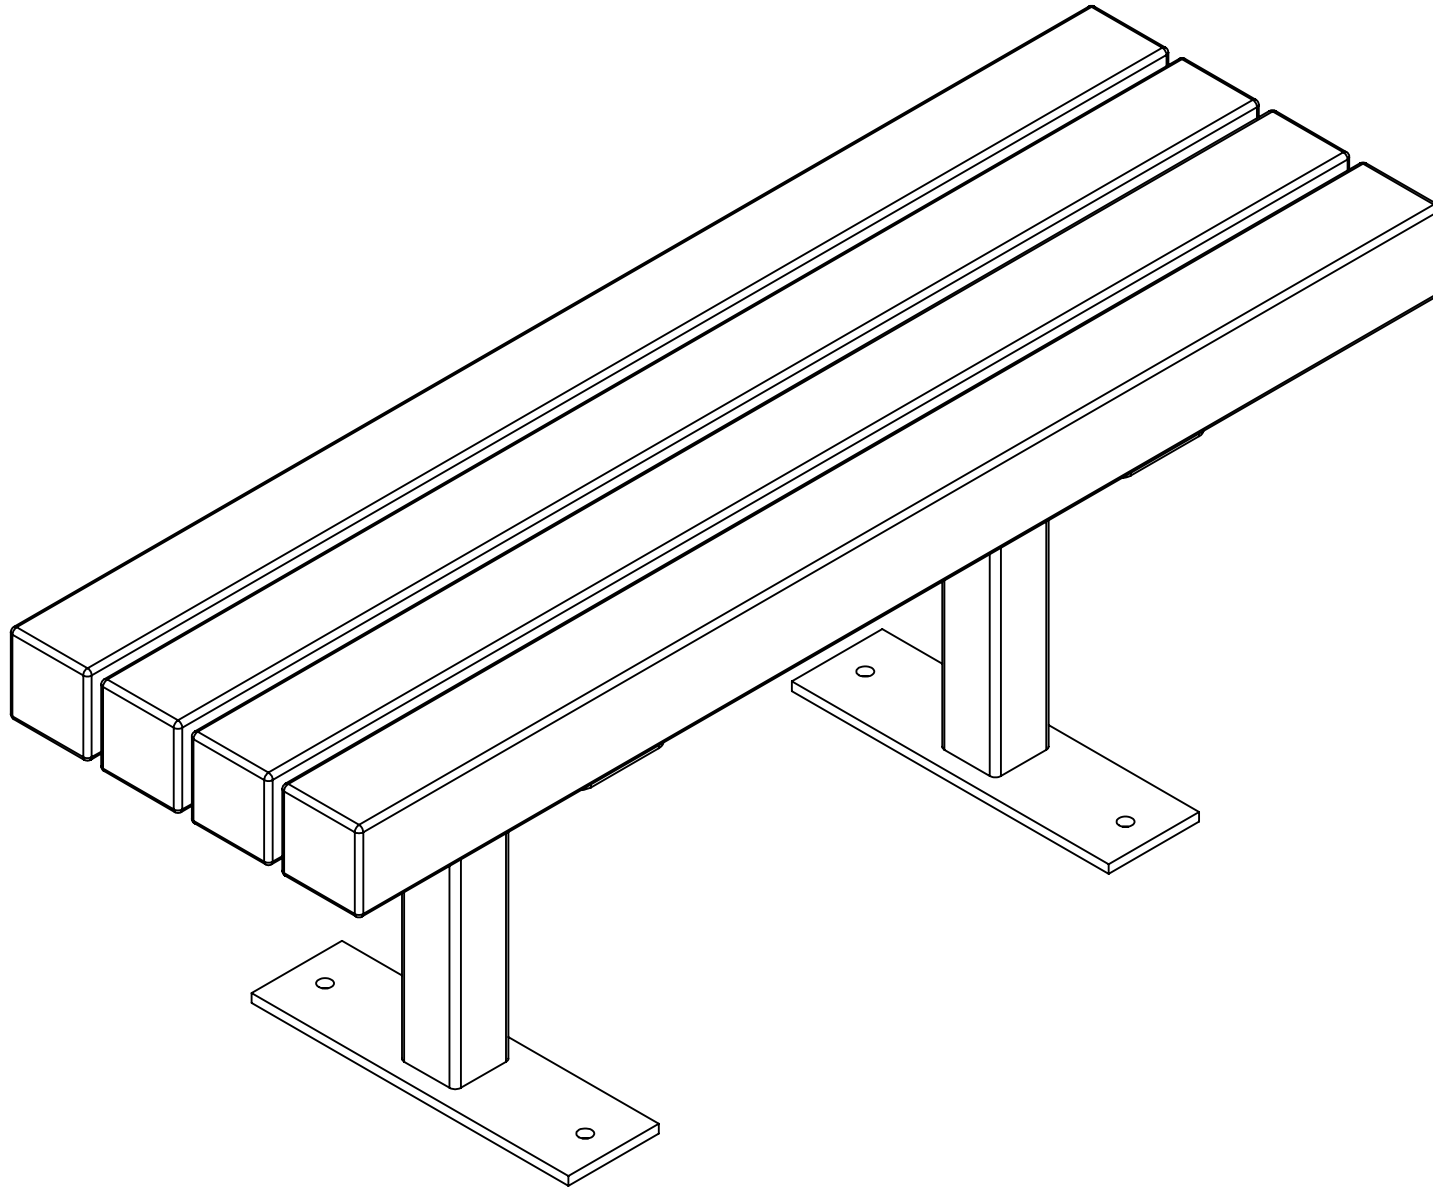


## Backless Reflection Bench BC2320

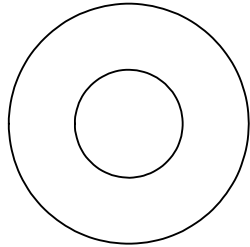

**8**

1/4" Flat Washer




**8**

1/4" x 2.5" Lag Screw


### REQUIRED TOOLS:

- (1) SCREW GUN
- (1) 7/16" SOCKET

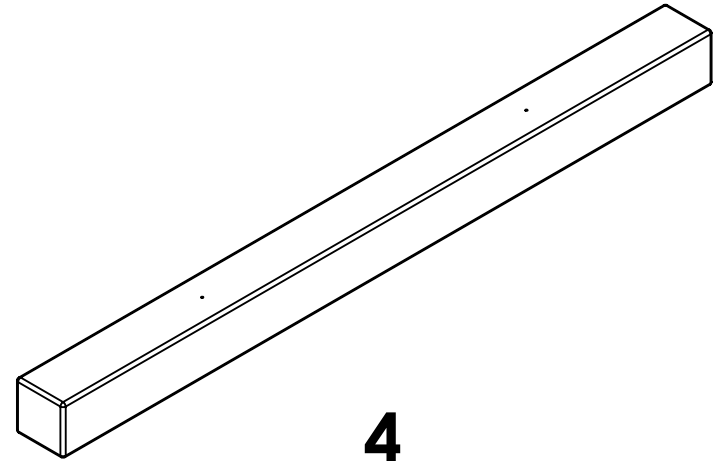

**4**

Seat Slat

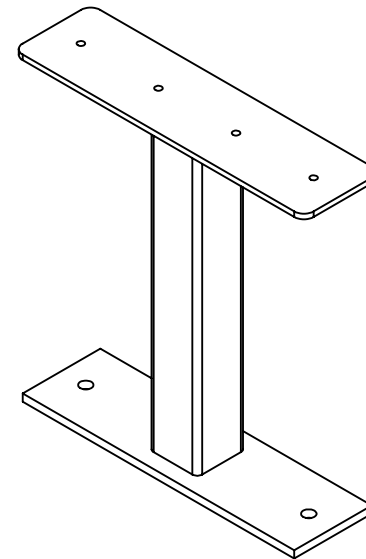

**2**

Surface Mount Bench End

INCLUDED HARDWARE &  
TOOLS REQUIRED FOR  
ASSEMBLY


**2/4**

## Backless Reflection Bench BC2320

# 1


### Assembly:

- Place the seat slats with the pilot holes facing up off the ground.
- Line up the holes on the bench end with the pilot holes on the seat slats
- Secure the bench ends to the seat with the included washers and lag screws.

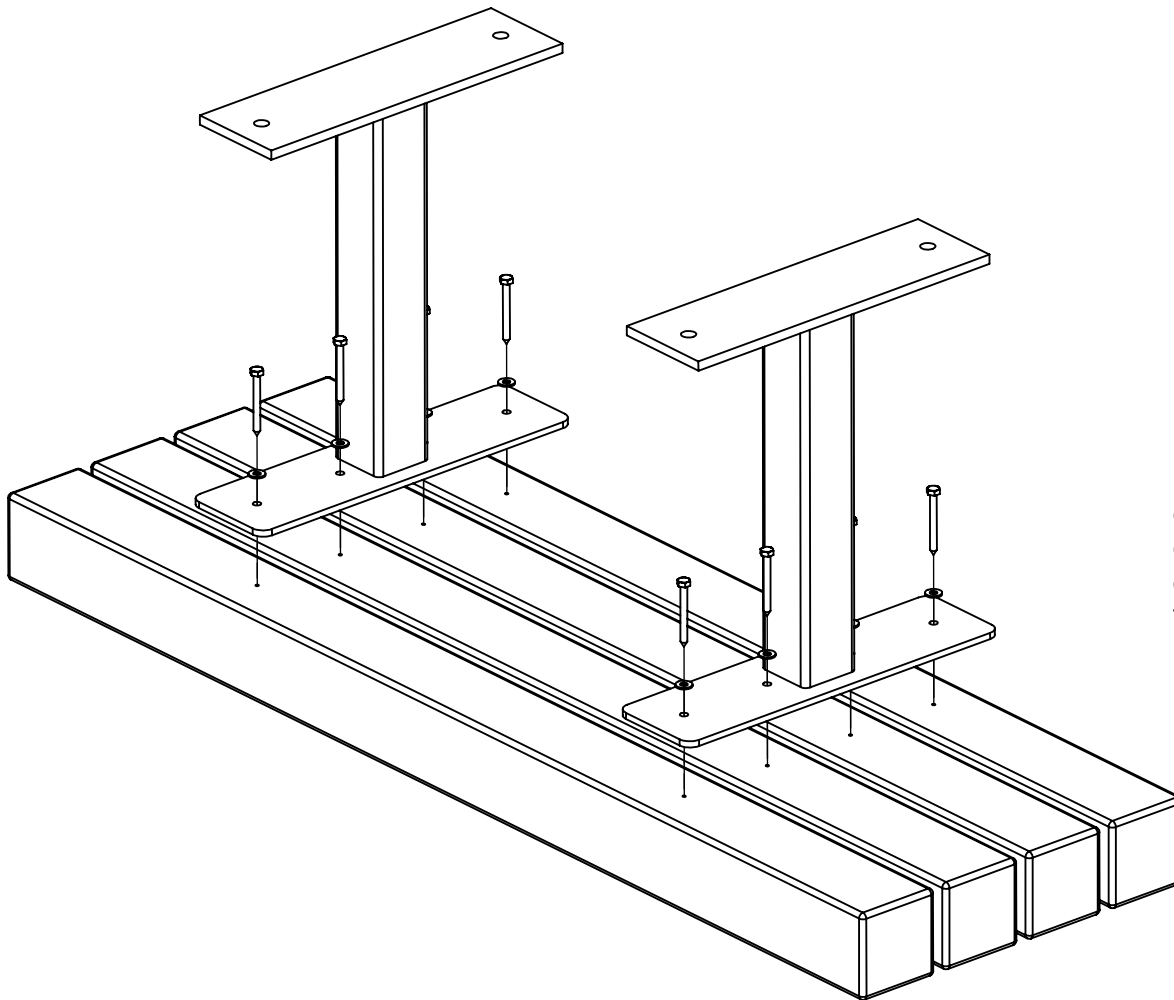

**KEEP BOARD SPACING  
APPROXIMATELY 1/2"**





**NOTE:** Make sure BOTH ends of the bench are square before fully tightening everything down. If possible, secure one of the short ends of the bench against a wall or other flat surface.

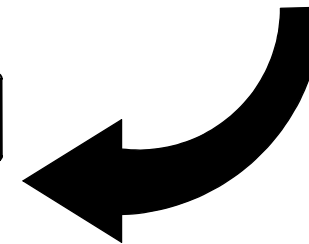

# 3/4

# Backless Reflection Bench BC2320 SPECS

Rev #1  
11/20/23

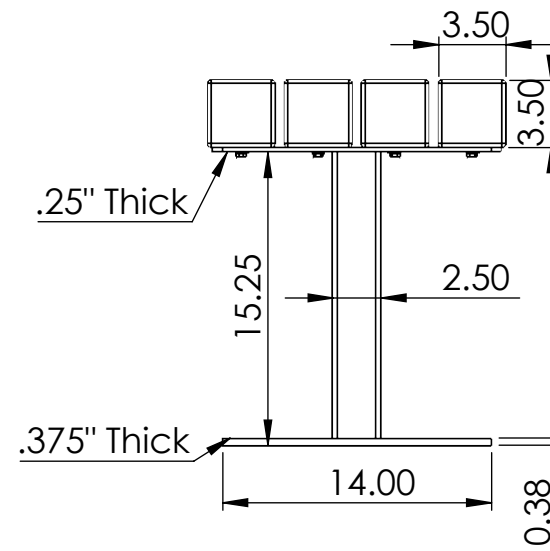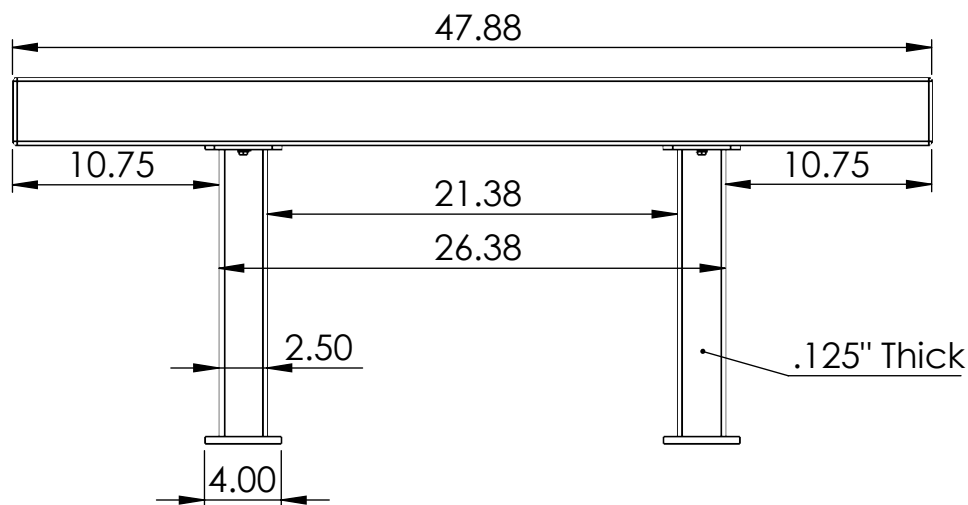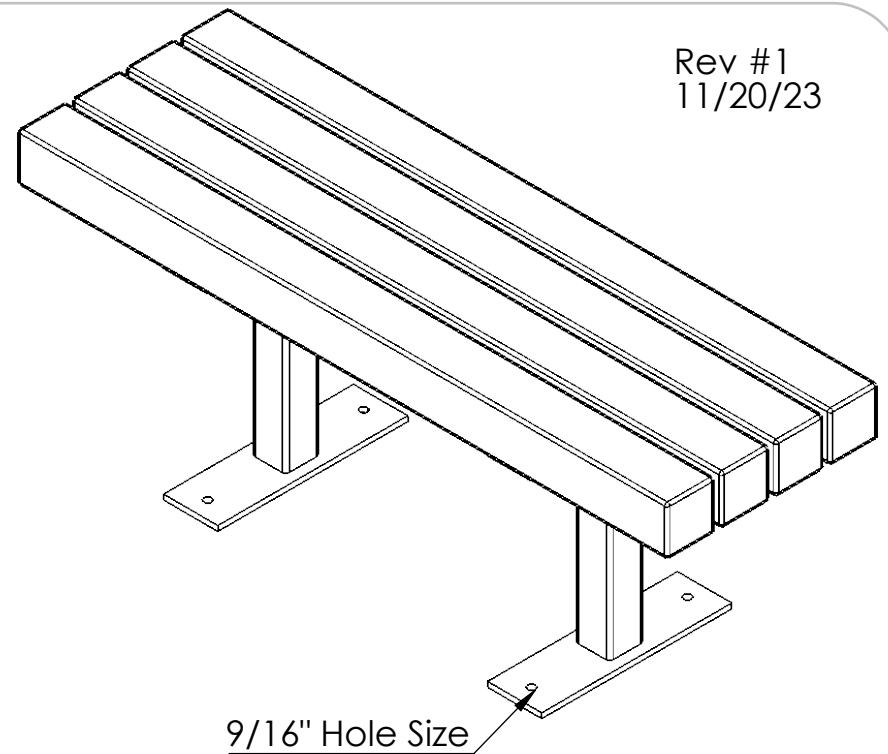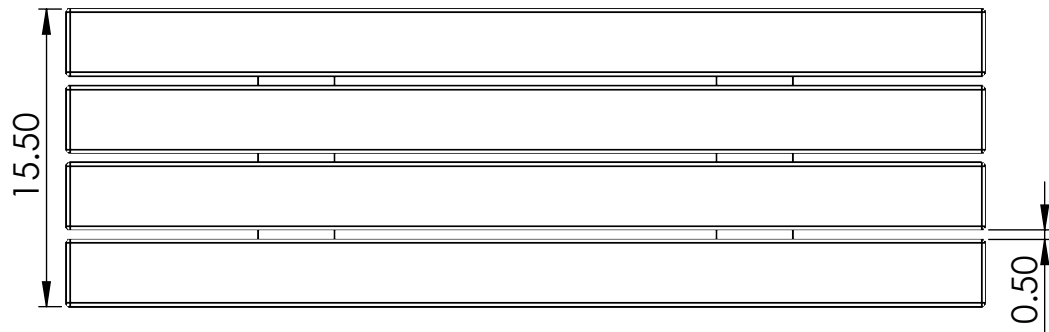

## CONSTRUCTION MATERIALS:

Recycled Plastic, Powder Coated Steel

## HARDWARE:

Stainless Steel