



Backless Reflection Bench BC2380

Rev #1
11/27/23

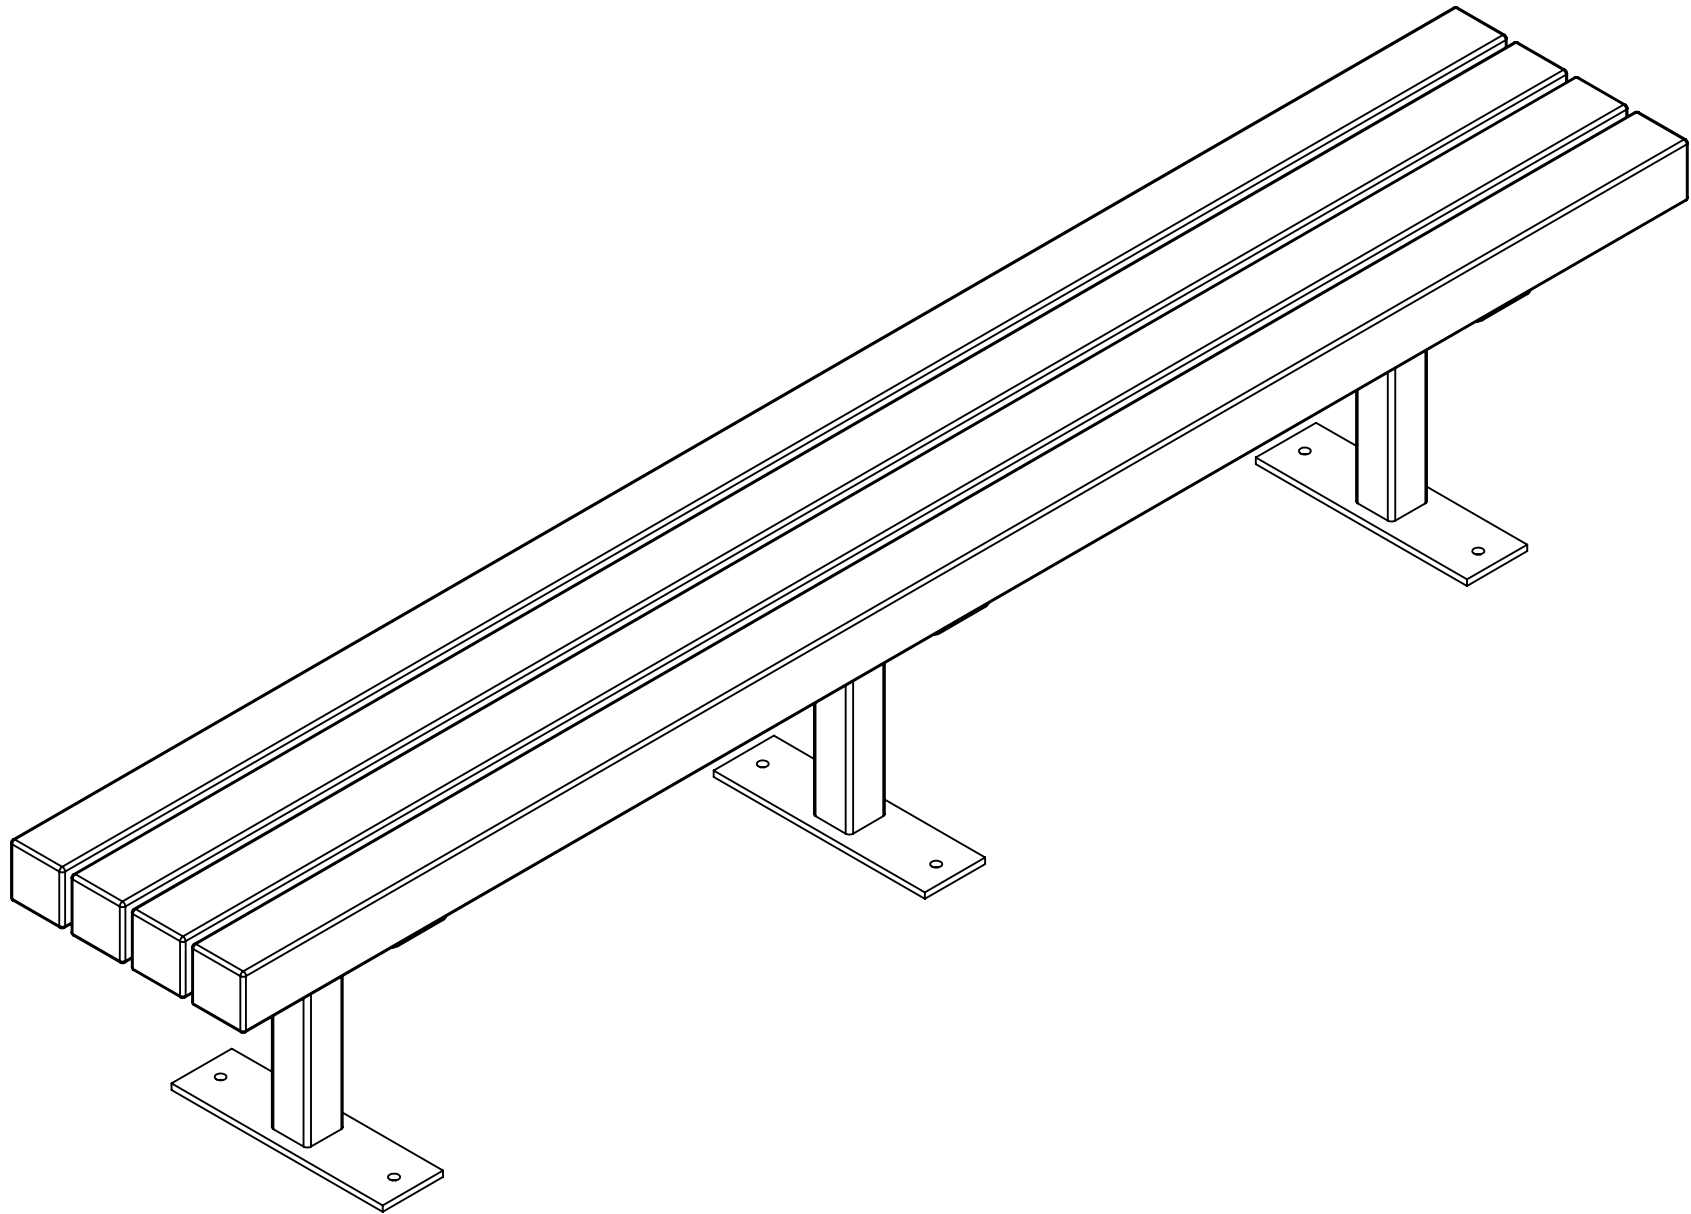


Backless Reflection Bench BC2380

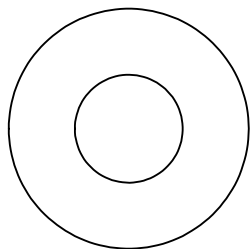


12

1/4" Flat Washer




12

1/4" x 2.5" Lag Screw

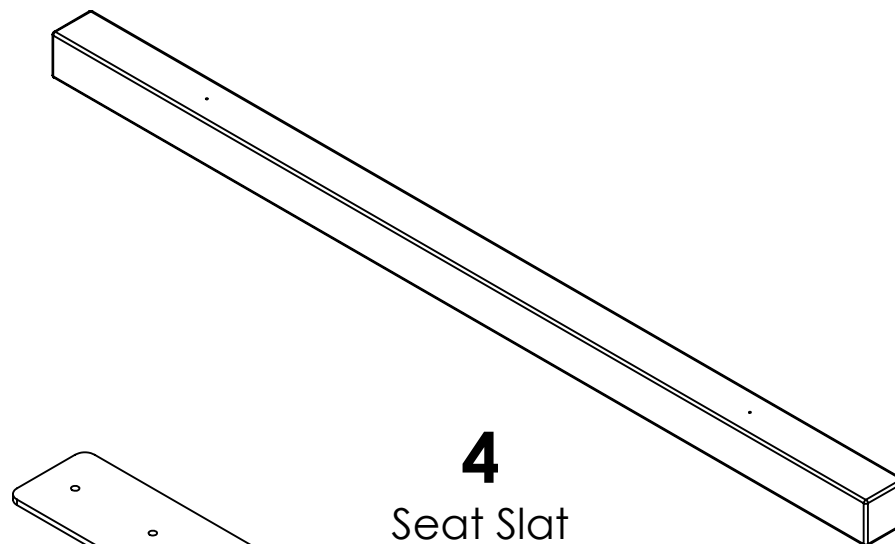

4

Seat Slat

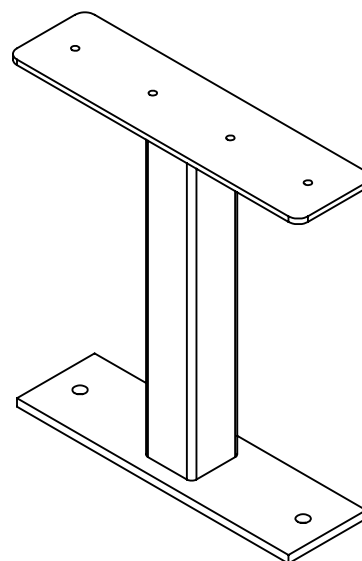

3

Surface Mount Bench End

REQUIRED TOOLS:

- (1) SCREW GUN
- (1) 7/16" SOCKET


INCLUDED HARDWARE &
TOOLS REQUIRED FOR
ASSEMBLY

2/4

Backless Reflection Bench BC2380

Assembly:

- Place the seat slats with the pilot holes facing up off the ground.
- Line up the holes on the bench end with the pilot holes on the seat slats
- Secure the bench ends to the seat with the included washers and lag screws.



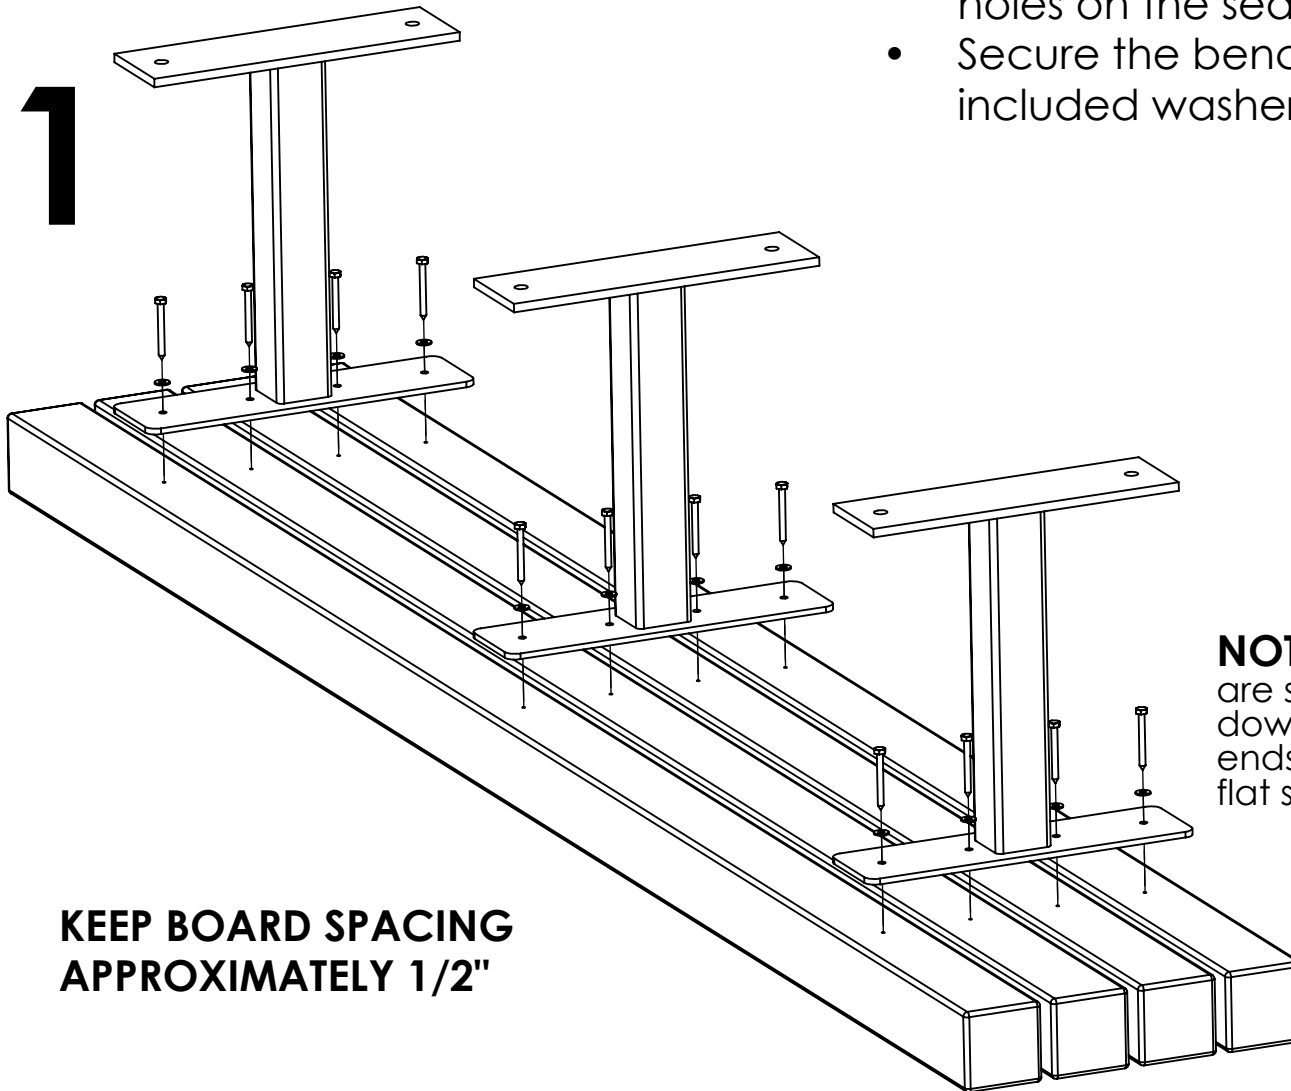


NOTE: Make sure BOTH ends of the bench are square before fully tightening everything down. If possible, secure one of the short ends of the bench against a wall or other flat surface.

**KEEP BOARD SPACING
APPROXIMATELY 1/2"**

Backless Reflection Bench BC2380 SPECS

Rev #1
11/27/23

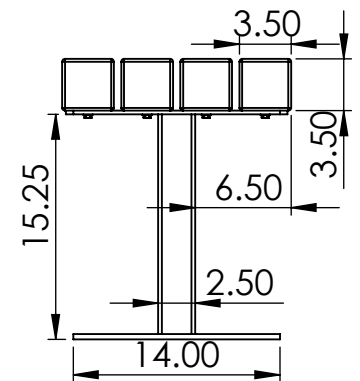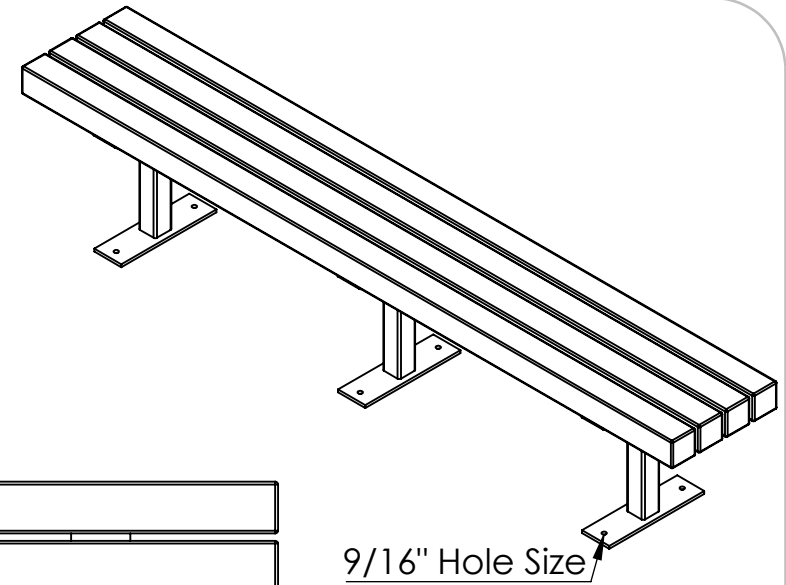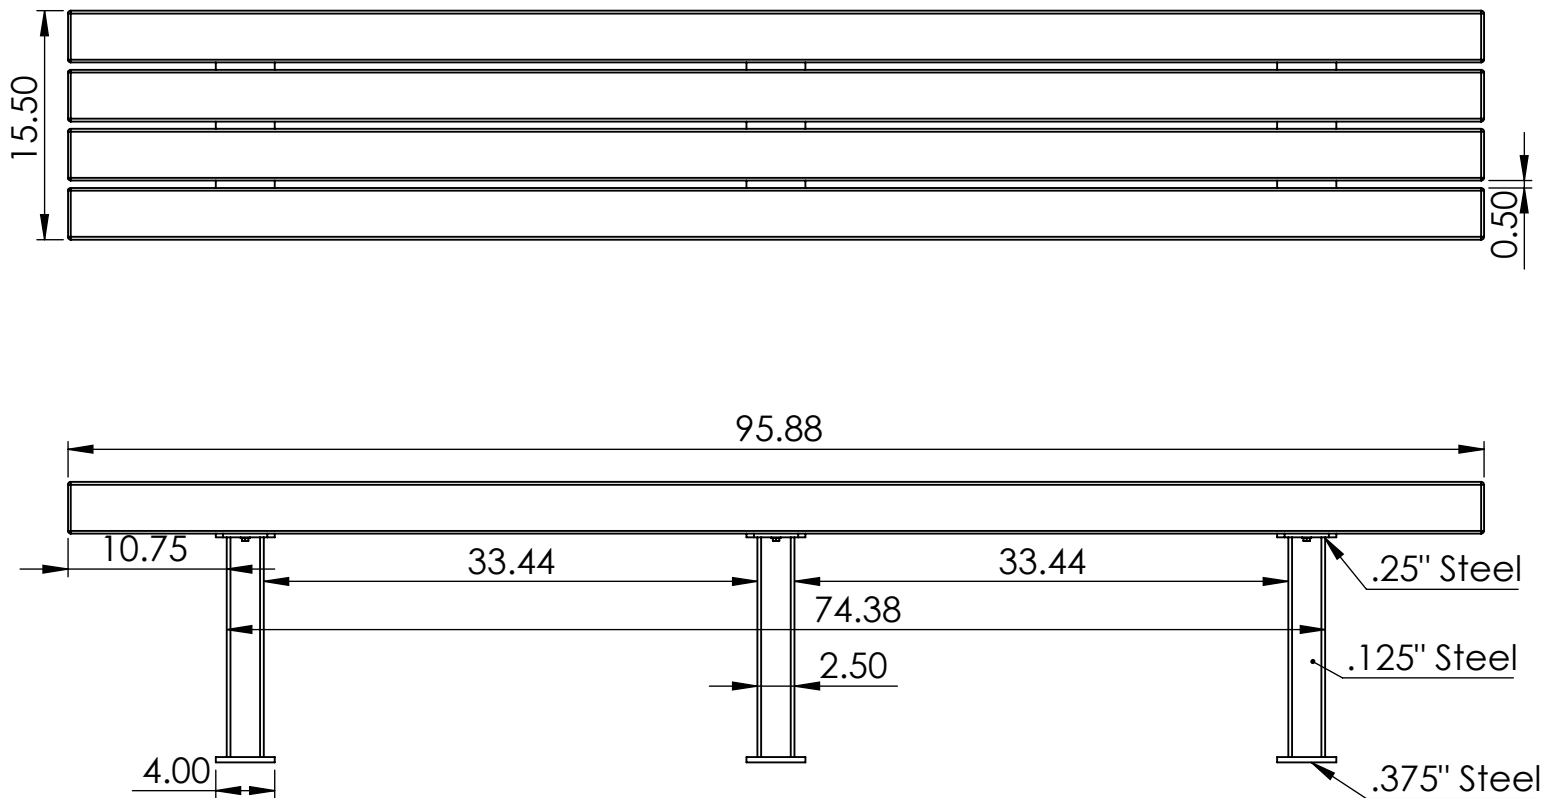

CONSTRUCTION MATERIALS:

Recycled Plastic, Powder Coated Steel

HARDWARE:

Stainless Steel