



Backless Silhouette Bench BC2310

Rev #1
11/20/23

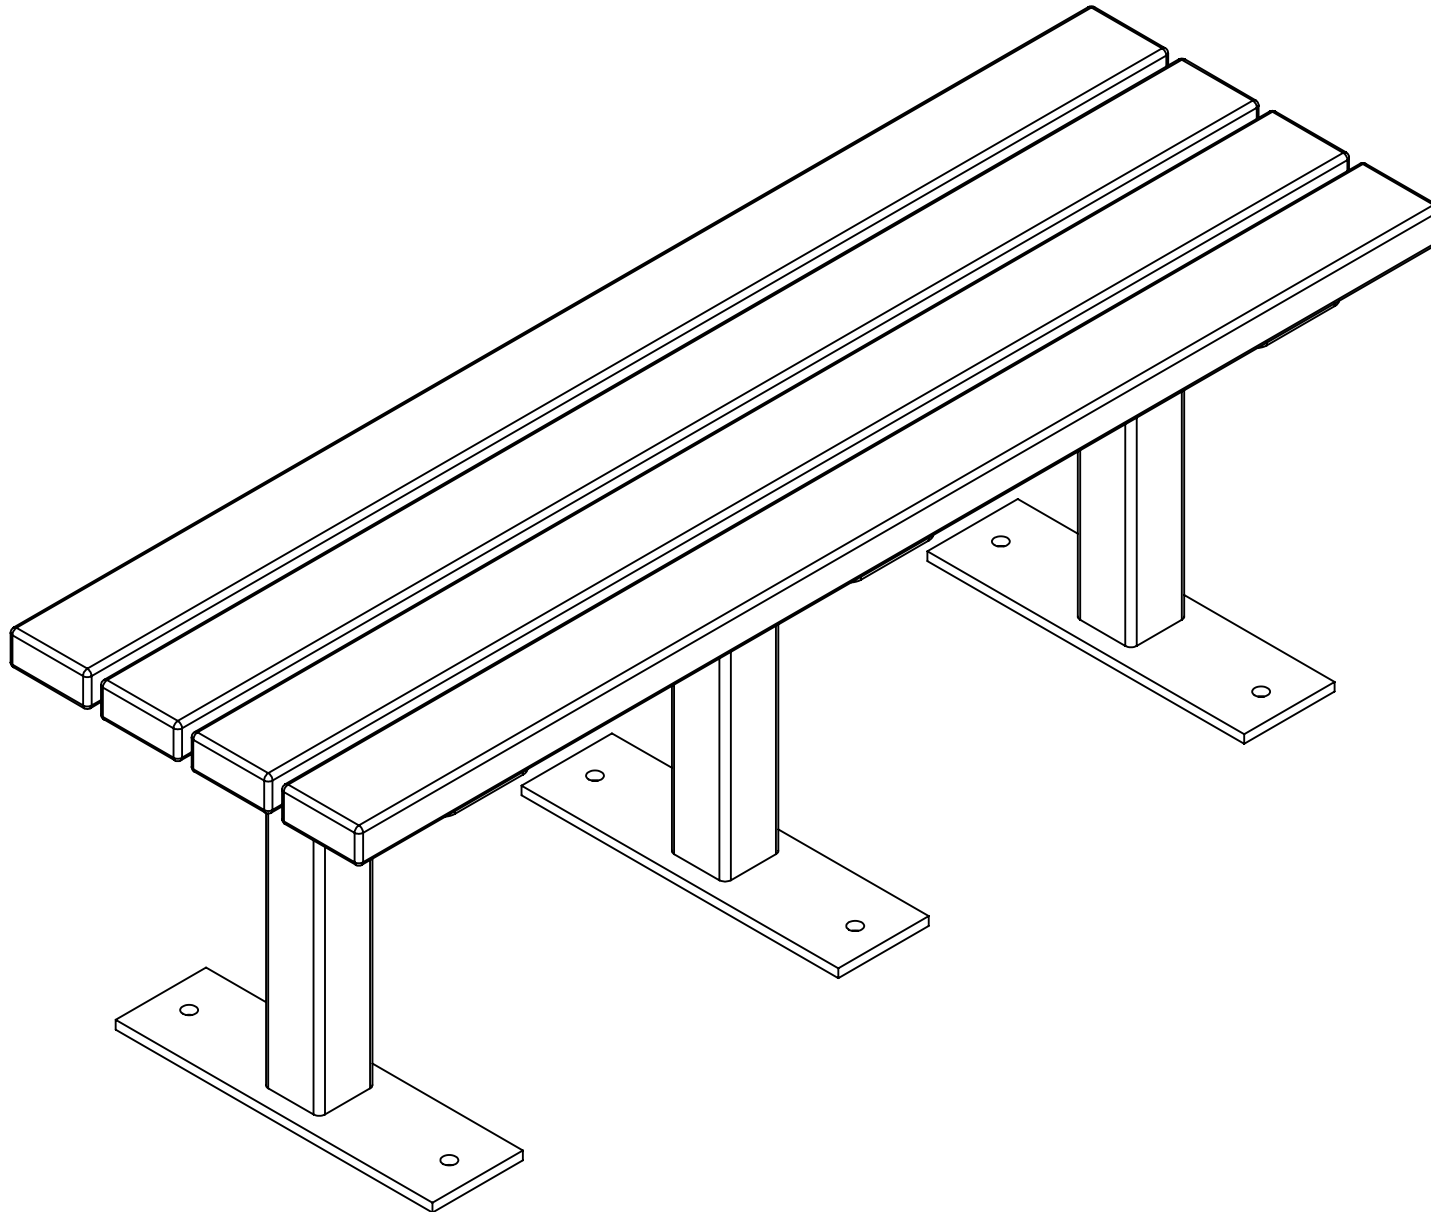


Backless Silhouette Bench BC2310

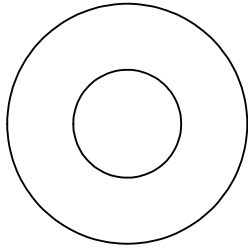


12

1/4" Flat Washer

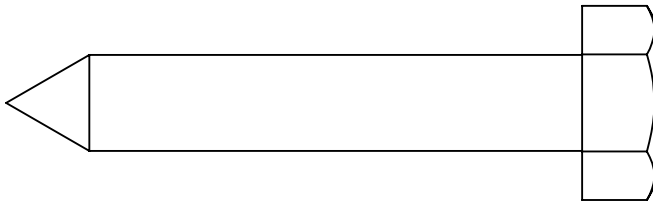


12

1/4" x 1.5" Lag Screw

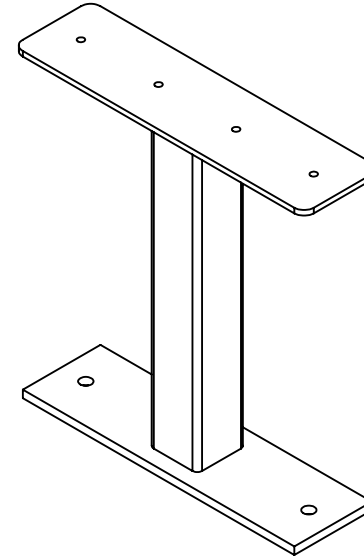

3

Surface Mount Bench End

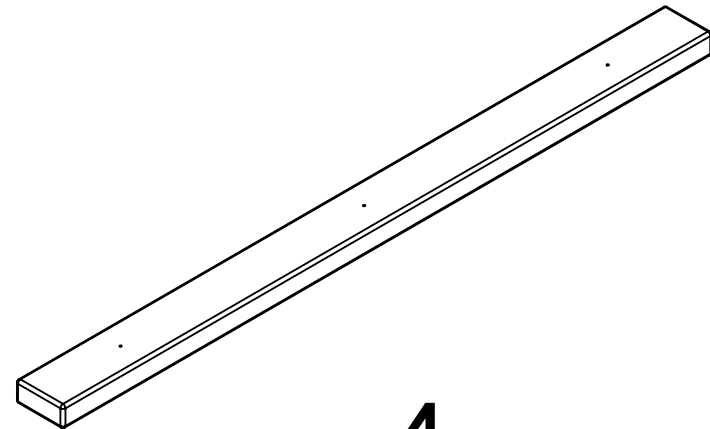

4

Seat Slat

REQUIRED TOOLS:


- (1) SCREW GUN
- (1) 7/16" SOCKET

INCLUDED HARDWARE &
TOOLS REQUIRED FOR
ASSEMBLY

2/4

Backless Silhouette Bench BC2310

1

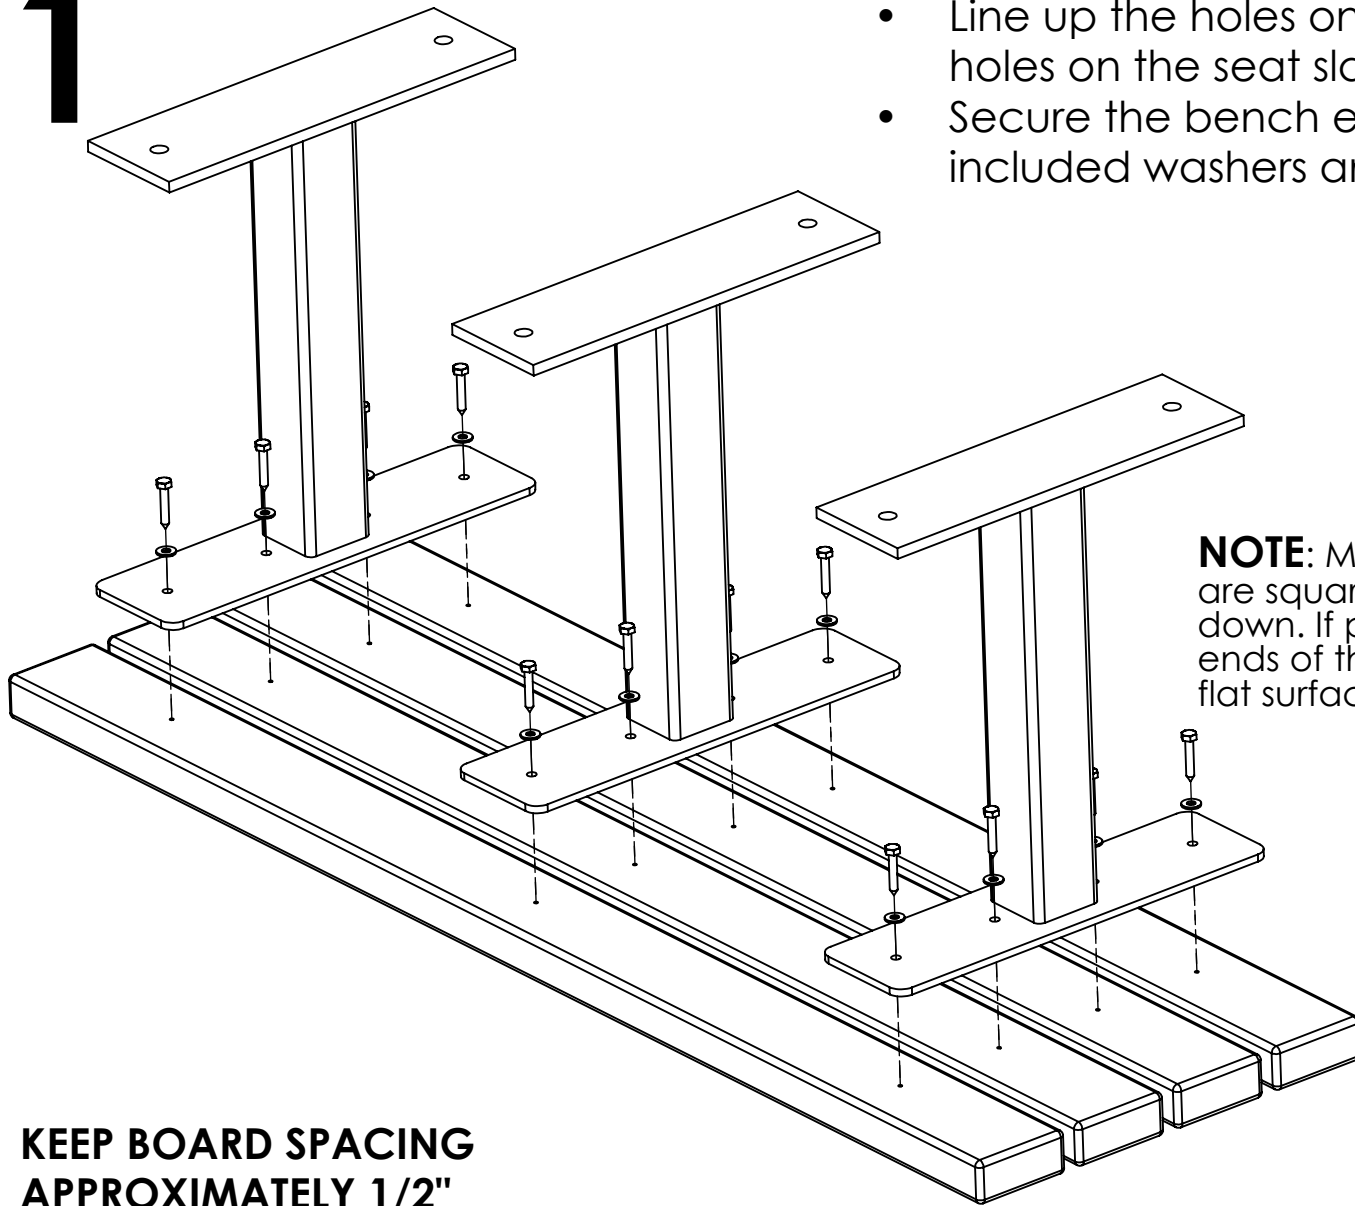


**KEEP BOARD SPACING
APPROXIMATELY 1/2"**

Assembly:




- Place the seat slats with the pilot holes facing up off the ground.
- Line up the holes on the bench end with the pilot holes on the seat slats
- Secure the bench ends to the seat with the included washers and lag screws.

NOTE: Make sure BOTH ends of the bench are square before fully tightening everything down. If possible, secure one of the short ends of the bench against a wall or other flat surface.

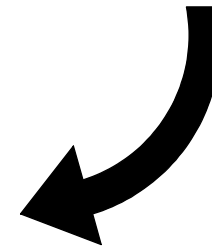

Backless Silhouette Bench BC2310 SPECS

Rev #1
11/20/23

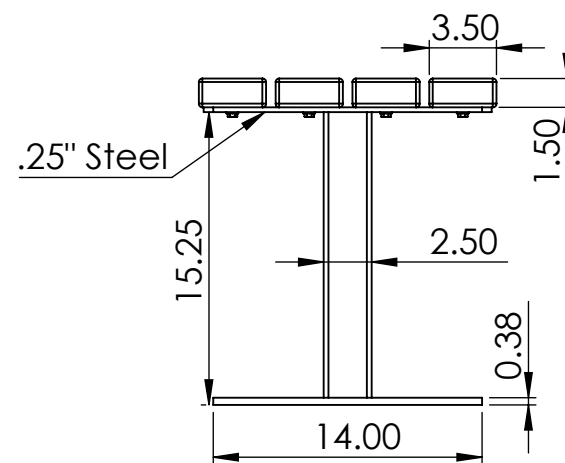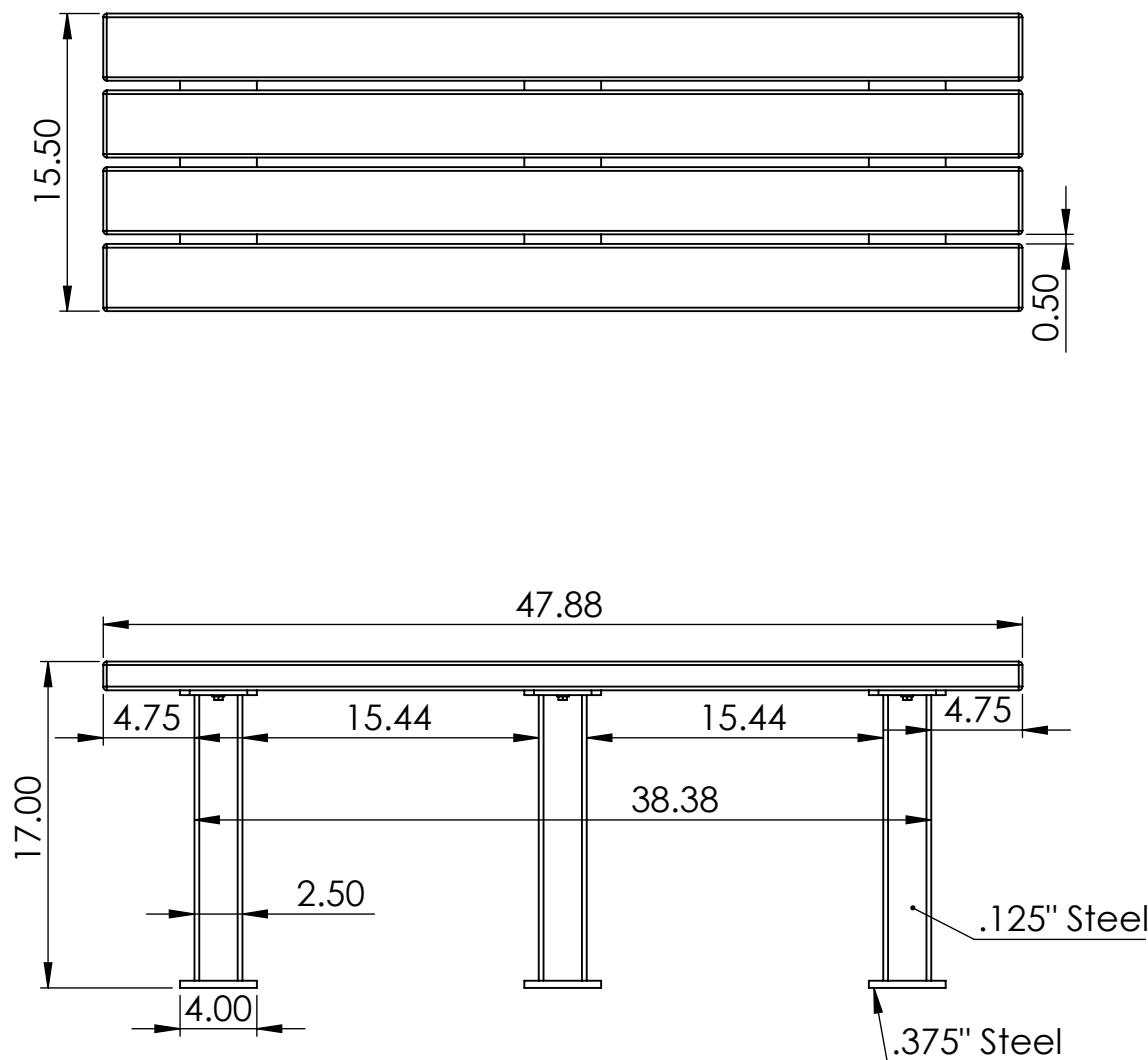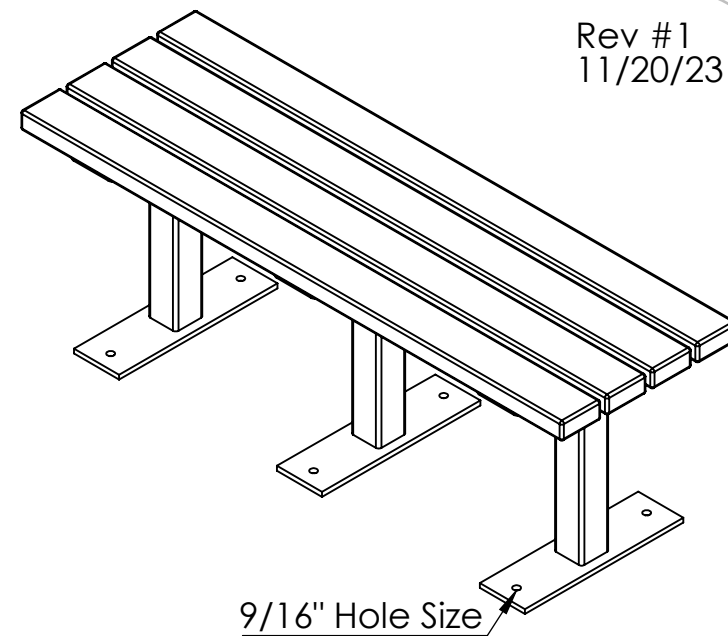

CONSTRUCTION MATERIALS:

Recycled Plastic, Powder Coated Steel

HARDWARE:

Stainless Steel