


INSTRUCTIONS BM1518


STEP 1 Seat Assembly


- Locatethe bench ends (A) and the seat frame (B)
- Insert (2) button head screws (F) with washers (H) thru the bench ends (A) and into the tab on the seat frame (B)
- Secure the bench end to the seat frame with washers and (H) and hex nuts (G)
- Repeat for the other bench end

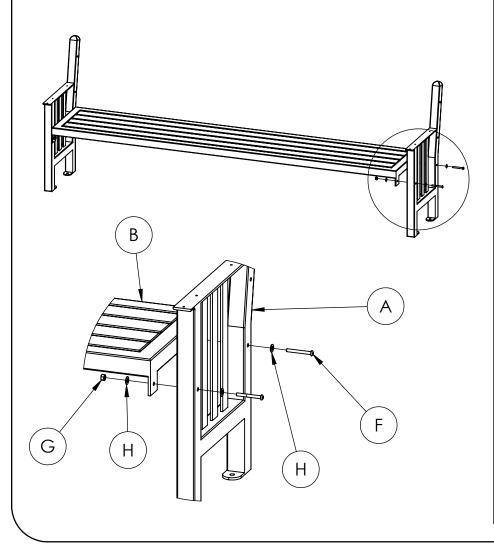

STEP 2 Backrest Assembly

- Hold the backrest assembly (C) in between the bench ends (A)
- The slats are flush to the front side of the assembly
- Align the holes in the bench ends (A) with the holes in backrest assembly (C)
- Insert (2) button head screws (F) with washers (H) through the holes and secure with washers (H) and hex nuts (G)
- Repeat for the other side

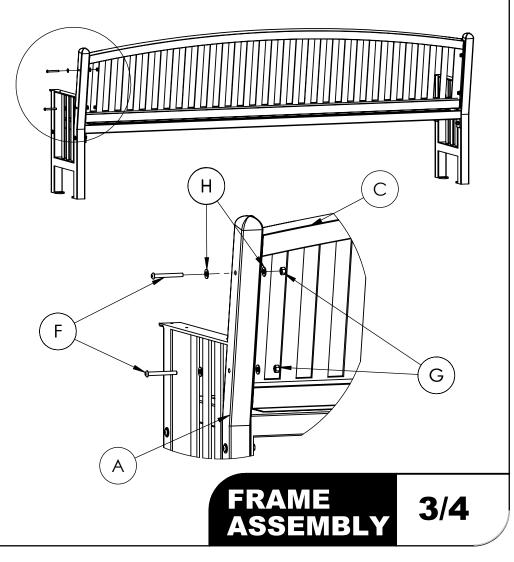

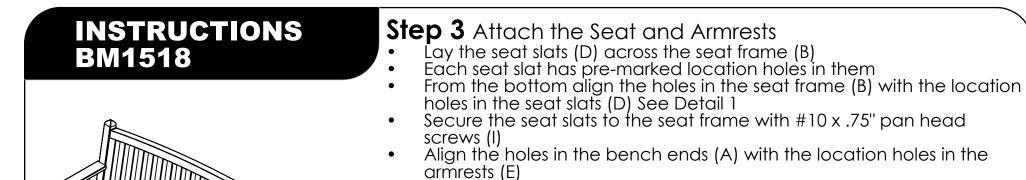

D

DETAIL

 Secure the armrests to the bench ends with #10 x .75" pan head screws (I) See Detail 2

DETAIL 2

